



Ref: FAQ0402

Version: 1.0

Title – Setting timezone using IDT

Made By: AB 28/04/17

(Issue 1)

How to set a logger's time to the timezone using IDT

In IDT software the below options are available in 'Setting's –

- Use IDT timezone – this will use whatever UTC time offset you configure in the IDT software – see later
- Use Logger Timezone – this will use whatever time has previously been set in the logger (this is the default setting – it maintains the time set in the logger even when your PC time changes for winter/summer changes)
- Use PC time – this will change with Summer/Winter time changes so should be used with caution.

File upload options:

☒ Upload files to server
☐ Send files to local folder

Server settings:

User:

Password:

Modem test options:

SMS number:

Display Units:

Pressure: Flow Conversion:

Live Value Rate:

Time Zone:

Mode:

OK Cancel



Ref: FAQ0402


Version: 1.0

Title – Setting timezone using IDT

Made By: AB 28/04/17

(Issue 1)

Then when you go to set up the logger there is a UTC drop down which enables you to set the time relative to the time zone you are in against UTC, and this will be uploaded to the logger.

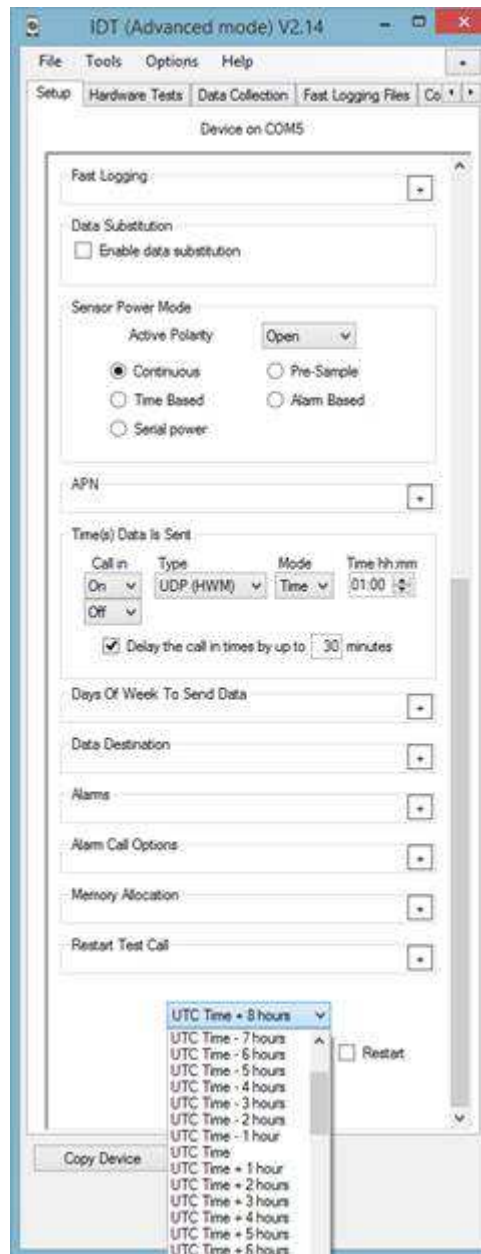

Document History:

| Edition | Date of Issue | Modification | Notes |
|---------|---------------|--------------|-------|
| 1st | 28/04/17 | Release | |
| | | | |