



Ref: FAQ0136

Version: 1.0

Title – ControlMate changing units

Made By: AB 15/09/15

(Issue 2)

## ControlMate – how to change pressure or flow units

To start the Controller you press 'Next' - if you immediately press 'Select' you will see this on the screen – (if you don't see this turn the unit off and start again – it takes some practice to see this)

12 bit ADC  
Averaged ADC

Press Next – you will see Modem  
Press Next again – you will now see -

Real Time flow  
ft<sup>3</sup>/s

Press Select – this will scroll through the available alternative units until you get to the one you want to use.

Press Next – you will now see –

Control Table Flow  
ft<sup>3</sup>/s

Press Select – this will scroll through the available alternative units until you get to the one you want to use.

Press Next – you will now see –

Pressure

Carry on this process and then press Next until you get to the End option – once you exit the new units will be stored.

### Document History:

Edition	Date of Issue	Modification	Notes
1st	02/05/12	Release	
2nd	15/09/15	Format update	



**Ref: FAQ0136**

**Version: 1.0**

**Title – ControlMate changing units**

**Made By: AB 15/09/15**

**(Issue 2)**