



Ref: FAQ0300

Version: 1.0


Title – Controllercom LX GPRS set up

Made By: AB 22/09/15


(Issue 2)

Controllercom LX - how to configure for use with Pressure Controllers

Open RM301 v3.25 (or greater), ensuring it is in Classic Mode. If it does not display in Classic mode press 'C' when cursor is in the grey background to obtain it:

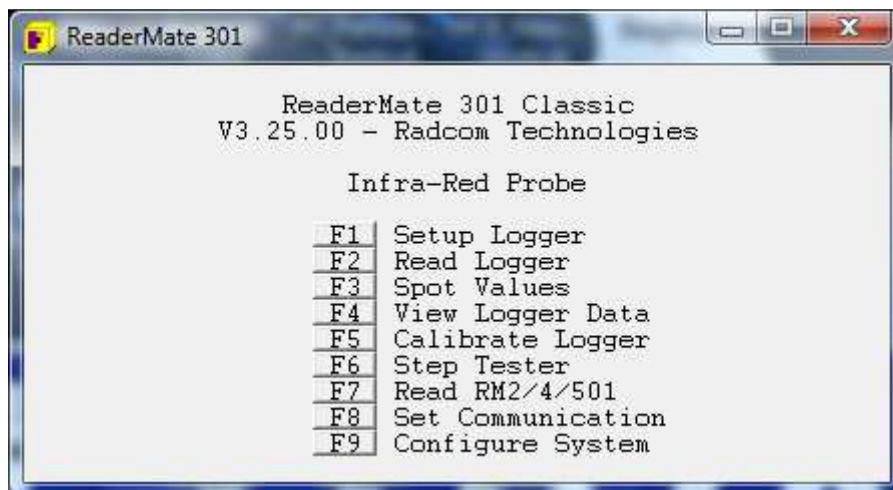

F8 to Set Communication

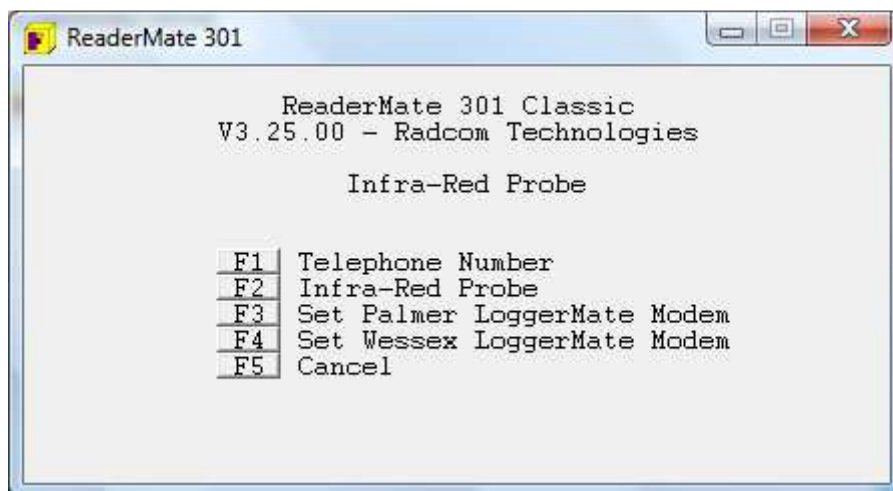

F4 to Set Wessex LoggerMate Modem

F7 to Set ControllerCom



Ref: FAQ0300

Version: 1.0

Title – Controllercom LX GPRS set up

Made By: AB 22/09/15

(Issue 2)



Press ESC


Press ESC

Connect Controller Com to Controller

Press F1 to set up the logger

Configure settings as normal on all logging channels (i.e. ID, logging rate etc)

Press F9 to set dial back

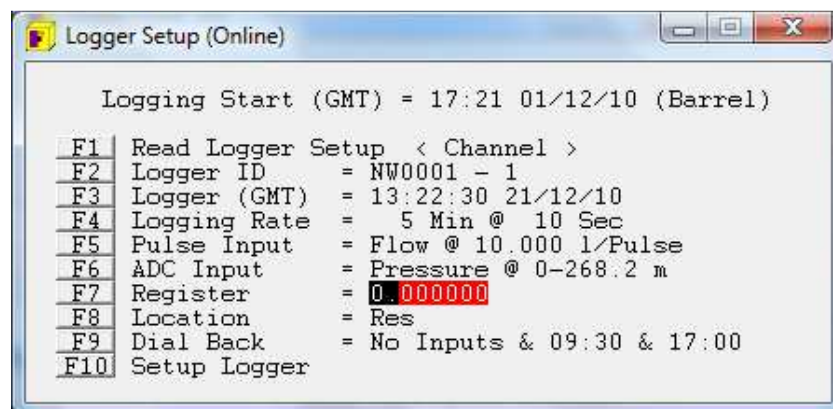

Press F3 to access Extra settings





Ref: FAQ0300

Version: 1.0

Title – Controllercom LX GPRS set up

Made By: AB 22/09/15

(Issue 2)

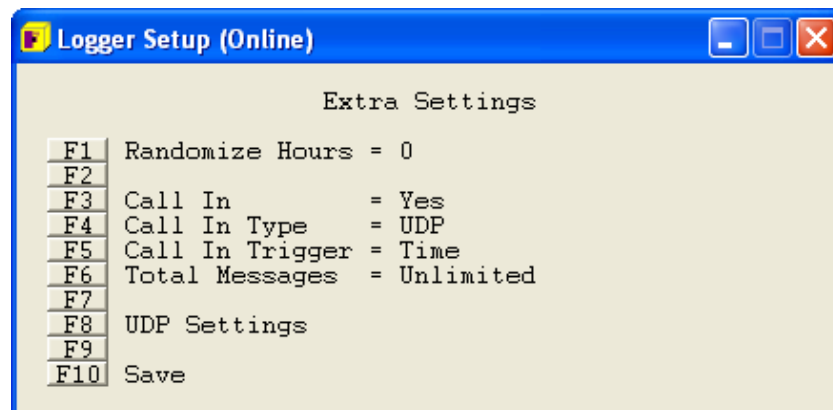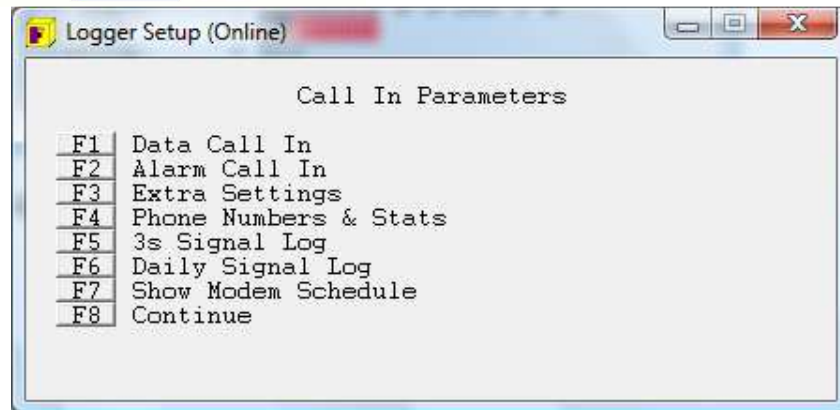

Press F3 Ensure Call in is set to **Yes**

Press F4 to set Call in Type as **UDP**

Press F5 to set Call in trigger to **Time**

Press F8 to set up UDP Settings

Press F4 to set up URL **inbound.hwmonline.com**

Press F5 to set up Port **23024**




Ref: FAQ0300

Version: 1.0

Title – Controllercom LX GPRS set up


Made By: AB 22/09/15

(Issue 2)

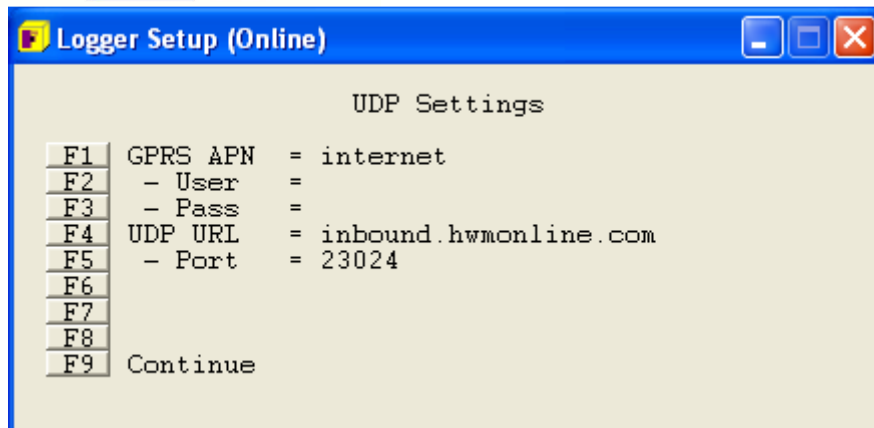


And press F9

Then Press F10 to save

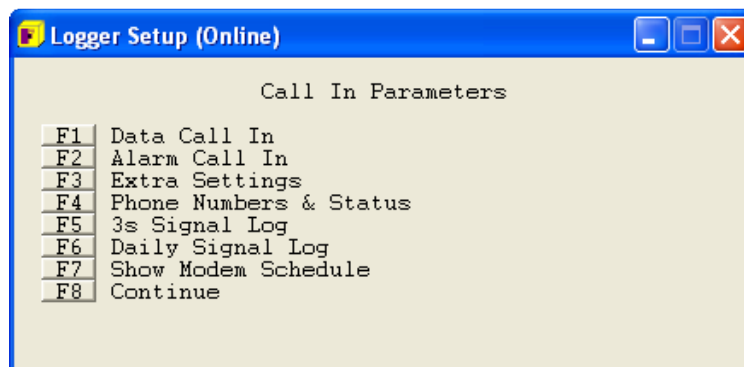

Press F1 to set Data Call In times

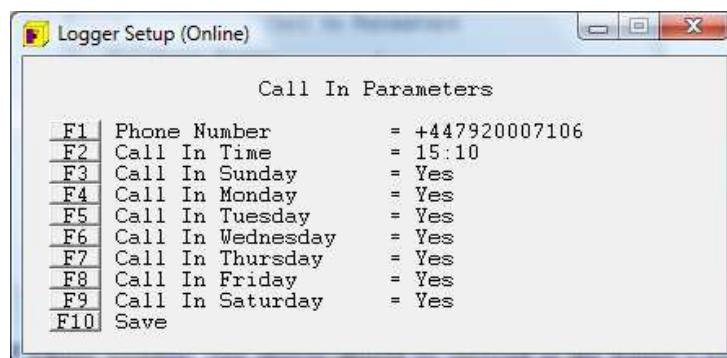

Select F1 - The 'Phone number' (see above) should be entered as the logger's SIM card number in international format.

Select F2 as the logger call in time

Select F3 – F9 and select as required



Ref: FAQ0300


Version: 1.0

Title – Controllercom LX GPRS set up

Made By: AB 22/09/15

(Issue 2)


Select F10 to save

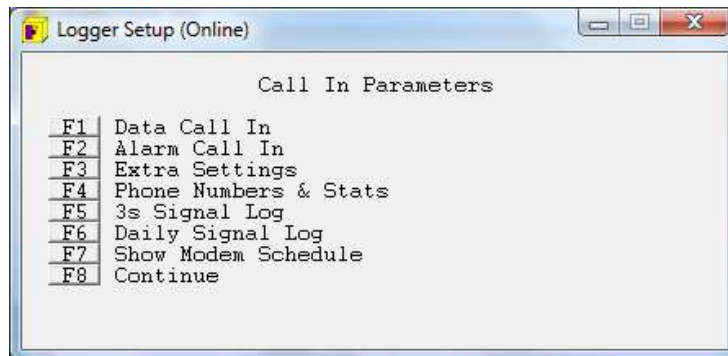


Select F8 to continue

Press F10 to setup logger

Always Press F1 – Yes, as this will ensure that all data send pointers are correctly set.

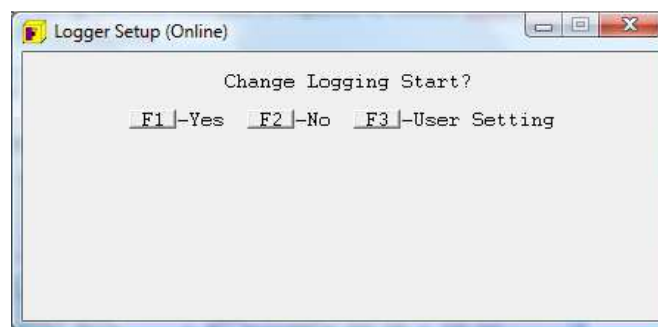

Press Yes to update ControllerCom (ensure Controllercom is connected to the Controller)

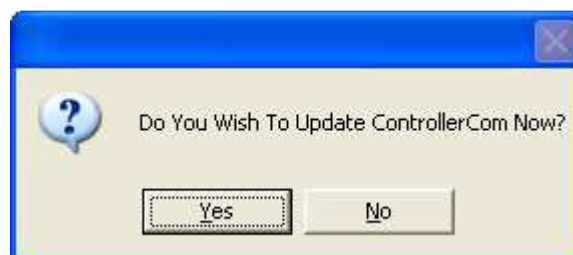

Check the controller screen flashes on at the point and wait for any message to disappear before commencing.

Document History:

Edition	Date of Issue	Modification	Notes
1st	10/06/13	Release	
2nd	22/09/15	Format update	