

Version: 1.0

Title – Autocall SMS to Datagate

(Issue 1)

How to configure Radwin Autocall to upload data to Datagate / HWM Online

In order to configure your Radwin software correctly please complete this procedure -Open the 'Radwin View' module of your Radwin software and go to 'Options', 'System Configuration', Select 'Advanced' from the drop down -

e Dewnload Options Graph Options Data Options Adjunced Configuration Start Window Hep	- 0
Powerload Options Graph Options Data Options Add Peed Configuration Window Help Image:	Configuration / Back Configuration Configuration Configuration / Back Configuration

Then select 'Radwin All' and navigate to the 'Autocall Ports' tab and locate your SMS modem port (in this case COM4)

	System Configur	ation : Radwin All	×
Configure: Advanced Radwin All Manual Call View Autocall			d, but no SMS Modern is
Data Generator	COM1	Connection Type: Modem	Default Baud: ^
Export	COM2	Modem	300
Alarm Programm	COM3	Modem	300
Remote Autocal	COM4: USB Serial Port (COM4)	SMS Modem	9600
Remote Alarm R	COM5	Modem	300
	СОМ6	Modem	300
	а сом7	Modem	300
	СОМ8	Modem	9600
	😹 сомя	Modem	300
	🚕 СОМ10	Modem	300
	аб COM11	Modem	300
	ГП COM12	DataGata	~
			Edit Selected Item
	Help - Find Available Ports		OK Cancel



Double click on your selected COM port (COM 4) to open it and from the 'Connection Type' dropdown select 'SMS to DataGate', and enter the relevant details and the HTTP configuration for HWM Datagate or your local version then select 'OK'

Configure Port ×				
	to use this port with Autocall. A Connection Type must be specified which is port is used to talk to loggers. The default baud rate is only important if this	Ŷ		
Port Configuration				
Enable Port:	Connection Type: Default Baud:			
🔽 СОМ4 🛛 🔤	SMS To DataGate			
SMS Modem Telephone N	lumber.			
+447702504966	Select			
SMS Message Centre Nur Use SIM Card Defaul HTTP Configuration				
HTTP Address:	http://datagate.mobifi.com/datagate			
FTP Configuration				
FTP Address:	Passive Connection Mod	e		
Username:	Password:			
SMS Folder:	Port 21			
	OK Cancel			

This will have returned you to the 'Autocall Ports' tab

	System Configu	ration : Radwin All	×
Configure: Advanced Badwin All Annual Call View	al Call System Selections Startup Transducers/Sensors/Units Statistics Manual Call Autocall Ports Au		
- 😽 Autocall	Enable Port:	Connection Type:	Default Baud: 📃 🔺
	🗟 СОМ1	Modem	300
Export	аб COM2	Modem	300
Alarm Receiver	аб сомз — — — — — — — — — — — — — — — — — — —	Modem	300
	SCOM4: USB Serial Port (COM4)	SMS To DataGate	9600
Remote Alarm R	аб COM5	Modem	300
	🚓 соме	Modem	300
	💑 COM7	Modem	300
	and COM8	Modem	9600
	🚕 СОМ9	Modem	300
	🚕 СОМ10	Modem	300
	a COM11	Modem	300
	E COM12	DataGata	•
			Edit Selected Item
	Help - Find Available Ports		OK Cancel

Close down Radcom software to save all the settings and then run Autocall.

Document History:

Edition	Date of Issue	Modification	Notes
1st	15/06/15	Release	