



Ref: FAQ0044

Version: 1.0

Title – HWMCAR Auto export setting

Made By: AB 18/06/14

(Issue 1)

Question – How can you configure HWMCAR to export data automatically every 24 hours?

1. Ensure export format and export directory are specified
2. Remove tick from 'immediate' box
3. Insert the next export time you want in HH:MM
4. Insert the interval between exports (24:00 for every 24 hours 12:00 for every 12 hours)
5. Select 'OK'

Note – if you 'hover' your mouse over each box it will give you help

Document History:

Edition	Date of Issue	Modification	Notes
First	18/06/14	Release	