



Ref: FAQ0091

Version: 1.0

Title – 4-20mA setting using HWMO

Made By: AB 21/05/15

(Issue 1)

How to set up 4-20mA channels using HWM Online

We have recently updated HWM Online so you can now make these changes yourself to 4-20mA channels – if you select the logger and go to Edit Site you can add the 20mA value in the Cal Value box, the 4mA value in the Offset box and tick the 4-20mA box against the channel – this sets it correctly in Datagate / HWM Online – see the example below – you should also be able to see the change instantaneously in the graph.

The screenshot shows the HWM Online Customer Login page. The browser address bar displays 'https://www.hwmonline.com'. Below the login fields, there is a 'Submit' button. The 'Channel Configuration' section contains a table with the following data:

#	Type	Name	Last Reading	Cal Value	Offset	4-20	Meter
1	Depth (m)	Depth (4-20)	5.134	6.2	0	<input checked="" type="checkbox"/>	-
2	Depth (m)	Depth (4-20)	5.177	1.8	0	<input checked="" type="checkbox"/>	-

Below the table, there is another 'Submit' button and a section for 'Alarm Levels'.

Document History:

Edition	Date of Issue	Modification	Notes
1st	21/05/15	Release	