

Ref: FAQ0092

Made By: AB 26/05/15

Version: 1.0

Title – HWMO setting MNF alarms

(Issue 1)

How to set minimum night flow duration for alarms using HWM Online

Minimum night flow duration always starts at midnight but the end time is configurable by using the persistence setting – for example –

Persistence setting of 6/6 sets an MNF duration of Midnight to 6am Persistence setting of 8/8 sets an MNF duration of Midnight to 8am

This can be set remotely for UDP Datagate loggers by using the Edit logger function on $\ensuremath{\mathsf{HWMOnline}}\xspace -$



Logger Channels

# Туре	Name	Last Reading	Cal Value	Offset	Meter
1 Flow (I/s)		0.000000	0.000000	0.000000	<u>- m³</u>

Submit

Alarm Conditions

# Channel	Туре	Lower Upper	Persistence
1 CH1 Flow 🗸	Minimum Night Flow V	0.1	8 🗸 / 8 🗸
2 CH1 Flow 🗸	None 🗸		1 • / 1 •
3 CH1 Flow 🗸	None v		1 • / 1 •
4 CH1 Flow ✓	None v		1 × / 1 ×

Dual Call In Alarms Alarm Clear Messages Repeat alarms at midnight

In the example above a flow of more than 0.1 litres per second registered for the whole period between midnight and 8am will generate an alarm.

If the flow rate during the period between midnight and 8.00am drops below the MNF level then an alarm would not be generated

Document History:

Edition	Date of Issue	Modification	Notes
1st	26/05/15	Release	

This document is the property of HWM-Water Ltd. and must not be copied or disclosed to a third party without the permission of the company. Copyright reserved. Halma Water Management, Ty Coch House, Llantarnam Park Way, Cwmbran, Gwent. NP44 3AW. www.hwm-water.com; Tel: +44 (0) 1633 489479; Fax: +44 (0) 1633 877857