




Ref: FAQ0346	Version: 1.0
Title – IDT convert logger GPRS to SMS	
Made By: AB 19/11/15	(Issue 1)

Using the IDT software to reconfigure your logger from GPRS to SMS

Connect your logger to the PC
Open IDT software and 'Read' the logger

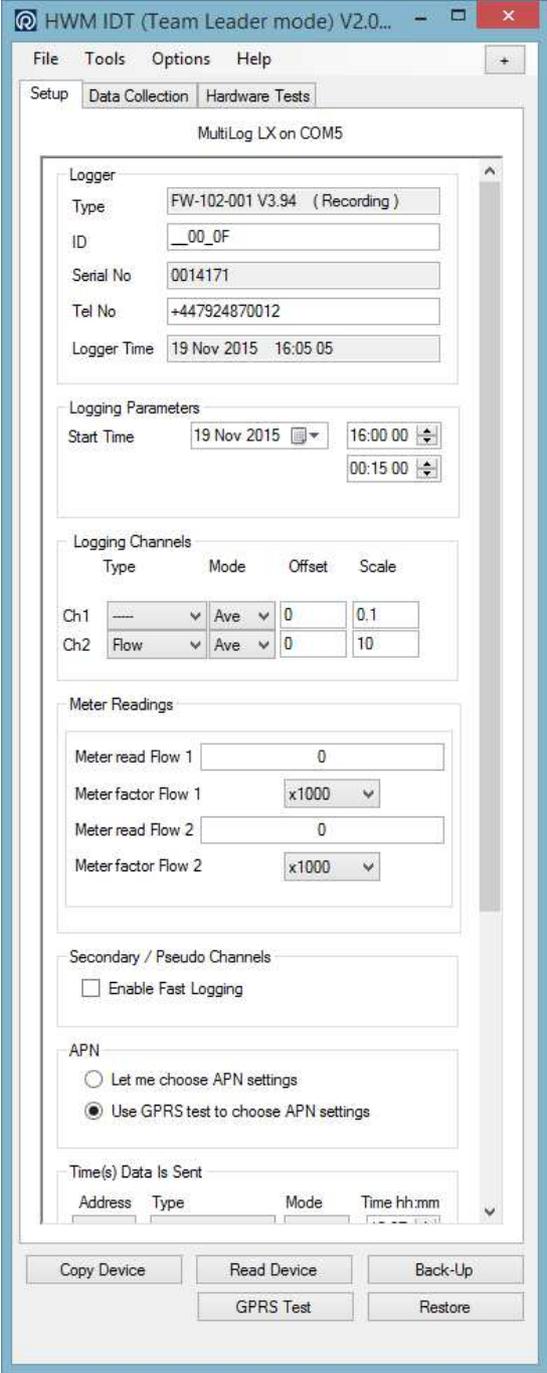

Scroll down to the APN section :-



Ref: FAQ0346	Version: 1.0
Title – IDT convert logger GPRS to SMS	
Made By: AB 19/11/15	(Issue 1)

As below the logger is currently configured for UDP GPRS -

APN

Let me choose APN settings
 Use GPRS test to choose APN settings

Time(s) Data Is Sent

Address	Type	Mode	Time hh:mm
On	UDP (HWM)	Time	10:27
Off			

Data Destination

Address: inbound.hwmonline.com
Port: 23024
SMS No.:

From the 'type' dropdown select 'SMS' and enter the SMS number for the modem you want the logger to call its data to –

APN

Let me choose APN settings
 Use GPRS test to choose APN settings

Time(s) Data Is Sent

Address	Type	Mode	Time hh:mm
On	SMS	Time	10:27
Off			


Data Destination

Address: inbound.hwmonline.com
Port: 23024
SMS No.: +44770250496
 Call Restriction Disable

At the bottom of the IDT screen select 'Set up Device'




Ref: FAQ0346	Version: 1.0
Title – IDT convert logger GPRS to SMS	
Made By: AB 19/11/15	(Issue 1)

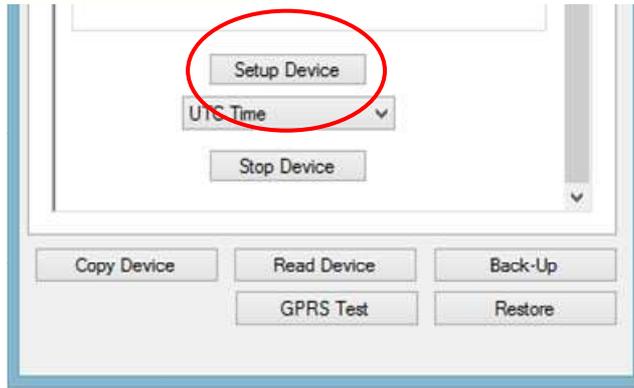

The new configuration will now be uploaded to the logger.

If you then select Read Device again you will see that the logger is now configured for SMS operation. To revert to GPRS reverse the above process.

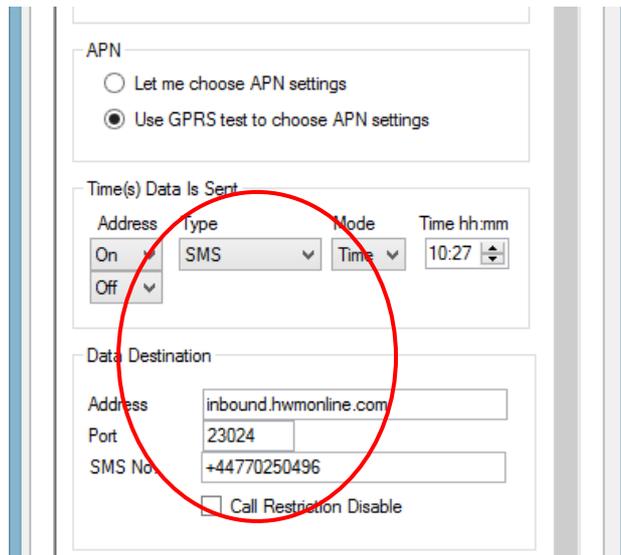

Document History:

Edition	Date of Issue	Modification	Notes
1st	19/11/15	Release	