



Ref: FAQ0218

Version: 1.0

Title – LoLog – recalibrate transducer


Made By: AB 18/09/15

(Issue 2)

## LoLog Pressure logger – how to recalibrate the Pressure transducer in conjunction with a dead weight tester

First select Download Options and Advanced Download/Upload/Utilities

 Then Select the Utilities Tab

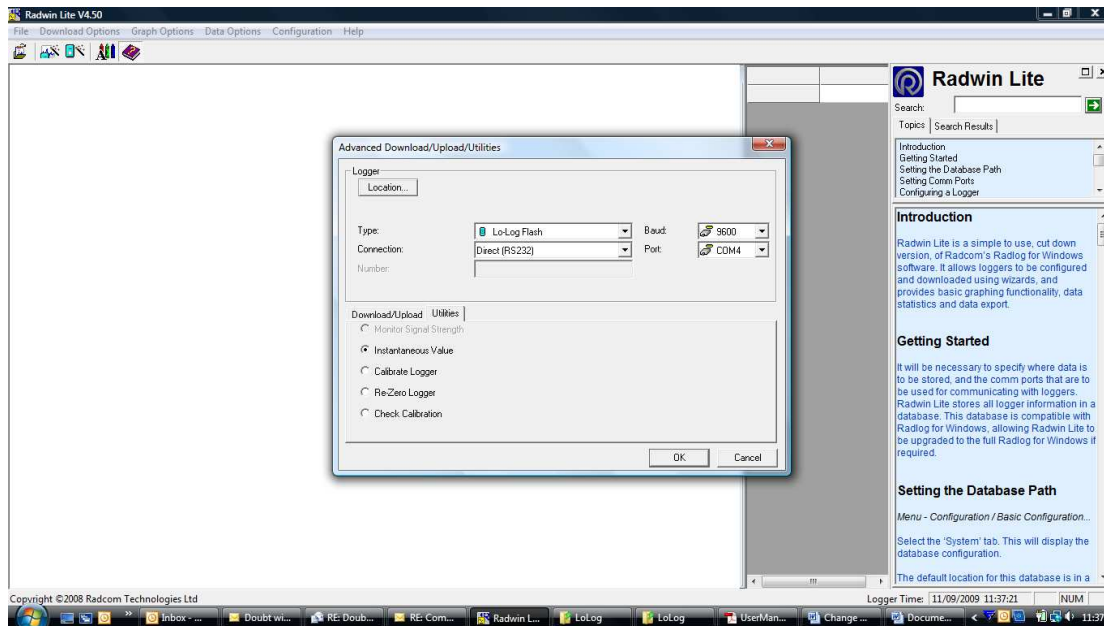


Select Calibrate logger

Ensure the Dead Weight Tester pressure is on Zero pressure on the transducer

Press 'OK'

At the warning message 'This operation will stop the logger.....' – select 'Yes'

 The logger will download the reading at Zero pressure – once stabilised press 'Accept this Low value'.

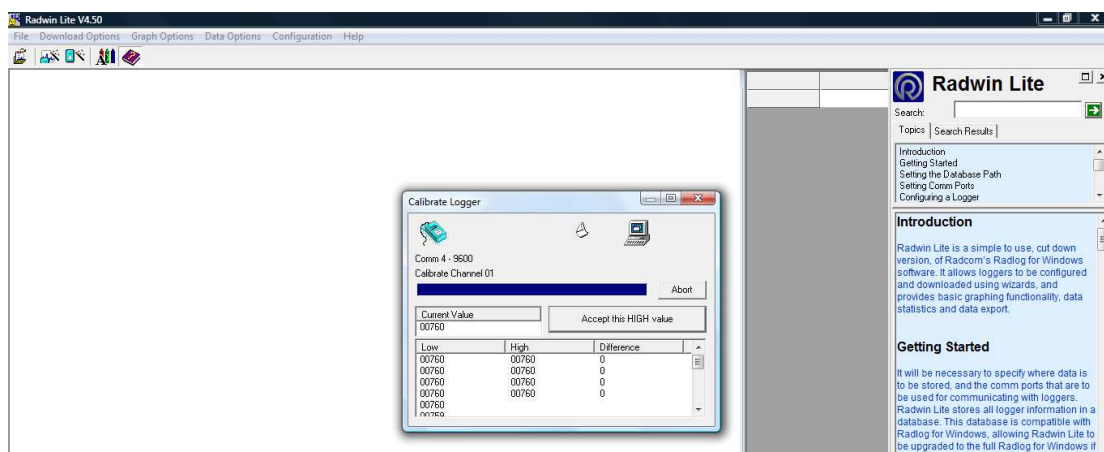



Ref: FAQ0218


Version: 1.0

Title – LoLog – recalibrate transducer


Made By: AB 18/09/15

(Issue 2)

 The using the Dead Weight tester load it to 10 Bar – it must be 10 bar as this is the automatic calibration point used by Radwin.

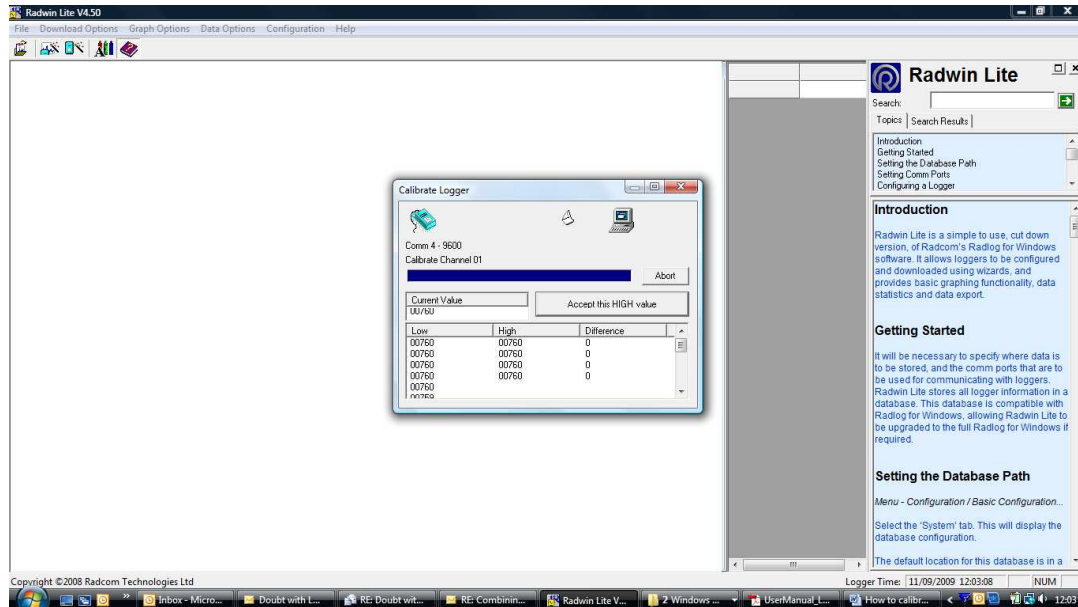

 When the reading has stabilised press 'Accept' this high value.

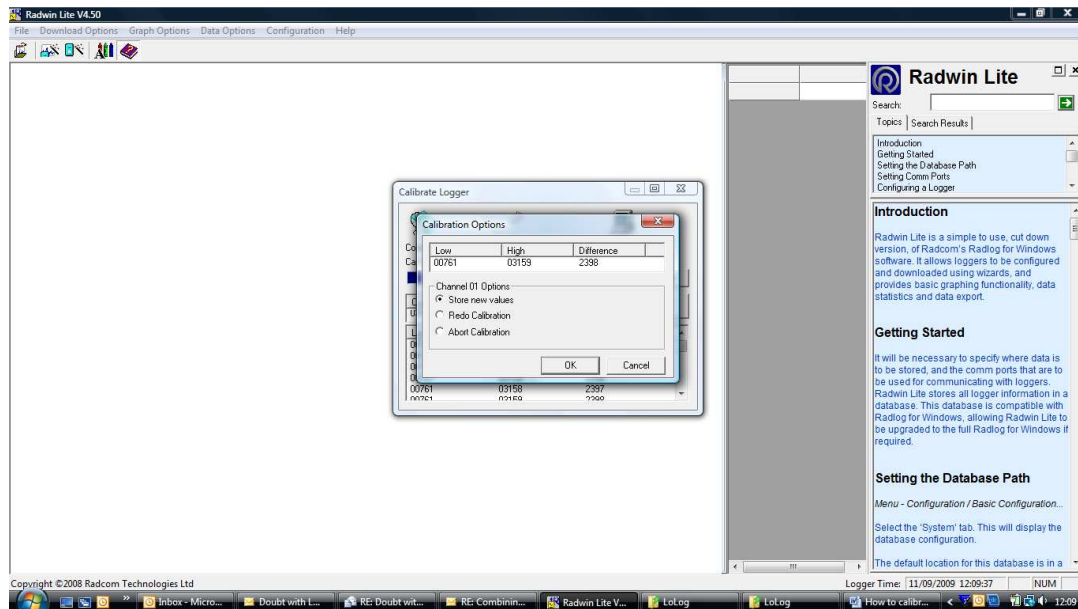

If the calibration has been successful select Store new values – press OK

### Document History:

Edition	Date of Issue	Modification	Notes
1st	04/01/13	Release	
2nd	17/09/15	Format update	