



Ref: FAQ0316

Version: 1.0

Title –LoLog – how to re-zero pressure

Made By: AB 22/09/15


(Issue 2)

## LoLog – how to re-zero the pressure Transducer

For logger re-zero –

This is to adjust the zero point which is useful if you at high altitude where the atmospheric pressure (at zero) is considerably different to that at sea level.

In Radwin, go to Download Options, Advanced Download/Upload/Utilities, select the correct logger from the drop down list, then select the Utilities Tab and the Re-Zero the logger box as shown:

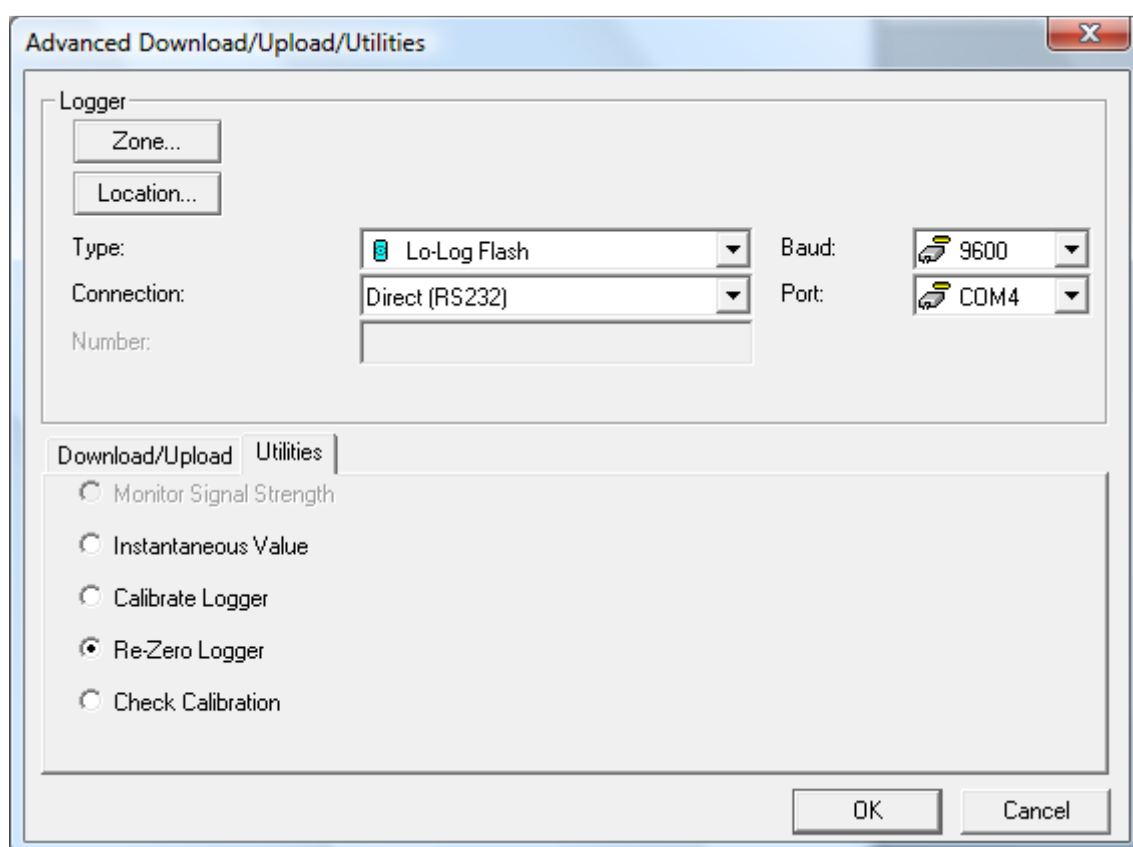

Select 'OK'

It will download the logger header ( it may ask you if you want to stop the logger – select 'Yes')  
It will then provide a rolling reading of the current zero value.

Allow it to stabilise and select the average reading as it appears -




Ref: FAQ0316

Version: 1.0


Title –LoLog – how to re-zero pressure

Made By: AB 22/09/15

(Issue 2)

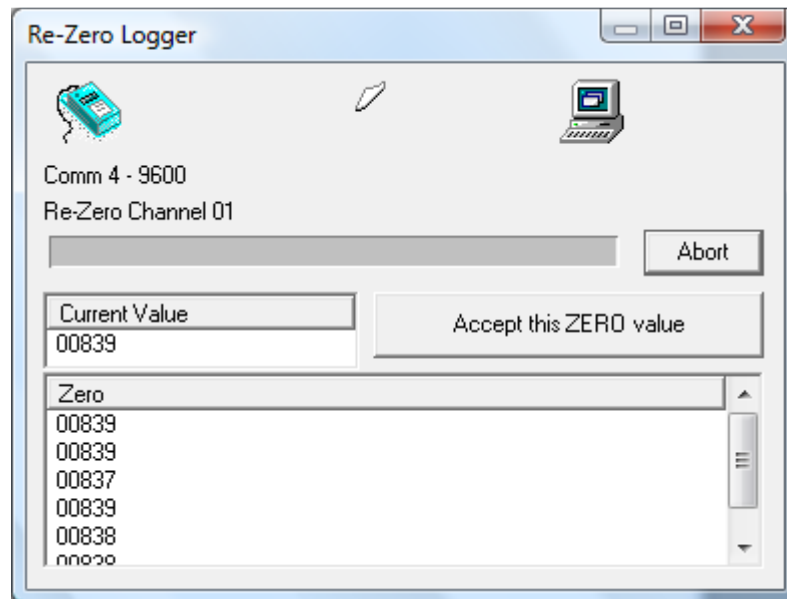

Select - Accept this zero value.

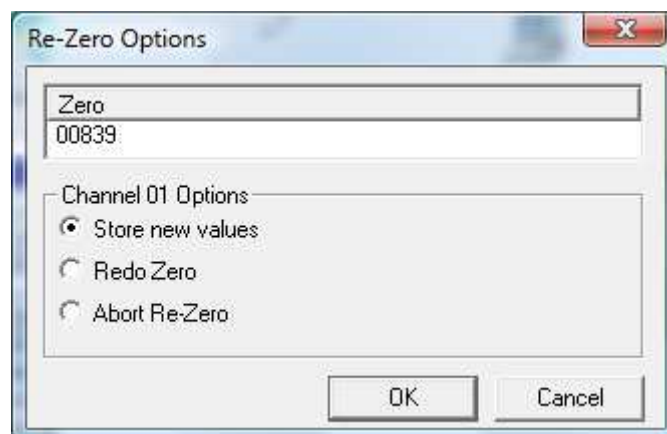

And store this zero value

You might now need to restart the logger but otherwise the re-zero is complete.

#### **Document History:**

Edition	Date of Issue	Modification	Notes
1st	02/08/13	Release	
2nd	22/09/15	Format update	