

Ref: FAQ0217

Version: 1.0

Title – LoLog Vista screen config for mB

Made By: AB 18/09/15 (Is

(Issue 2)

# LoLog Vista – how to configure the display to change readings units from metres head in millibar

In Radwin or Radwin Lite go to Download options, Advanced Download/Upload/Utilities



Select LoLog Flash and Direct RS232, Check/select Download Parameter settings for last recording, press OK

😽 Radwin Lite V4.48	
Tel Devrided Options Graph Options Data Options Configuration Help	
🖉 🕂 🕅 🏘	
	🔞 Radwin Lite
	Search:
	Topics Search Results
	Introduction Getting Started Setting Started Setting Comm Ports Configuring a Logger Y
	Introduction
Advanced Download/Upload/UtilIties	Radwin Lite is a simple to use, cut down version, of Radcom's Radlog for Viindows software. It allows loggers to be configured and downloaded using wizards, and provides bacie graphing functionality, data statistics and data export.
Type:         Ø LoLog Plath         ▼         Baud:         Ø <sup>2</sup> / <sub>2</sub> \$500         ▼           Connection:         Direct (R522)         ▼         Port:         Ø <sup>2</sup> / <sub>2</sub> CDM1         ▼	Getting Started
Number  Druwskoet/Alpkoet   Uitaes    C Enter New Parameters  C Download Parameter Setting: For Last Recording  C Download Parameter Setting: And All Recorded Data	It will be necessary to specify where data is to be stored, and the corm points that are to be used for communicating with loggers. Radwin Like effores all logger information in a databace. This database is compatible with Radiog for Windows, allowing Radwin Like to be upgraded to the full Radiog for Windows if required.
C: Download Lata Number Of Houry Data:	Setting the Database Path
C Download Logger Memory From Address: 0 0f Length: 0	Menu - Configuration / Basic Configuration
OK Cancel	Select the 'System' tab. This will display the database configuration.
	The default location for this database is in a tolder name? Otab block the follow there Radwin, Life was installed e.g. "c.Hadwin Life/Data" your may wish to change the default folder, especially fusing a shared a database on a sherowit, so multiple users may be to an estimate the sherowith and the database. This may be a new database or database. This may be a new database est to an estimate Radwin Life (or Radog for Windows) database. The method of selecting loggers from the database may also be specified here. The opports are Single learthy, where each logger to database database the ask solgers dottings in the Zoroments, a zone and a location. This method requires a const on database.
	Logger Time: 11/09/2009 09:57:00 NLM
👭 Start 🛛 🖸 3 Microsoft 🔄 2000 - SENA 🔄 4 Microsoft 🧱 Rodwin Like V 🔁 88-2200-07d 🔁 87-2200-06D 🔛 Document I EN	🌠 🧿 😻 😳 🖾 👼 🔜 🍕 🖉 😓 09:57



Ref: FAQ0217

Version: 1.0

## Title – LoLog Vista screen config for mB

Made By: AB 18/09/15

(Issue 2)

#### Logger downloads.....



Open Display Configuration tab -

.ogger Display Data Calibr	ration		
Channel:	Channel 01	-	
Туре:	Analogue	•	
Units Per Pulse:	0.1	Offset:	0.0
Meter Reading:	0		
Display:	Off	•	
- Min/Max			
Mode:		Min - Last Full Time Wind	ow 👻
Window Start Time:		00:00:00	
Window End Time:		00:00:00 💌	

Edit Units per pulse from 0.1 to 9.804 (conversion from metres head to millibar)



Ref: FAQ0217

Version: 1.0

# Title – LoLog Vista screen config for mB

Made By: AB 18/09/15

(Issue 2)

Logger Display Data Calibr	isplay Configuration Stat	us	
Channel:	Channel 01 💌		
Туре:	Analogue		
Units Per Pulse:	.09802	Offset:	0.0
Meter Reading:	0		
Display:	Value	•	
-Min/Max			
Mode:	Min - Last	Full Time Window	~
Window Start Time:	00:00:00	-	
Window End Time:	00:00:00	-	

## Then press Upload -

Upload Parameters       upgorg         Update Logger Time as:       ist Time = 26 Morg         Update Logger Time as:       ist Time = 26 Morg         OK       oncel	Image Vista display units/docent/records World         Image Vista display units/docent/records         Image Vista display units/docent/records<	onfiguration Help	
Image: Contract of the contract	10-1 10-1	Logger	Topic:     Search Results       Introduction     Enting Stand       Seting the Database Path     Image: Composition of the Database Path       Seting Com Pote     Image: Composition of the Database Path       Configuring a Logger     Image: Composition of the Co
a @      build a constraint of the constrai		OK Cancel	to be stored, and the comm ports that are to be used for communicating with loggers. Radwin Life stores all logger information in a database. This database is compatible with be upgraded to the full Radiog for Windows II required. Setting the Database Path

Check all the boxes and press OK

Logger will now display pressure in Millibar

### **Document History:**

Edition	Date of Issue	Modification	Notes
1st	04/01/13	Release	
2nd	17/09/15	Format update	