

Ref: FAQ0221

Version: 1.0

Title-LoLog- Vista how to set the screen

Made By: AB 18/09/15 (Issue 2)

LoLog Vista – how to configure the Vista display screen

Connect the LoLog to your PC using the IR Reader Using Radwin or Radwin Lite software on the PC –

- 1. Select > Download Options > Advanced Download/Upload Utilites
- 2. Select LoLog Flash logger and check Com port is correct. Check the 'Download Parameter settings for last recording' box and then select 'OK' as per this screen shot:-

; 🔤 🕅 👫 🧶		Radwin Lite
		Search:
	Advanced Download/Upload/Utilities	Introduction Getting Stated Setting the Database Path Setting Comm Ports Configuring a Logger
	Type: Connection: Direct (FS222) Pot Download/Upload Utilities	Introduction Radvin Like is a simple to use, cut down warsion, of Radcom's Radvog for Windows software. It allows loggers to be configured and downloaded using weards, and provides basic graphing functionality, data statistics and cata export.
	C Erde New Searcher's etimors for Last Recording C Download Parameter Settings For Last Recording C Download Parameter Settings And All Recorded Data C Download Logger Memory From Address: 0 01 Length: 0 Lancel 0 C Cancel 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Getting Started Itwill be necessary to specify where data is to be stored, and the comm pack that are to be used for communicating with logars. Radwin Lite stores all logar information in a database. This database is compatible with Radiog for Windows, allowing Radwin Lite to be upgraded to the full Radiog for Windows if required.
		Setting the Database Path Menu - Configuration / Basic Configuration Select the "System" tab. This will display the database configuration

- 3. Radwin will now Download the Loggers Header.
- 4.
- 5. You should now see the screen shot below:-

Lo-Log Flash - v1.06			×			
Lo-Log Flash - v1.06 Display Configur Display Configur Status	Identity:	00_00				
	_ Time					
	Logger Time:	13:20:55 26/02/2010 Error: 6 Minutes				
	Comments:					
	Name:	LoLog Flash2				
	Site Info:	Radcom Technologies Ltd 10 Romsey Ind Park Romsey SOSI 0HR	*			
		01794 528700 L	-			
	Load	Save Upload	Cancel			

\approx		Ref: FAQ0221	Version: 1.0
Palmer environmental	RADIO-TECH	Title-LoLog- Vista how to	o set the screen
	Fluid Conservation Systems	Made By: AB 18/09/15	(Issue 2)

6. If you now select 'Display Configuration' you should see this:-

] Identity] Main Recording	Channel:	Channel 01	•		
Display Configur	Type:	Analogue	•		
tatus	Units Per Pulse:	0.1		Offset:	0.0
	Meter Reading:	3			
	Display:	Off		•	
	Min/Max				
	Mode:		Min - Last	Full Time Windov	w 💌
	Window Start Time:		00:00:00	Ŧ	
	Window End Time:		00:00:00	*	

Note the Display box says - 'Off'

The drop down box will give you options for how you want to see this Channel's output displayed on the Screen..

In the same Screen you can select Channel 2 from the drop down and configure that as well. If you only want to configure the Vista Screen you can now select 'upload' which will lead to the Screen below – check the boxes 'Main Recording and Restart' and 'General parameters' and 'OK'

Notice you can also select Stop Recording here if you want to stop the logger and 'park it' for a while until the next test.

Uplod Prameters	Seach Seach Indoction Generg Stated Anne Path Senter Tools Indoction Generg Stated Anne Path Senter Toons Path Comparing a Logge
Type: Connector: Turbit: Turbit: Connector: Turbit: Connector: Turbit: Connector: Turbit: Connector: Turbit: Connector: Turbit: Connector: Turbit: Connector: Turbit: Connector: Turbit: Connector: Turbit: Connector: Turbit: Connector: Turbit: Connector: Connector: Turbit: Connector: Conne	Introduction Redwin Lbl is a simple to use, col down section. CP Radcom: Fading for Viloidow software. It allows (togers to be configured and downloaded using watchs, and provide basic graphing functionality, data statistics and date equery.
Lpd/st.topper Time is:	Getting Started It all be needed on performance data is be a used for communicating with legats. Radwin Lie derse all flegat mit formation in a database. This database is compatible with Radog for Undrows, allowing Radwin Lie for be upgraded to be full Radeg for Windows if required.
	Setting the Database Path Aero- Configuration / Basic Configuration. Select the "System" tab. This will display the database configuration.

However – going back to 5. above notice that the Options are :-

Identity Main Recording Display Configuration Status



Ref: FAQ0221

Version: 1.0

Title-LoLog- Vista how to set the screen

Made By: AB 18/09/15

(Issue 2)

If you select 'Status' you should see this:-



If you expand each section out you can see a lot of information about the logger – See for example this one says under Main Recording Status it is 'not recording'.

Also further down is information about each Channel and what it is doing.

Lo-Log Flash - v1.06 - Sta	itus	×
Lo-Log Flash - v1.06 - Sta Lo-Log Flash - v1.06 Identity Main Recording Display Configur Status	Status Status Image: Status	
	Load Save Linkad	Cancel

Document History:

Edition	Date of Issue	Modification	Notes
1st	04/01/13	Release	
2nd	17/09/15	Format update	