



Ref: FAQ0170

Version: 1.0


Title – MAST II Flow sensor wiring

Made By: AB 17/09/15

(Issue 2)

Detail of the wiring for connecting flow sensors to a MAST II unit

Note the Connector as viewed from the top of the MAST II unit.

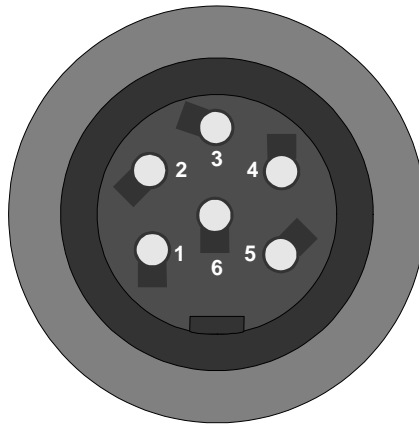

Pins 4 and 5 are used for flow connections from the sensor

Check for +12v between pins 2 (+12v flow supply) and 5 (GND).

Check for +5v between pins 4 (flow input) and 5 (GND)



Ref: FAQ0170

Version: 1.0

Title – MAST II Flow sensor wiring

Made By: AB 17/09/15

(Issue 2)

Document History:

Edition	Date of Issue	Modification	Notes
1st		Release	
2nd	17/09/15	Format update	