

**Ref: FAQ0179****Version: 1.0****Title – MicroCORR 7 LED indicators****Made By: AB 17/09/15****(Issue 2)**

MicroCorr 7 Devices – initial switch on and charging status.

Outstations

Switch on/off outstations by pressing button on top. Operation mode is signalled by the built-in LED:

Outstation switched off

LED off: No charging

LED flashes slowly: Battery charging (requires up to 12 hours for max charge)

Outstation switched on

LED lights continuously: Normal operation mode

LED lights with short interruptions: Battery low, remaining capacity up to 2 hrs

LED flashes rapidly: Battery very low, remaining capacity up to 10 min

Outstations will shut off automatically 45 min after switching on or if battery charge level is too low.

BASE station

Switch on/off BASE station by pressing button on top. After switching on, a flashing LED will indicate initialization of the device. After several seconds the LED will switch to continuous mode, thus indicating full operational mode.

The BASE station will shut off automatically 15 min after last communication with the PDA.

Document History:

Edition	Date of Issue	Modification	Notes
1st		Release	
2nd	17/09/15	Format update	