

**Ref: FAQ0113****Version: 1.0****Title – LX ext batt box no comms****Made By: AB 15/09/15****(Issue 2)**

When an external battery box is connected to an LX logger it may no longer communicate with it using an IR reader

If you plug the battery box into an LX GPRS or SMS logger then the infrared port is shut off for a few minutes after doing it. At this time the logger recognises it has external power so it registers itself onto the network during which time it shuts down local comms (infrared).

After -6 minutes it should be possible to communicate with it again.

To avoid this carry out the logger configuration before you connect the external battery box.

Note - if the LX doesn't have an external batt box it will ignore fast call in times and default to only 2 call ins per day at 6am and 6pm

Document History:

Edition	Date of Issue	Modification	Notes
1st		Release	
2nd	15/09/15	Format update	