

Permalog +[®]GPS Lift N Shift User Guide

Part 2: Operator User Guide

Before deployment can start check that have the correct equipment and that all electrical equipment is fully charged.

Equipment Checks:

A Lift N Shift set consists of:

75 x No of Permalog + (P+) in 4 crates with foam inserts 1 x PatrollerII (complete with PDA, chargers etc)

Checks to carry out:

On receipt of your goods check that you have: An aerial (or cap) for each P+ supplied A lifting hook for each logger A deployment tool (for deep chambers) A PatrollerII complete with PDA, In-car & mains chargers, aerials.

BEFORE YOU CARRY OUT ANY DATA COLLECTION ENSURE THE INTERFACE UNIT, (see diagram below), AND PDA ARE FULLY CHARGED.

Patroller	Featur	es 📚
 Charging Connection Aerial Connection Cowl Connection/RS232 port LED Displaying Battery and Communications Status 	PATROLLER	Prince Pr
5) each defte Bantyon the future .	today!	



Day 1: Shift (Deployment)

Once you are in your DMA where you will be working turn on the PDA and select Start and then Patroller as the screen shot below:



|↓|↑|←|→

EE 🔺

Ctl áü 🔪 🔪

Enter

- Type In 'install' as Password
- Select Enter







Click on Lift N Shift
 Icon

- If the Patroller is switched off you will see this message
- Click OK to this and continue to next screen



Halma Water Management

🎦 Lift + Shift 🛛 abc 📰 🏹 📢	ok
Database	
KIT1 🔻	
GPS: Unknown	
Serial: 02084850	
Back Skip	
Co-ordinates/Address 2:	
Location:	
"AA 1" Updat	te
Lift Shift Options	
Not connected: PATROLLER 2 %:4A	
Connect 🔤 Export D	ata
File Zoom Tools Help	
🐉 Lift + Shift 💦 ahr 🗥 🏹 🛋	ok
Database	
KIT1 👻	
KIT1	
KIT1 GPS: Receiving Data ***** Serial: 2084850	
KIT1 GPS: Receiving Data ***** Serial: D2084850 Back Skip	
KIT1 GPS: Receiving Data ***** Serial: D2084850 Back Skip Co-ordinates/Address 2:	
KIT1 GPS: Receiving Data ***** Serial: D2084850 Back Skip Co-ordinates/Address 2: 51.882318/-0.408919	
KIT1 GPS: Receiving Data ***** Serial: D2084850 Back Skip Co-ordinates/Address 2: 51.882318/-0.408919 Location:	
KIT1 Image: Constraint of the system GPS: Receiving Data ***** Serial: 10084850 Back Skip Co-ordinates/Address 2: 51.882318/-0.408919 Location: "AA 1" Update	:e
KIT1 GPS: Receiving Data ***** Serial: D2084850 Back Skip Co-ordinates/Address 2: 51.882318/-0.408919 Location: "AA 1" Lift Shift Options	:e
KIT1 GPS: Receiving Data ***** Serial: D2084850 Back Skip Co-ordinates/Address 2: 51.882318/-0.408919 Location: "AA 1" Updat Lift Shift Options	:e

- Check that you are in the 'SHIFT' screen
- Your database should be automatically uploaded, if not select it from the drop down menu
- You will note that your first logger will be ready for installation now (check the serial No of the logger you are about to install)
- When first opened there may not be a GPS signal this is confirmed by the 'Unknown' comment in the GPS section. You will also note that there are no Co-ordinates yet
- Do not deploy any loggers until a GPS is obtained (see next screen shot)
- Once a GPS Signal is obtained you will note that next to GPS you will see ***'s that are constantly moving. You will also see co-ordinates that change if you move position.
- You will note that your first logger will be ready for installation now (check the serial No of the logger you are about to install)
- If OK, install the logger and whilst at the chamber click Update
- If Not OK (ie the logger is missing or doesn't work) click on Skip



Repeat this exercise until all loggers are deployed

After you have installed the last logger for that day exit the Patroller software application on your PDA & turn off the PDA.

Day 2: Lift (Retrieval)

Once you are in your DMA where you will be working turn on the PDA & PatrollerII and connect the small aerial to the PatrollerII.

Follow the instructions as above to:

- 1. Open the Patroller software on the PDA
- 2. Type in your 'install' password to gain access to the software
- 3. Select Lift N Shift Icon

Once in Lift N Shift select the 'Lift' tab at the LHS bottom of your screen you will now see the following screen:

File	Zoom	Tools	Help					
7-	Lift +	5hift			۲ _x -	€	ok	
Sel	ect data	abase		•				
Se	rial	Ac	ldr 1	Add	lr 2	L	DC	
				•				
•			III				•	
Log Log	Loggers Remaining Loggers in database:							
Lift	Shift	Option	าร					
Con	nected:	PATR	OLLER	2 %:4	1A			
	Connec	t	:::::	E	rport	Dal	ta	

	Ty Coch House, Llantarnam Park Way, Cwmbran, U.K. NP44 3AW
HV///	Tel: +44 (0) 1633 489 479 Fax: +44 (0) 1633 877 857 Email: sales@hwm-water.com Web: www.hwm-water.com
Halma Water Management	

File	Zoom	Tools	Help				
2	Lift + 9	shift			# %	.4	é ok
KIT1					-		
Selec BEDF	t data ORD T	base OWN	•		ldr 2		Loc
KIT1		· · ·					"AA :
0208	34851	"N	EW	. 5	51.88		"AA 🕯
	-						
Logg	ers Rei	maining	, 2				
Logg	ers in a	latabas	;e: 4	0			
Lift	Shift	Option	IS				
Conn	ected:	PATRO	DLLEF	2٩	%:4A		
C	onnect				Ехро	rt D	ata

File	Zoom	Tools	;	lelp			
2	Lift + 9	shift				۲ _x -	(é <mark>ok</mark>
0707	0492 F	Reciev	/ed				
KIT1					•		
Seria	al	ļ,	ddr	1	Add	dr 2	Loc
0208	34851		NEV	N	51.	88	"AA :
							•
Logg	ers Rer	mainir	ng	1			
Logg	ers in c	datab	ase	: 40			
Lift	Shift	Optio	ons				
Conn	ected:	PAT	ROL	LER 2	2 %:	4A	
C	onnect				E	xport	Data

- Click on Select database
- Select the database you deployed last.

- Note: total in database is all Loggers (deployed or not)
- You will only have loggers listed that were actually deployed
- Loggers will be removed from the screen when they are swiped until there are no loggers left
- Note that the logger being received is shown at the top of your screen

	Ty Coch House, Llantarnam Park Way, Cwmbran, U.K. NP44 3AW
HVV/V	Tel: +44 (0) 1633 489 479 Fax: +44 (0) 1633 877 857 Email: sales@hwm-water.com Web: www.hwm-water.com
Halma Water Management	

File Z	oom	Tools	He	lp			
😤 Lil	ît + 9	ihift			4	۳ _x	√ €
020848	351 R	lecieve	ed				
KIT1					•		
Serial						ok	Loc
	The be	e data export	fro :ed	m KI'	T1	will	
Logger Logger	s Rer s in c	naining latabas) se:	0 40			
Lift S	Shift	Option	IS				
Connec	:ted:	PATRO	DLL	ER 2	%:	4A	
Con	nect				F	xnort	Data
201							Ducu
F ile 7		Teele		-			
File Z	oom	Tools	He	elp			
File Z	oom ft + 9	Tools Shift	He	elp		† 7 _×	ŧ
File Z	oom fit + 9 851 F	Tools 5hift Recieve	He ed	elp	÷	† ₹ _x	ŧ
File Z Pile Z Li 02084: KIT1	oom fit + 9 851 F	Tools 5hift Recieve	He ed	elp		† 7 _×	ŧ
File Z 1 Li 02084: KIT1 Serial	oom ft + 9 851 F	Tools 5hift Recieve	He ed	elp		⁺ Ÿ _×	√ €
File Z CO20844 KIT1 Serial	000m ft: + 9 B51 F 	Tools shift Recieve y Docu port\DP 240_07 mplete	He ed me MA	nts\F KIT: pr09.0	Patro 1 ISV	₹ ₹ × oller CSV	√ €
File Z COURAN KIT1 Serial	000m ft + 9 851 F 851 F Ext Cor	Tools shift Recieve y Docu port\DP 240_07 mplete	He ed MA 7Ap	nts\F KIT: pr09.0	Patri 1 I SV	r oller CSV	∢ €
File Z 02084 KIT1 Serial Logger Logger	000m ft + 5 B51 F Exp 12 Cor cor	Tools shift Recieve y Docu port\DP 240_07 mplete maining databas	Ha ed MA 7Ap	nts\F KIT: pr09,1	Patru 1 CSV	t Y × oller CSV	< Loc ⊥ ►
File Z O2084: KIT1 Serial Logger Logger Lift :	oom ft + S B51 F Exp 12 Cor s Rer s Rer s hift	Tools shift Recieve y Docu port\DM 240_07 mplete maining databas	He ed me MA 7Ap	nts\F KIT: or09,1	Patro 1 ISV	₹ Y × oller CSV	√ €
File Z COURAN COURAN KIT1 Serial Cogger Logger Lift S Connec	000m ft + 9 851 F (M) Exp _1; Cor s Rer s in c 5hift	Tools shift Recieve y Docu port\DP 240_07 mplete maining databas Option		nts\F KIT: rr09,1 0 40 ER 2	Patri 1 ISV	₹ Ÿ × oller CSV	

• You will see this message when all of your loggers have been received by the Patroller, click OK

- You will now see the following screen confirming that the data has been exported
- You can now exit the Patroller software & switch off your Patroller & PDA

When you have completed all of a DMA see your area office to download the data and receive your next lot of work.