

Ref: FAQ0140

Made By: AB 15/09/15

Version: 1.0

Title – Controllercom & Radwin software

(Issue 2)

## How to configure Radwin software to receive Pressure control data data from Controllercom.

Radwin Version 4.50 or greater, use this guide in conjunction with the ControllerCom manual

First set up the Zone & Location in Radwin prior to installation.

Make sure you are running Radwin Version 4.50 or greater.

The ControllerCom data will appear in Radwin as :-

Channel 1 – Flow data Channel 2 – Outlet pressure Channel 3 – None Channel 4 – Inlet Pressure Channel 5 – None Channel 6 – 4-20ma

## Radwin Setup

Open up Radwin software, click Start, click Setup





Ref:	FAC	<b>201</b>	40
------	-----	------------	----

Version: 1.0

Title – Controllercom & Radwin software

Made By: AB 15/09/15

(Issue 2)

	Create Zone	×
Enter the Identity number (up to 4 characters) & Zone Name	Enter the required identity and name for the Zone. If the zone already exists it will get updated. Zone Identity: AB12 Name: Test Zone Save Cance	e

Click Save and OK to update the zone

After creating a New Zone highlight the Zone and click the Tool icon and select Create New Location

Locations		
Zones/Locations	Function Sets	Data Manager
Zones/Locations	Name	Edit Zone AB12
🕹 AB12	Test Zone	Delete Zone AB12
		Create New Zone

## Enter Location number and name

Basic	Location - Specify the location identity and name. Enter names for each of the logger channels.
Radwin All Manual Call View	Location   Logger   Statistics   Transducer   Unit/Levels   Meter   Autocall   Memo   Auto Database E_
Data Generator	Identity
Alarm Programm	Location: 001 Test location
	GIS Position: 00° 00' 0,00" N, 00° 00' 0.00" E
	Channel Names
	Channel Name
	<u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> </u>



Click the Logger tab, and change the Logger Type to Wessex ControllerCom  $\underline{\ }$ 

Configure:	Logger - Select the communicate with	logger type and baud rate. Select the connection type (how the computer will the logger), and enter telephone numbers if required. The logger manufacture
Radwin All	Location Logger Nemes	Transducer   Unit/Levels   Meter   Autocali   Memo   Auto Database Exp_
R	Logger Type:	Multilog 🔹 Baud: 🖉 9600 🔹
Manual Call	Date Manufactured	Senator Semator GSM Serial: Serial: Last Known Logger Parameters Merlin ( Controller )
AR	Connection	Sentinel ( PRV Controller ) Sentinel Plus ( PRV Controller )
Autocall	Connection Type:	Direct (RS232)
Data	Pager Number:	

١

Check Baud Rate says 9600, Connection Type says SMS Modem and enter the ControllerCom SMS number in International format (ie +44) and click Save.

Location Configuration3: Radwin All	×
Configure:       Logger - Select the logger type and baud rate. Select the connection type (how the computer will communicate with the logger), and enter telephone numbers if required. The logger manufacture         Radwin All       Location       Logger       Names       Transducer       UntilLevels       Metre       Auto Database Exp.         Manual Call       Logger       Names       Transducer       UntilLevels       Metre       Auto Database Exp.         Manual Call       Logger       Date Manufactured:       11/01/1970       East Known Logger Parameters	
Connection Autocall G5M Data Number: SMS Voice Number: SMS Voice Number: +44778877878787	
Save Cancel	

Open up AutoCall. Now install the ControllerCom as normal (as per ControllerCom Manual). Once install is complete 3 pop up boxes should appear on the screen saying the ControllerCom has been set up successfully. Data will then proceed to update on a regular basis.

## **Document History:**

Edition	Date of Issue	Modification	Notes
1st	02/05/12	Release	
2nd	16/09/15	Updated and format	