

Depth transducer installation guide

Depth Transducer with Vent Box Installation Guide



The vent box must be out of the water, protected from rain and exposed to normal atmospheric pressure.

The depth transducer should be submerged in the water as required.

Document History:

Edition	Date of Issue	Modification	Notes
1st	24/05/12	Release	
2nd	15/09/15	Format update	