



Ref: FAQ 0004

Version: 1.0

Title – Radwin Alarms – logger config


Made By: AB\_061113 (Issue 1)

## How to set up the sending of alarms direct from the logger to a mobile phone

Connect your logger to your PC, open Radwin software and select the Alarm Programmer module , select options, Alarm configuration -



Select the correct logger type from the drop down -

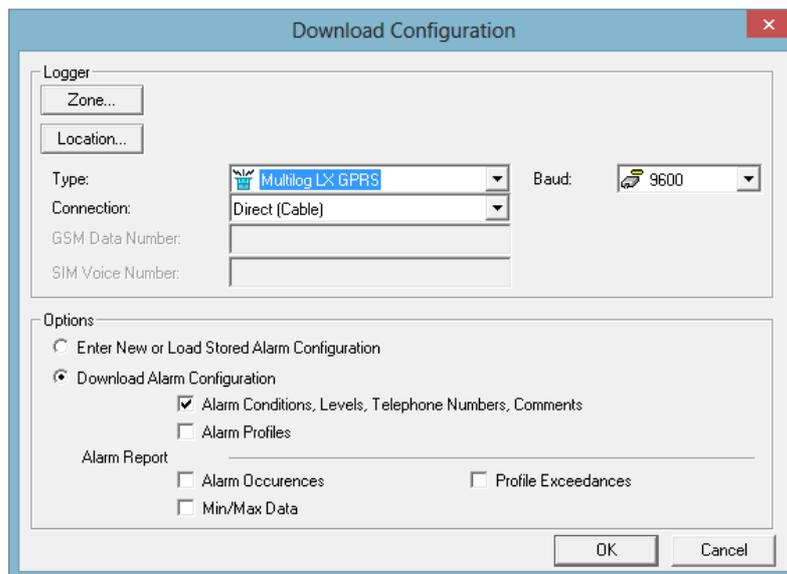


Then select 'OK' to download the loggers current status and any alarms already set




Ref: FAQ 0004	Version: 1.0
Title – Radwin Alarms – logger config	
Made By: AB_061113 (Issue 1)	

First select the 'Tel Numbers' tab –

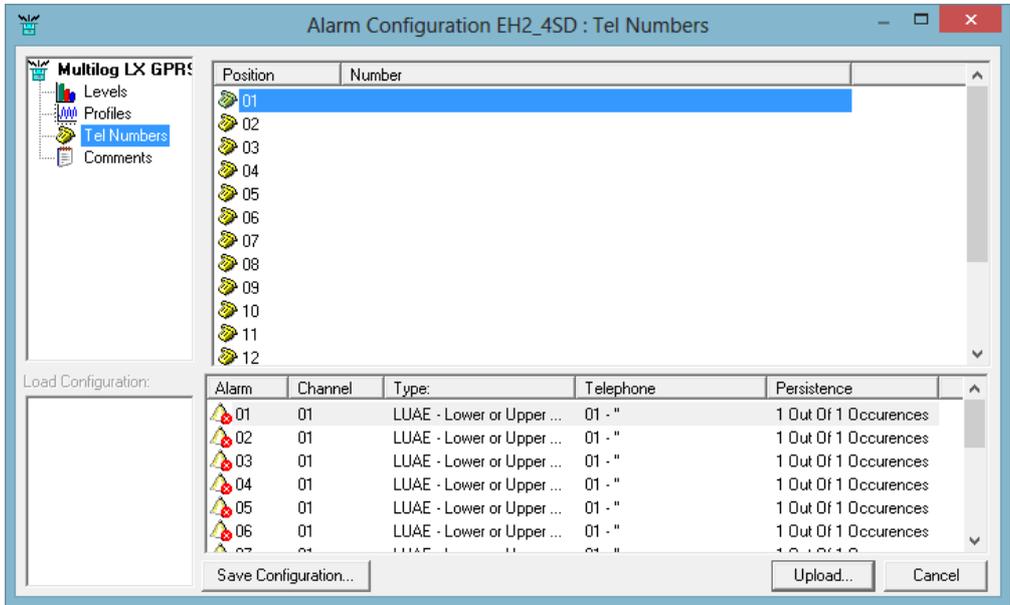

Double click on the first available number position (01)

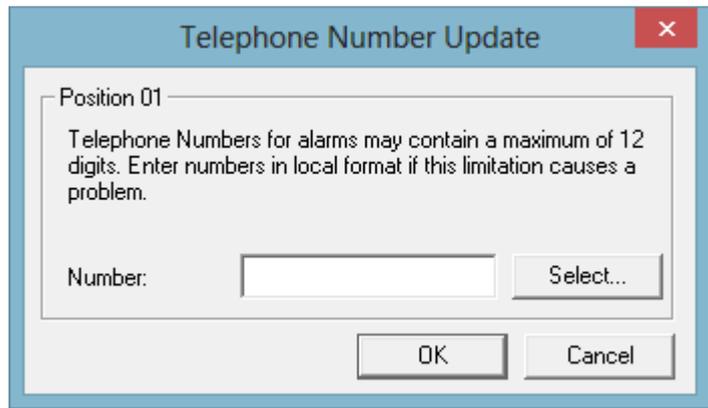


Enter the mobile phone number required to receive alarms – a maximum of 12 digits only so use local format if required.

Then select 'OK' to save.




Ref: FAQ 0004	Version: 1.0
Title – Radwin Alarms – logger config	
Made By: AB_061113 (Issue 1)	

At the Alarm Configuration screen, Select the Levels tab, set up the alarm conditions required by double clicking on the Channel 01 line -

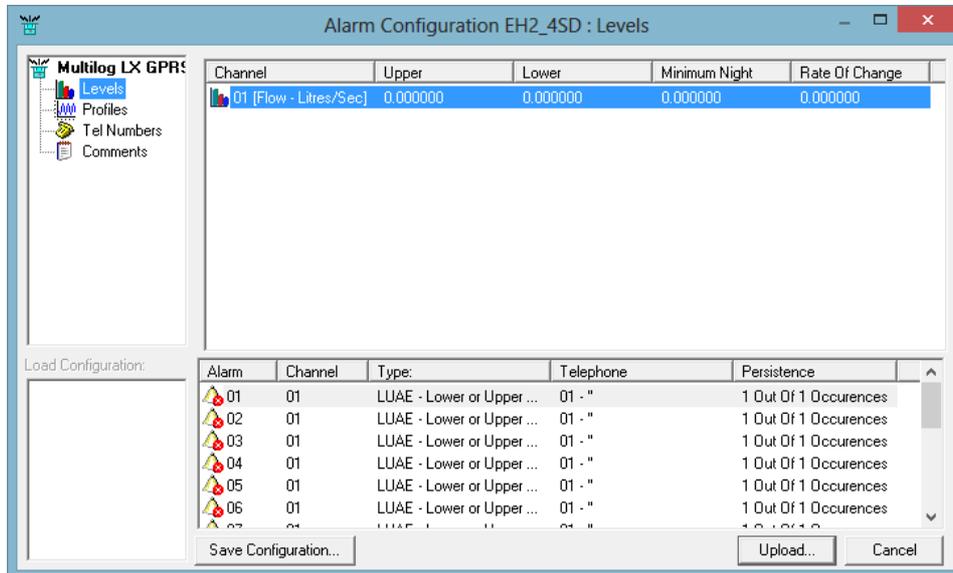

Set up the alarm conditions as required –

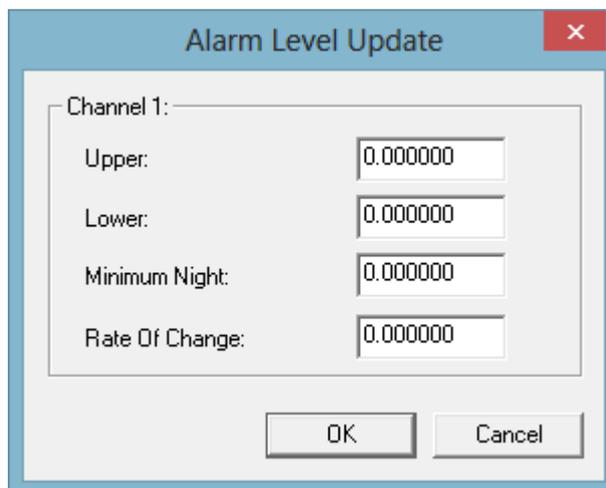

Select 'OK' to save the alarm condition

**Document History:**

Edition	Date of Issue	Modification	Notes
1st	06/11/13	Release	
2nd	23/09/15	Format update	