




Ref: FAQ-0018

Version: 1.0


Title –Radwin View graph summary data

Made By: AB_14/01/14 (Issue 1)

Question – How can I show meter readings at the bottom of the Radwin View flow graph

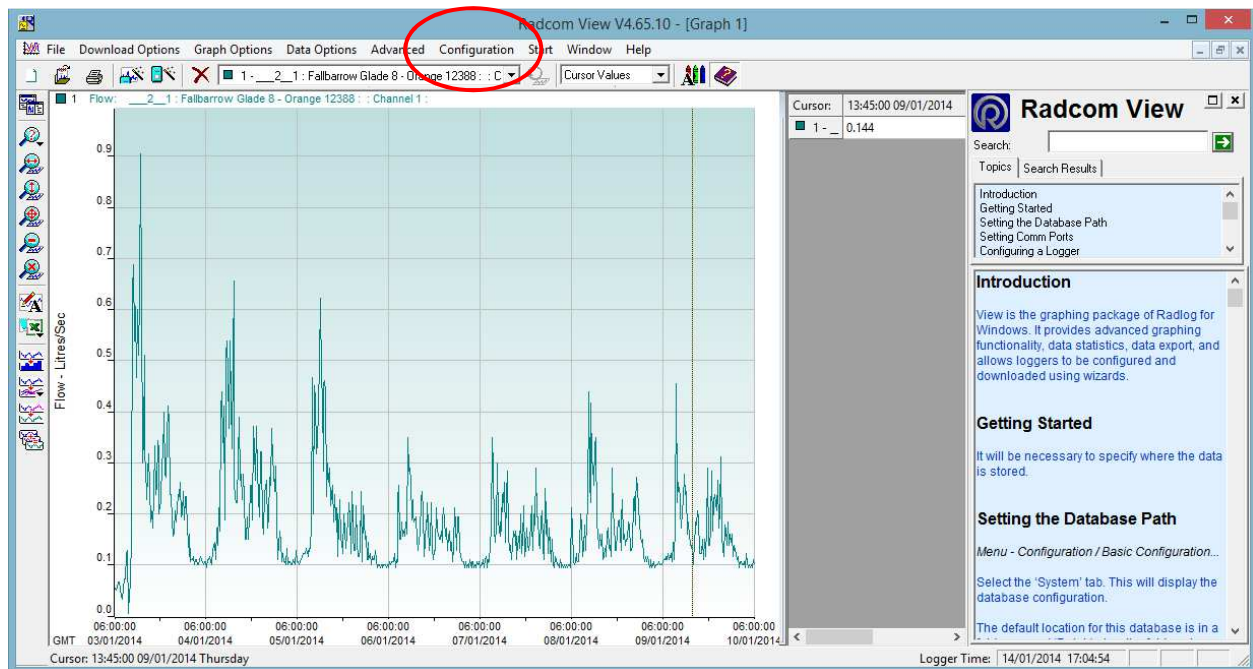

From Radwin View Graph screen Select Configuration > Advanced Configuration

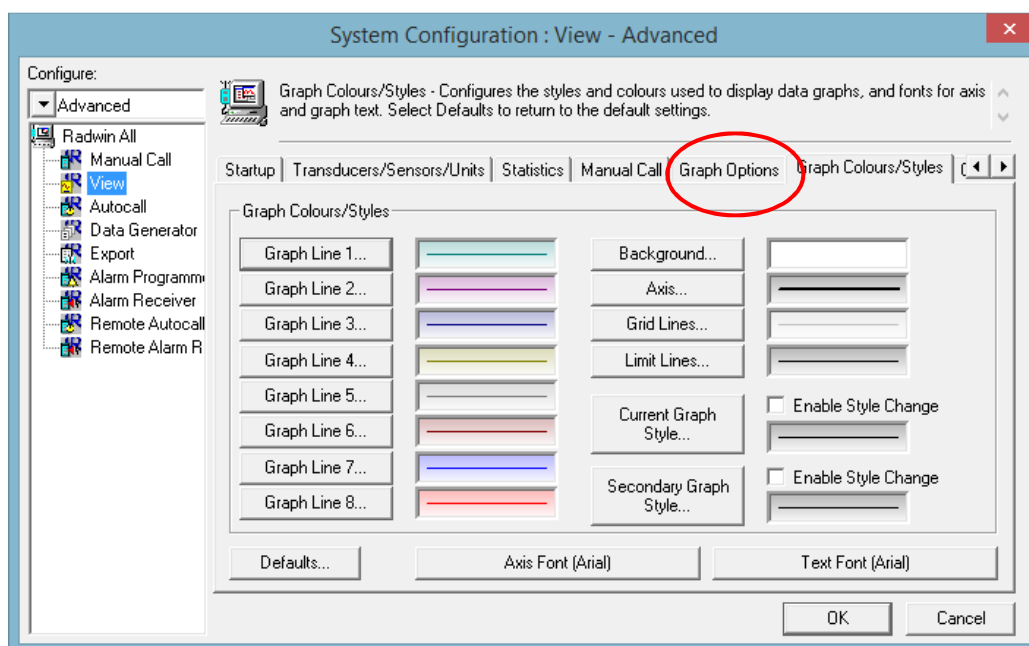

Then select the Graph Options tab –




Ref: FAQ-0018

Version: 1.0


Title –Radwin View graph summary data

Made By: AB_14/01/14 (Issue 1)

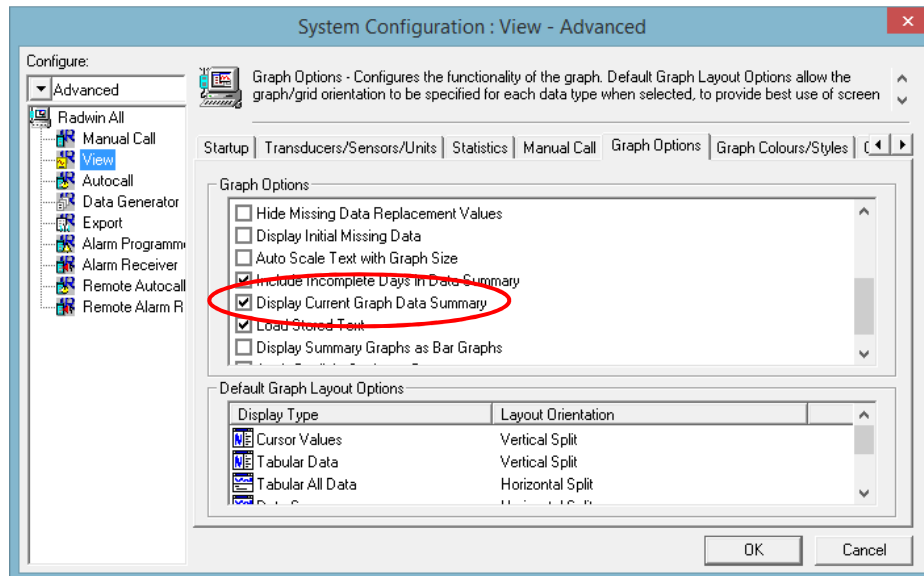

Scroll down the graph options and Tick the box – ‘Display Current Graph Data Summary’

The summary data including meter reading will appear at the bottom of the graph and the meter reading will be activated by the Cursor position -

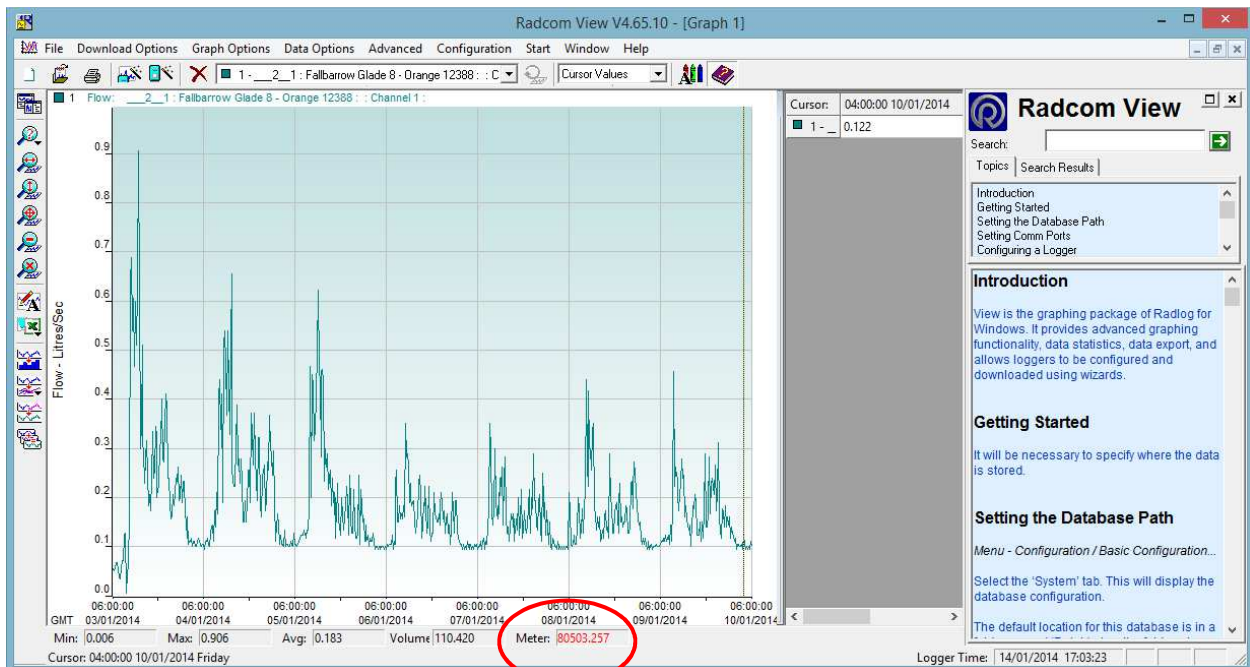

Document History:

Edition	Date of Issue	Modification	Notes
1st	14/01/14	Release	