



Ref: FAQ0094

Version: 1.0


Title – Radwin Database delete zones

Made By: AB 08/06/15


(Issue 1)

## How to delete Zones and locations from a Radwin Database

From Radwin View open the Radwin Data Folder –

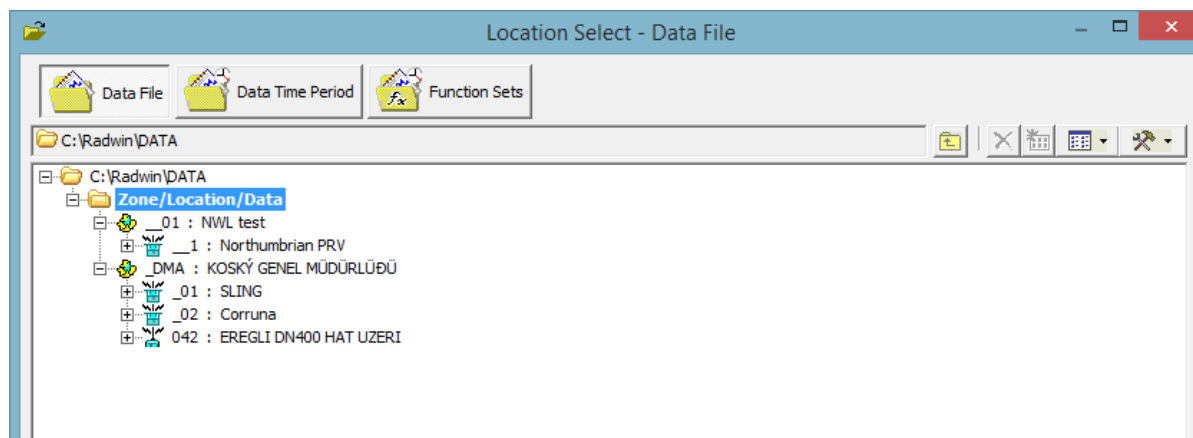

Right click on the logger icon that you want to delete – select 'Location Database' and 'Delete Location' -

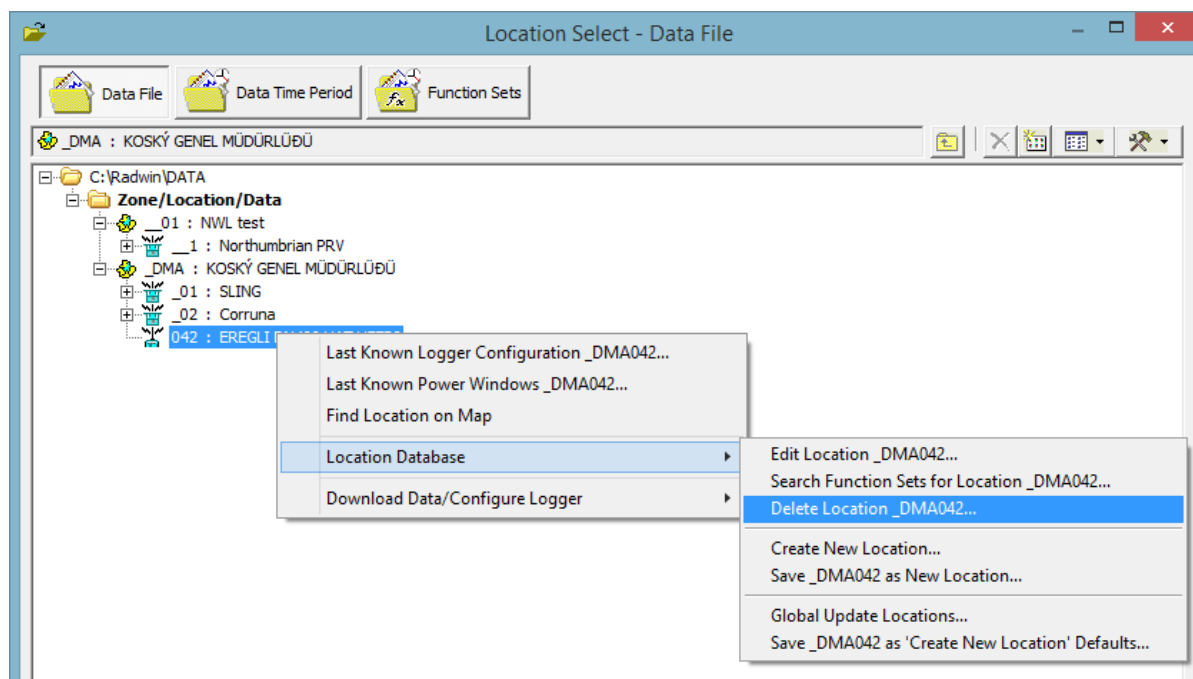

At the screen below select 'OK' (check there are no active function sets on this logger by using the Search button) -




Ref: FAQ0094

Version: 1.0

Title – Radwin Database delete zones


Made By: AB 08/06/15

(Issue 1)

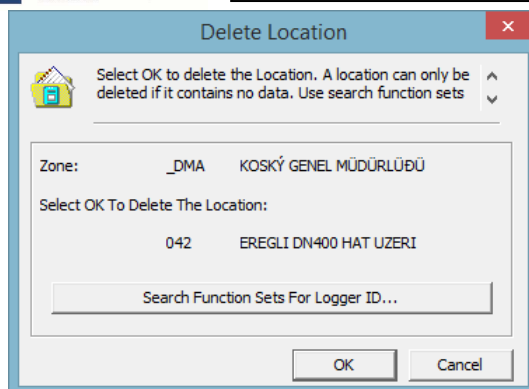


Use the same process to delete all the other loggers in the same Zone

Then right click on the Zone icon and select 'Delete Zone' –

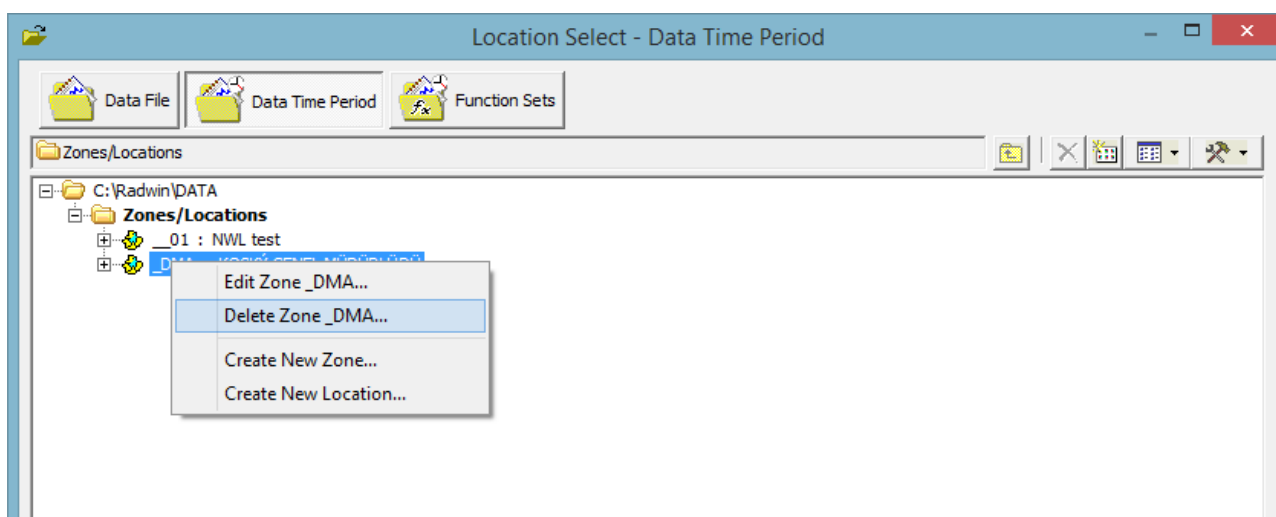

Select 'OK' at the next screen to delete the Zone –

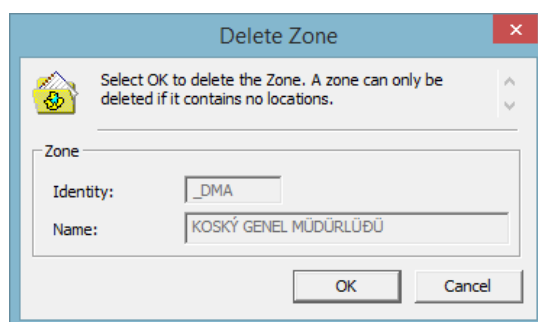

## Document History:

Edition	Date of Issue	Modification	Notes
1st	08/06/15	Release	