 




Radwin User Guide Setting up a Zone and a Location




Keep this record in the front of the User Manual. When the document has been amended write the amendment number, the date, the paragraph numbers affected by the amendment and your initials in the table below.

	Radwin User Guide Setup A Zone and Location ©Radcom (Technologies) Ltd	Page 2 of 9
--	--	-------------


Radwin User Guide

Setup a Zone and Location

Setup Overview

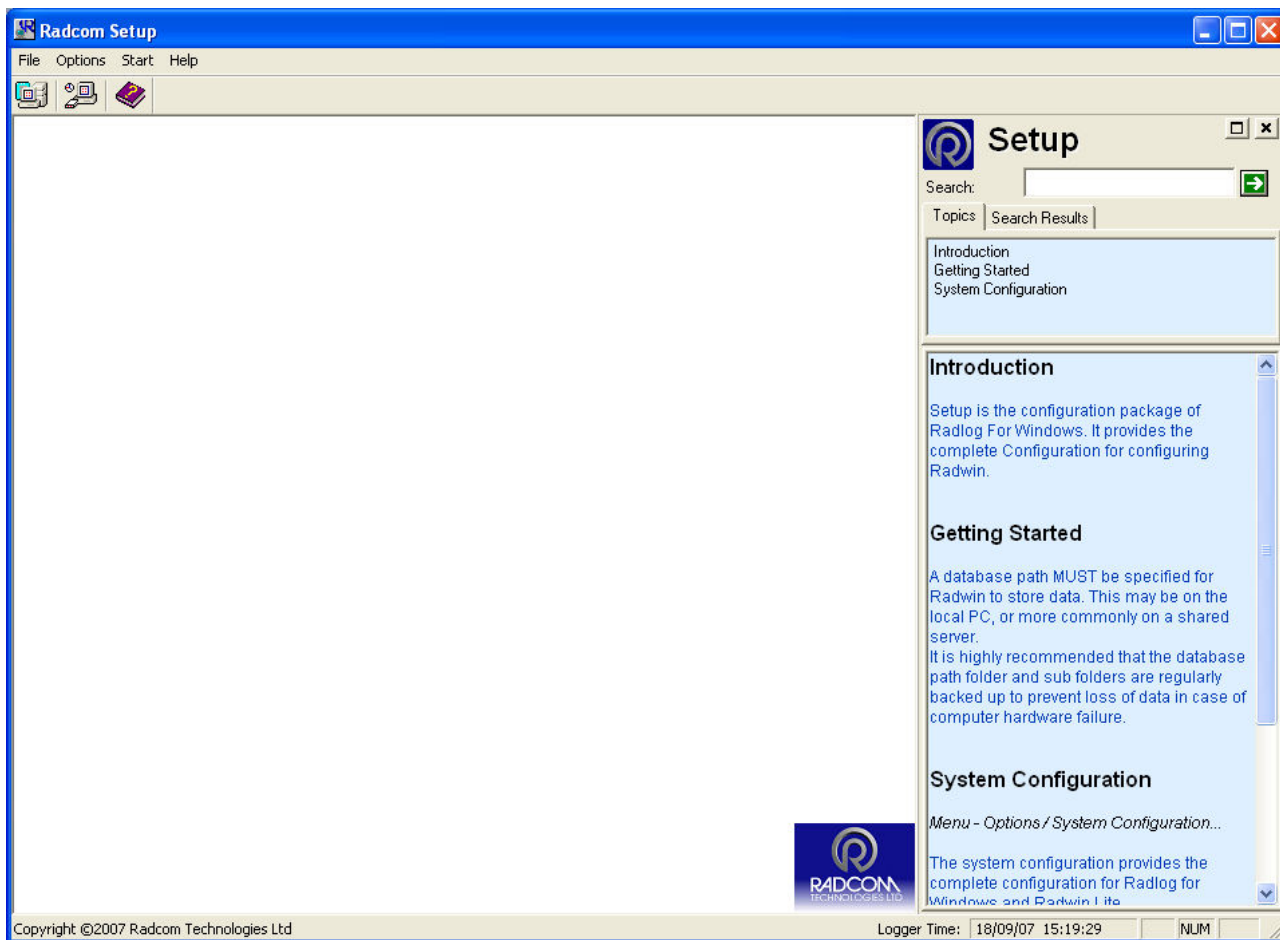

Menu Bar and Icons

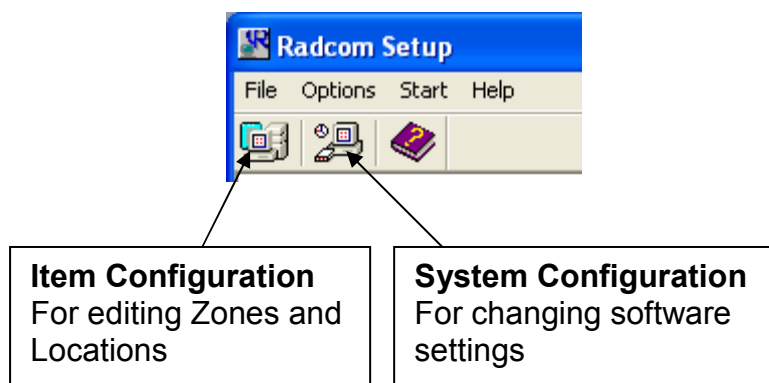


Radwin User Guide


Setup a Zone and Location

Item Configuration

The logger database is accessed from Item Configuration.

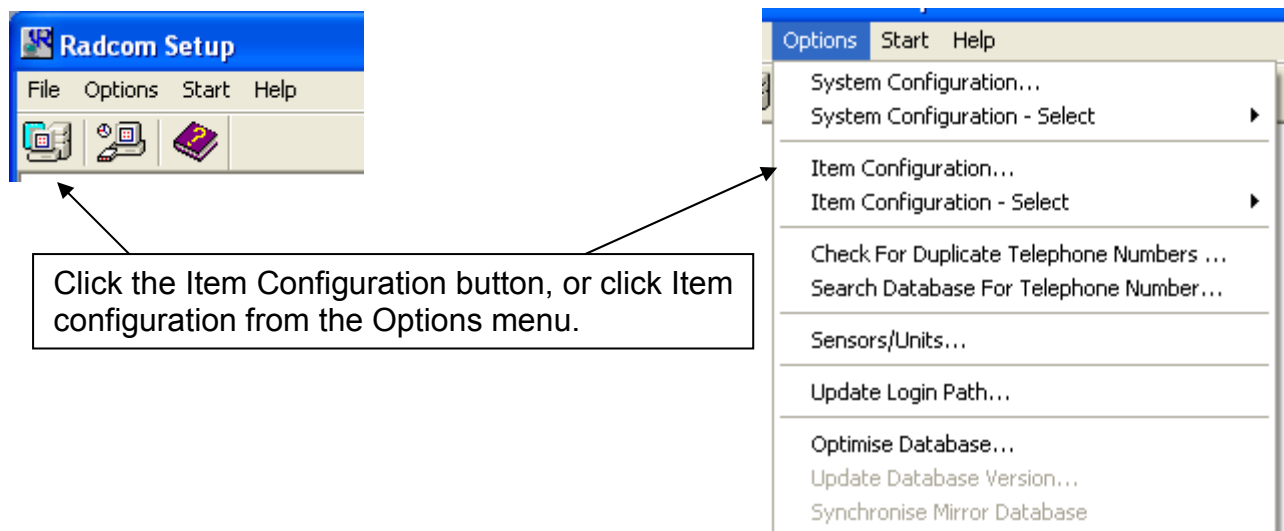

From Item Configuration you can manage your Zones and Locations, Function Sets and Lookup Tables. Also you can delete data files from here using Data Manager.


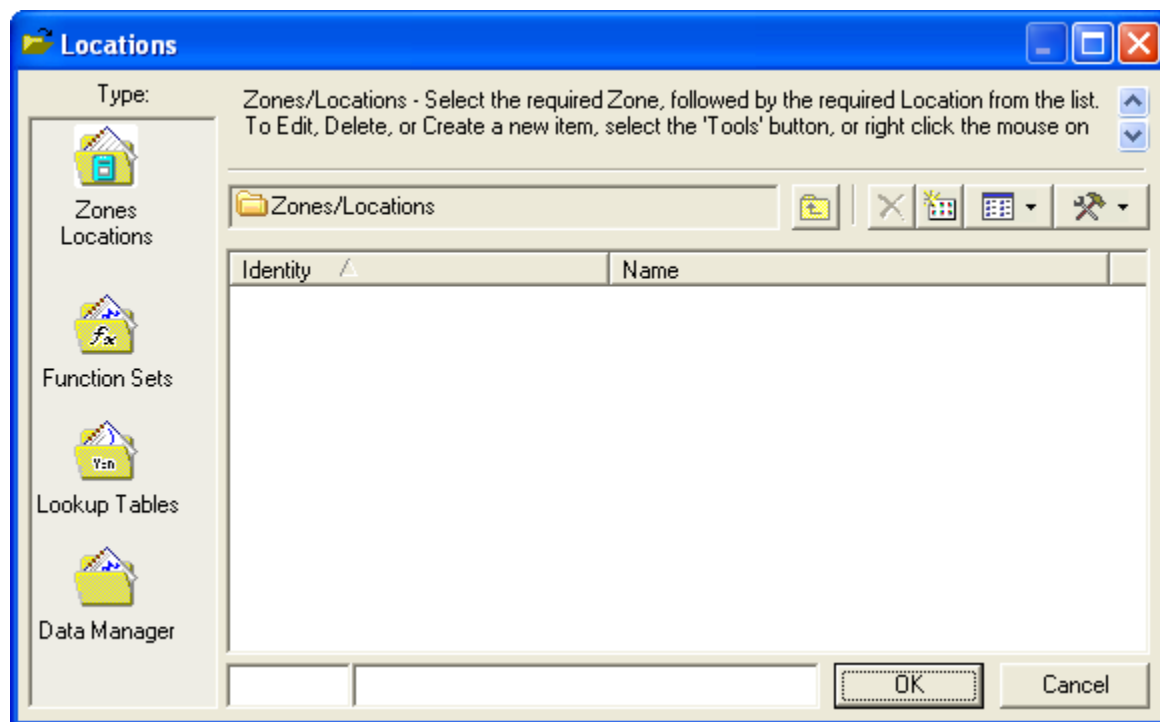


Radwin User Guide

Setup a Zone and Location

System Configuration

From System Configuration you can manage all settings of the Radwin software.

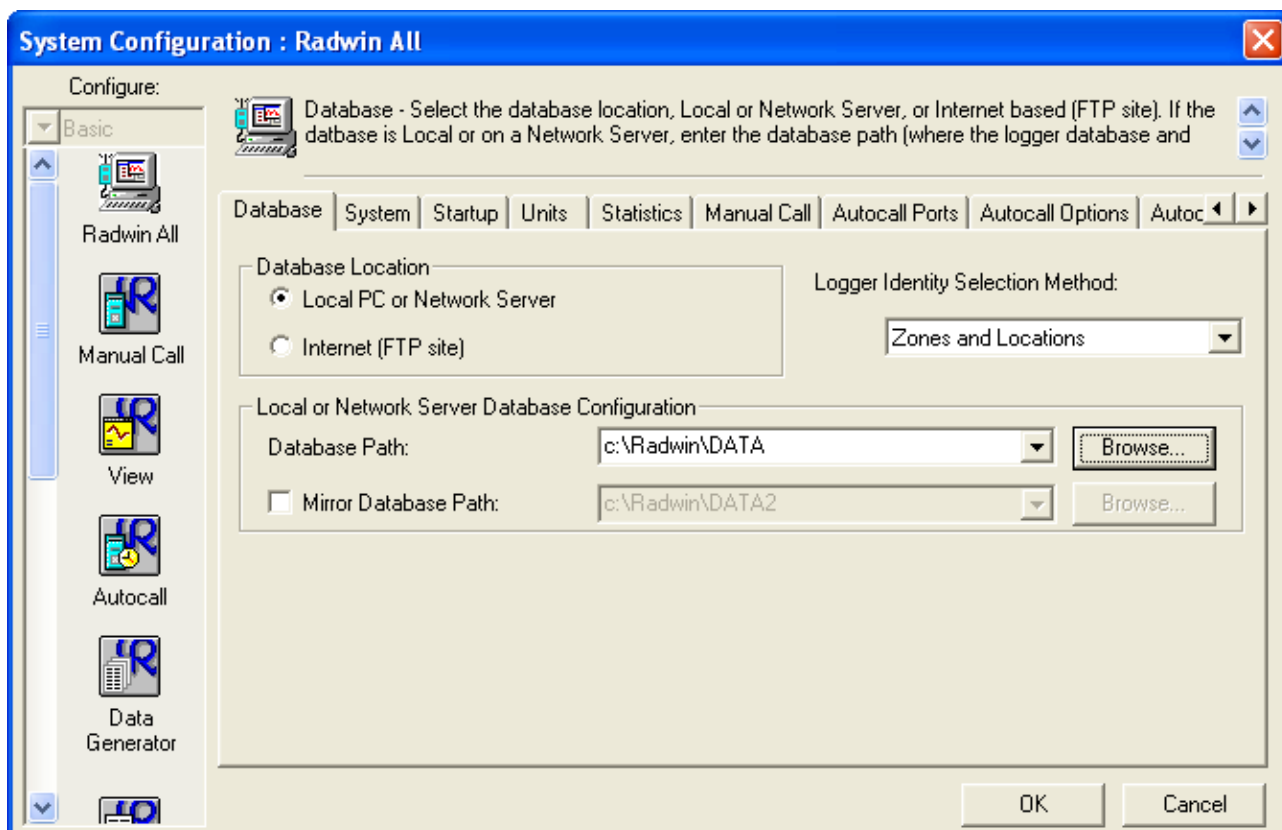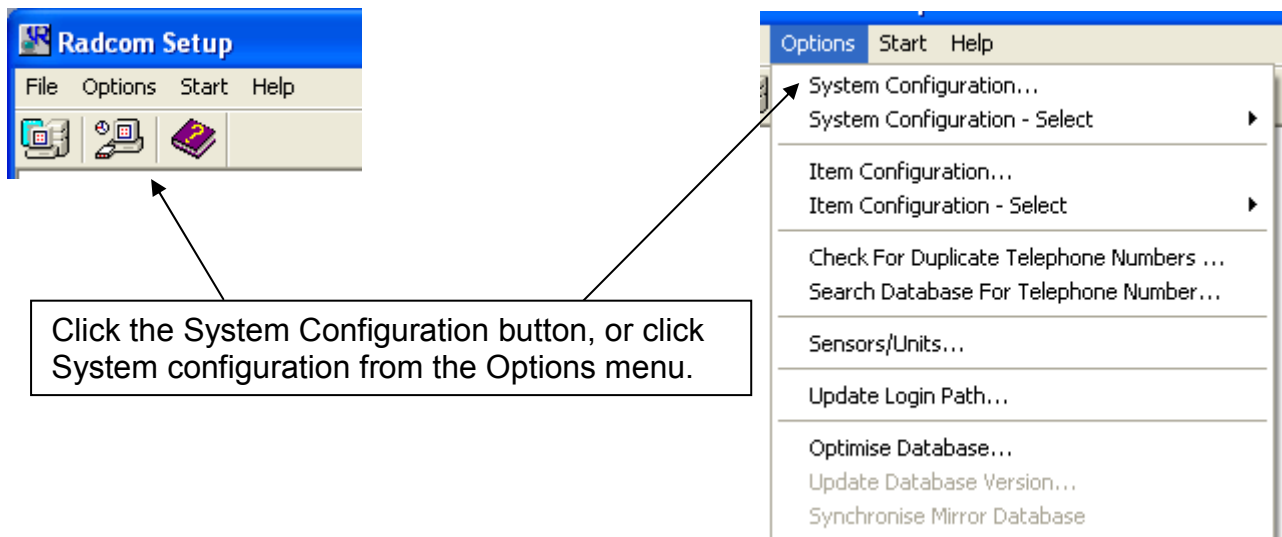

Setup Zone and Location for new logger

Database Introduction

The most frequently used configuration is...

Zones and Locations

Locations are Loggers

Zones **contain** Locations (loggers)

Many Zones may be created

Each Zone may contain many Locations (loggers)

For example:


Split a town up into Zones

Split the zones up into Locations, and deploy loggers within each Zones

Radwin User Guide


Setup a Zone and Location

Create a new Zone

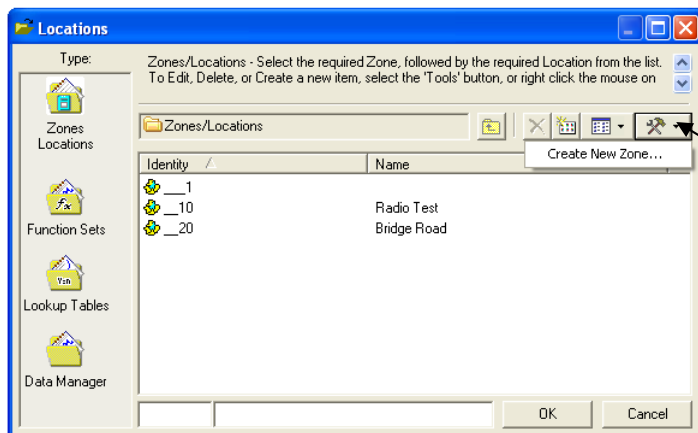

Open Item Configuration to view your existing Zones.


Click the Tools icon and then click Create New Zone

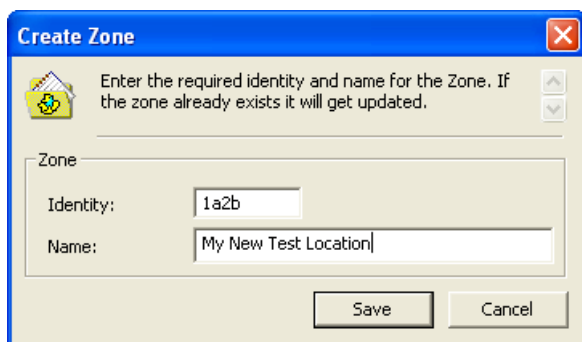

Enter an identity (which can be alphanumeric) for the Zone


Enter a name for the Zone

Click Save

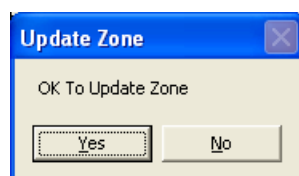

Click Yes to update the zone information


The new Zone should now be listed.

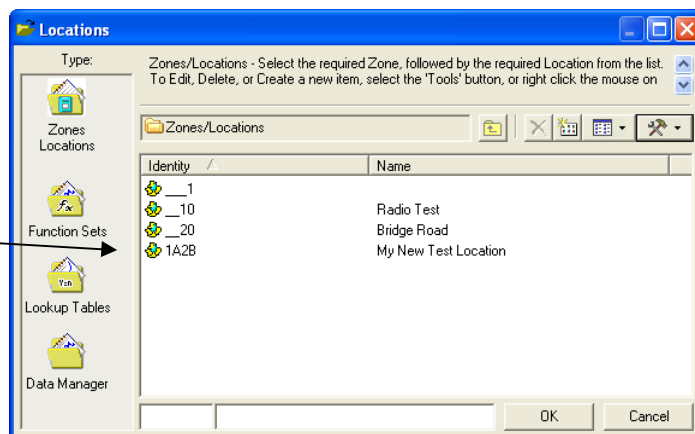

Radwin User Guide


Setup a Zone and Location

Create a new Location (Basic)

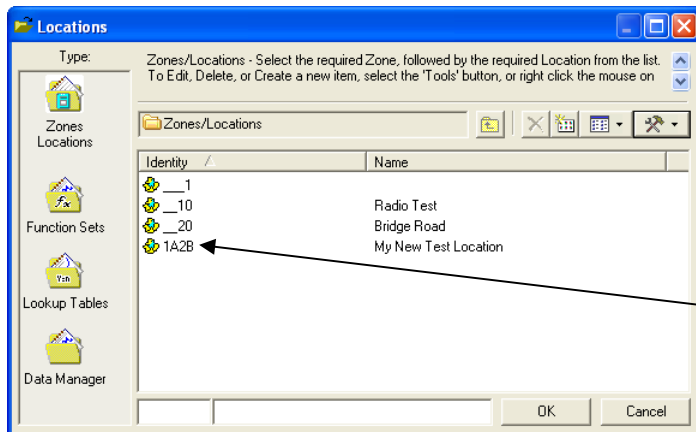


Open Item Configuration to view your existing Zones.

Double click a Zone to add or edit a Location.

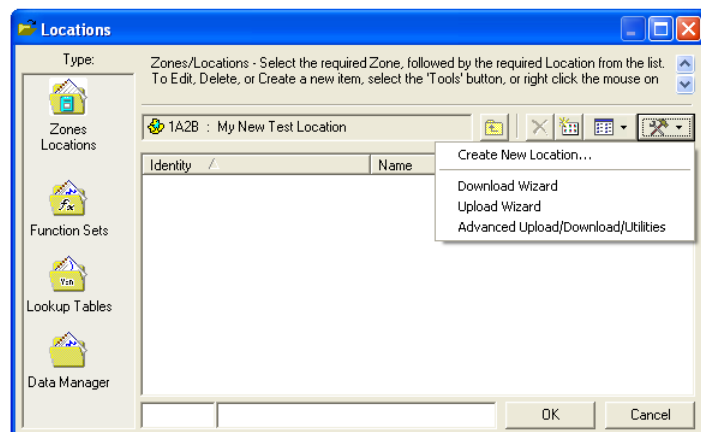

From the tools menu click Create New Location

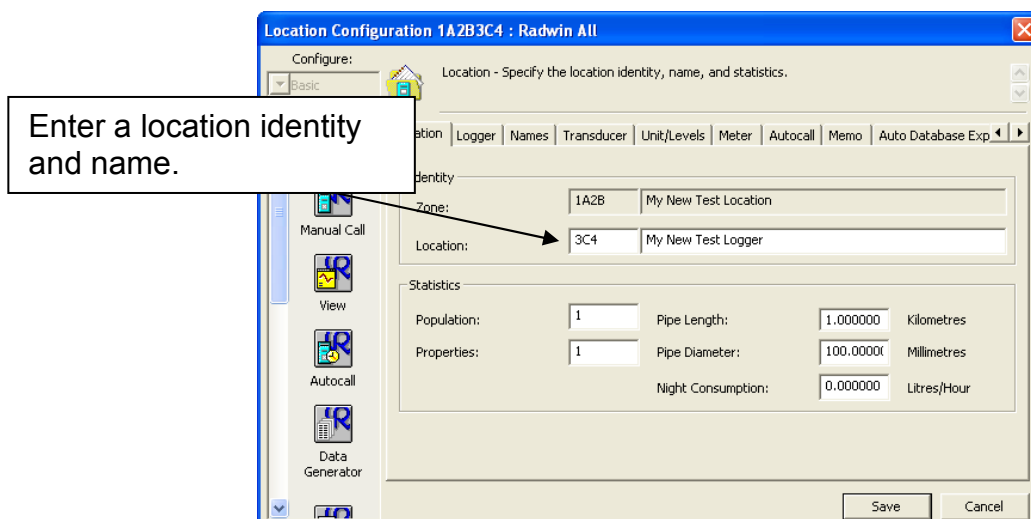

Enter a location identity and name.

Adding the location identity and name is the minimum amount of information required. Click Save to create the new Location.

Guide to adding a new Data Logger to the database...

1. Open Radwin Setup.
2. Open Item Configuration.
3. Double click the Zone.
4. Start to create new location (instructions on page 7).
5. Click the Logger tab.
6. Use the drop down menu to change the logger type
7. Change the connection
8. Add the telephone or SMS number of the logger.
9. Enter the logger serial number to the serial number box (optional).
10. Click the Autocall tab.

The following instructions are NOT applicable to SMS loggers.

11. For GSM and PSTN loggers click the tick box to enable Autocall.
12. Enter the call out time.
13. Select tomorrow's date in the box next to the time. This is the date the first download will take place.

These instructions are applicable to ALL loggers.

14. Click the Transducer tab
15. Use the Channel drop down menu, and select each recording channel in turn.
Ensure the transducer type is correct (i.e. pressure or flow) and also check the sensor type below. If the sensor type needs to be changed then click Configure and change the Sensor type to reflect correctly the data being recorded.
16. Click Save to update the location