



Ref: FAQ0240

Version: 1.0


Title –Radwin- to change default units

Made By: AB 18/09/15


(Issue 2)

How to change the default units in Radwin software

Go to Radwin Set Up > Options > System Configuration > Transducers/Sensors/Units

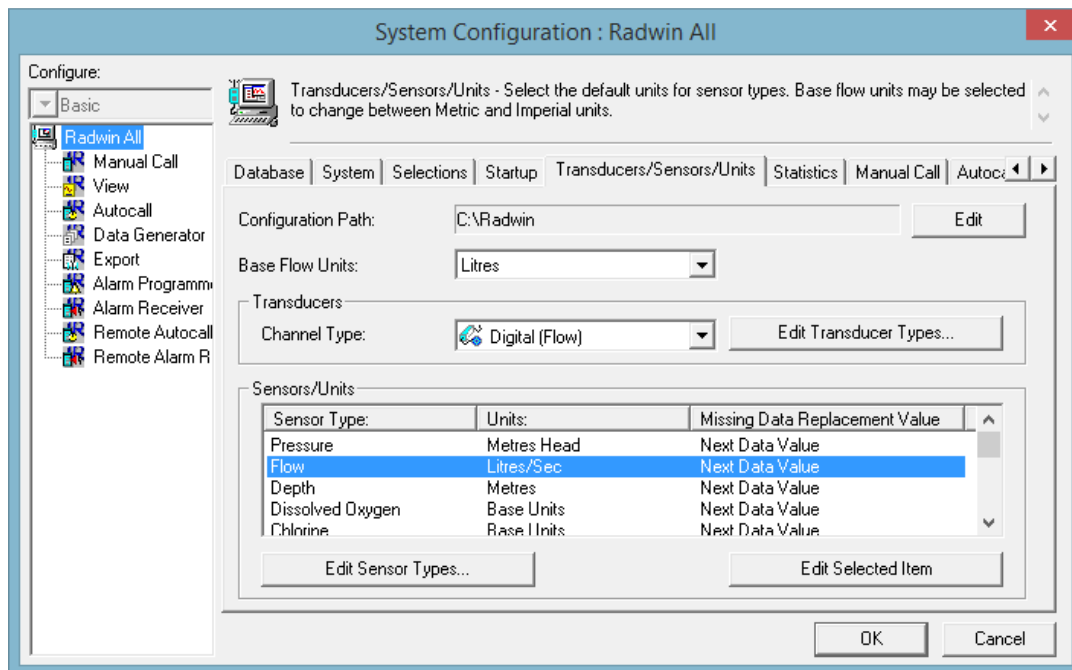

Select any of the units in the listing and double click to reveal as follows -
Select correct unit from the drop down and OK

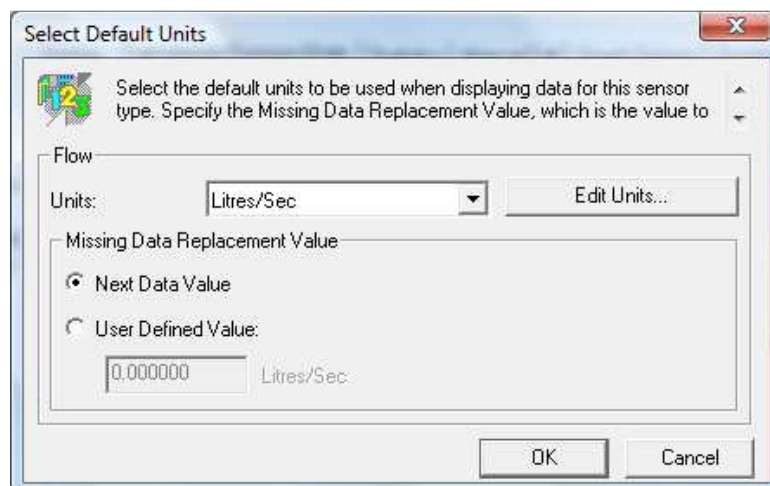

Document History:

Edition	Date of Issue	Modification	Notes
1st	01/02/14	Release	
2nd	17/09/15	Format update	