





Ref: FAQ0245	Version: 1.0
Title – Radwin - configure min night flow	
Made By: AB 18/09/15	(Issue 2)

How to enter values for minimum night flow period and meter readings

From Radwin View screen open the Database Second Icon on the top left of screen –

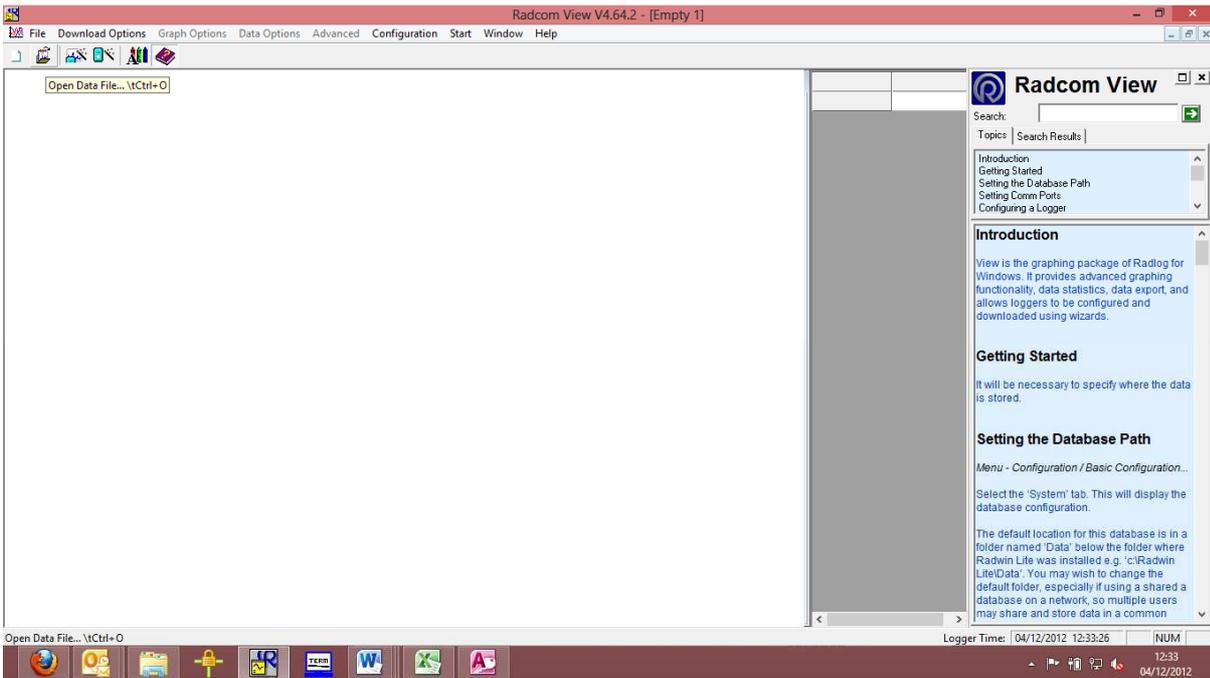


Then locate the logger you want to edit -

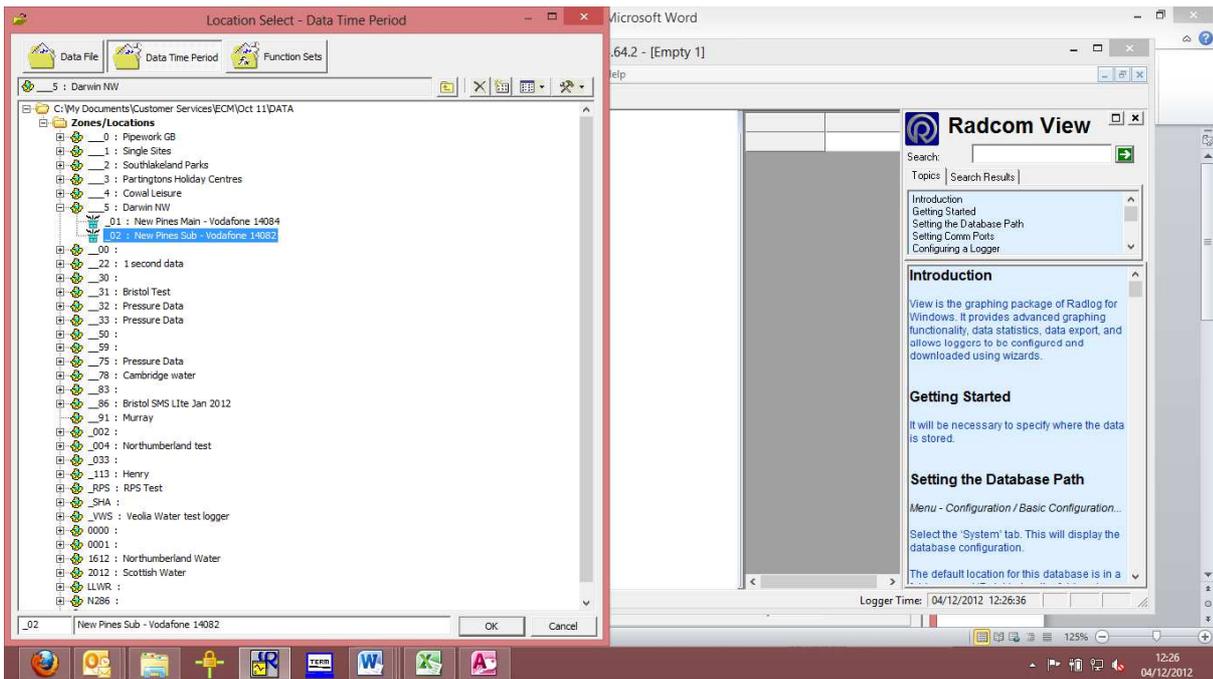


Then locate the logger you want to set up for editing – Right click on it to reveal as follows -



Ref: FAQ0245	Version: 1.0
Title – Radwin - configure min night flow	
Made By: AB 18/09/15	(Issue 2)

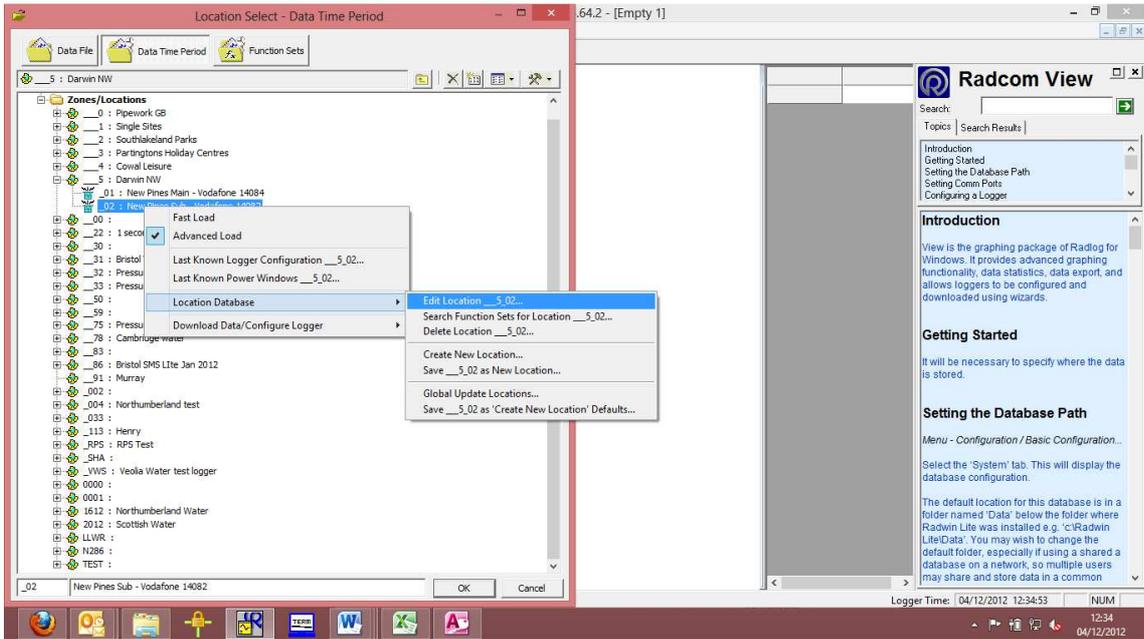

Select Location Database, then select Edit location then pick the Statistics tab (or meter tab for meter readings) Enter the information as required.

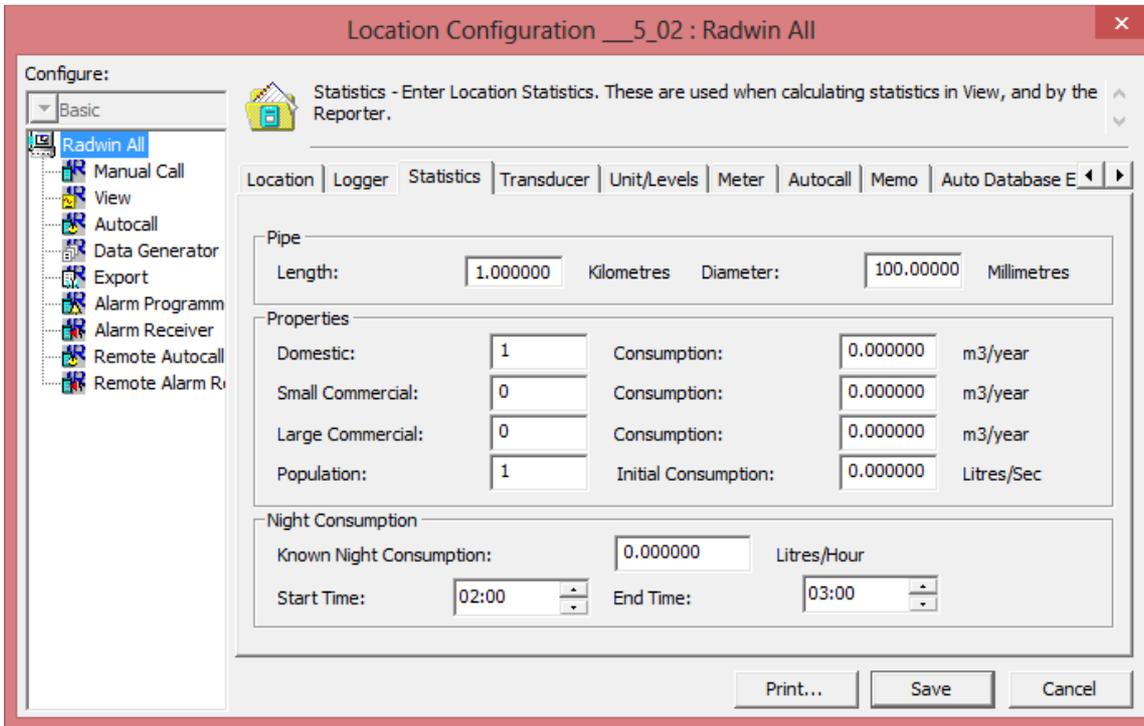

Document History:

Edition	Date of Issue	Modification	Notes
1st	02/01/13	Release	
2nd	17/09/15	Format update	