

Made By: AB 21/09/15

Version: 1.0

Title-Radwin database-update logger SIM#

(Issue 2)

How to change the logger SIM card number in the database

Fcs

R

Open Radwin View, Open Data File, then ocate the logger you want to change, right click on the logger, then select 'Location Database', then 'Edit location' as follows -



When the Location Configuration screen opens as below -

Location Configuration1_5 : Radwin All						
Configure: Basic Radwin All Manual Call View Autocall Data Generator Export Alarm Programm Alarm Receiver Remote Autocall Remote Alarm Re	Location - Specify the location identity and name. Enter names for each of the logger channels.					
	Zone: I Single Sites Location: _5 Ribby Hall Front Ent - Orange 13017 GIS Position: 00° 00' 0.00" N, 00° 00' 0.00" E					
	Channel Name					
	Print Save Cancel					



Then select the logger tab and make changes to the phone number as required (edit the new phone number in.

Location Configuration1_5 : Radwin All					
Configure: Basic Radwin All Annual Call Annual Call Annual Call Configure Autocall Configure Autocall Configure Autocall Alarm Programm Alarm Receiver Remote Alarm Ru	Logger - Select the logger type and baud rate. Select the connection type (how the computer will communicate with the logger), and enter telephone numbers if required. The logger manufacture Location Logger Statistics Transducer Unit/Levels Meter Auto Database E Image: Statistics Location Logger Type: Image: Multilog LX Date Manufactured: 11/01/1970 Last Battery Change: 11/01/1970				
	Connection Connection Type: SMS Modem GSM Data Number: SMS Voice Number:				
	Print Save Cancel				

Once complete select 'Save'

Update Existing Location					
Select OK To Update the Existing Location :1_5					
OK Cancel					

And 'OK' to update the location with the new phone number.

Document History:

Edition	Date of Issue	Modification	Notes
1st	21/01/13	Release	
2nd	17/09/15	Format update	