



Ref: FAQ0308

Version: 1.0


Title – Radwin Lite Software – comms

Made By: AB 22/09/15

(Issue 2)

Radwin Lite software – how to configure the coms port

To set up the COM port for communication to the logger you would need to establish which COM port the IR Reader is connected to. Go to the PC Control panel and locate Device Manager and then plug the IR reader into the PC and note which COM port it is connected to – in the example below the IR reader is connected using a USB to Serial adaptor on COM11

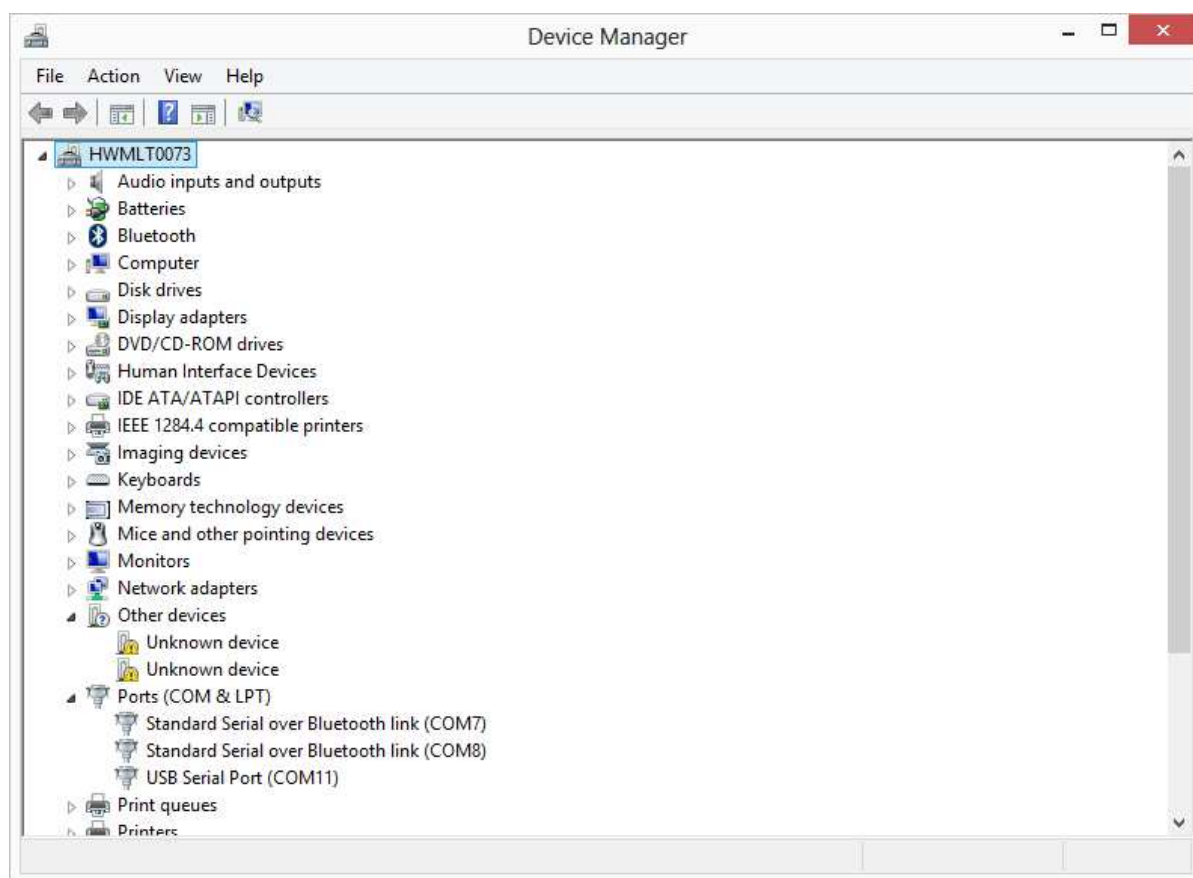

Then go to Radwin Lite> Configuration > Comm Ports and select the corresponding Com port from the drop down. (ensure the icon to the left is coloured grey/yellow indicating it is available) as below -




Ref: FAQ0308

Version: 1.0

Title – Radwin Lite Software – comms

Made By: AB 22/09/15

(Issue 2)

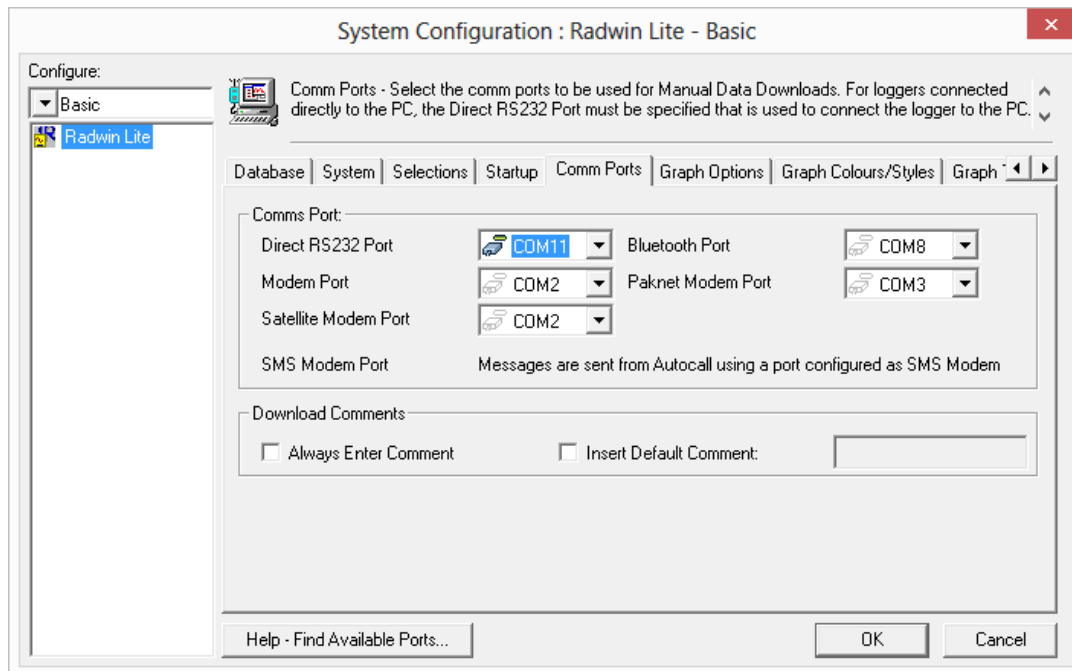

Then select 'OK' and shut down Radwin and reopen it to retain the setting.

Note – if you are using a USB version of the IR reader ensure that the driver for it (included in the latest Radwin software version) is installed.

If you are using a USB to Serial adaptor ensure it is compatible with Windows 7.

Document History:

Edition	Date of Issue	Modification	Notes
1st	13/06/13	Release	
2nd	22/09/15	Format update	