






Ref: FAQ0397 Version: 1.0 Title - Autocall error table

(Issue 1)


Autocall data exceedance error messages

Made By: 28/03/17 AB

Autocall data exceedance error messages are seen in the Autocall Error table -

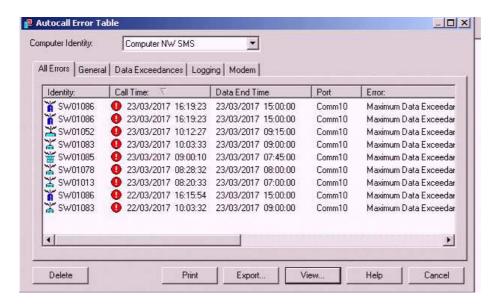

These mean that 'data value level checking on received data' is enabled; it is similar to high level alarms but checked by Autocall when the data is received. The loggers above have Upper level exceedance checking enabled. That is enabled in the locations configuration on the 'Units/Levels' page. There are check boxes to enable Upper, Lower, and MNF value checking, along with value entry fields for them.

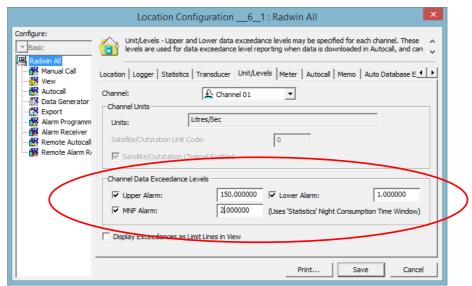

Document History:

Edition	Date of Issue	Modification	Notes
1st	28/03/17	Release	