



Ref: FAQ-0048

Version: 1.0

Title – Soundsense i Countdown Timer

Made By: KE\_020714 (Issue 1)

### Question –

**Usually I can see a 24hr Countdown Timer when I set the SoundSense i case to record in the future. When I set a recording today to start tomorrow morning, I did not see the Countdown Timer appear on the case display. Why?**

#### Reason:

There is a s/w glitch between the case and the PC Software.

When setting up a future recording on different days of the same month, you can see the countdown timer OK on the Soundsense I suitcase.

If however you are programming the case on the last day off the month to record on the first day of the next month, you do not see the countdown timer immediately.

The programming is set, but the countdown timer is not displayed until just past midnight (i.e. the same day that the recording will take place)

This may be a little inconvenient; however it is not likely that this issue will be fixed soon.

#### Document History:

Edition	Date of Issue	Modification	Notes
1st	02/07/14		1 <sup>st</sup> Release