



Ref: FAQ0075

Version: 1.0

Title – MC Touch – Screen protector

Made By: AB 19/01/15

(Issue 1)

MC Touch – servicing the screen protector

The MC Touch Correlator has a Touch Screen which is protected by a transparent plastic screen protector which minimises damage and scratches to the main glass screen. The protector can be changed when it becomes necessary due to normal 'wear and tear'. A replacement part can be purchased from HWM Sales department – the part number is WIN7015.

To change the protector remove the 4 screws retaining the Base Station Bezel -



Remove the bezel and peel off the screen protector starting at one of the corners – it is approximately 2mm thick so it should be easy to remove it.

Remove the protective film from the replacement screen protector and assemble it onto the screen with the matt side facing upwards (the side from which you removed the protective film should be against the screen). Smooth any air bubbles out by working them from the screen protector towards the edges of the screen.

Refit the Bezel and re-assemble the four retaining screws tightening them hand tight.

Document History:

| Edition | Date of Issue | Modification | Notes |
|---------|---------------|--------------|-------|
| 1st | 19/01/15 | Release | |
| | | | |