




Intelligens / COMlog™IS logger User Manual 1/2 Basic User Guide for a DataGate™/ HWMOnline™ installation

Version 1.0

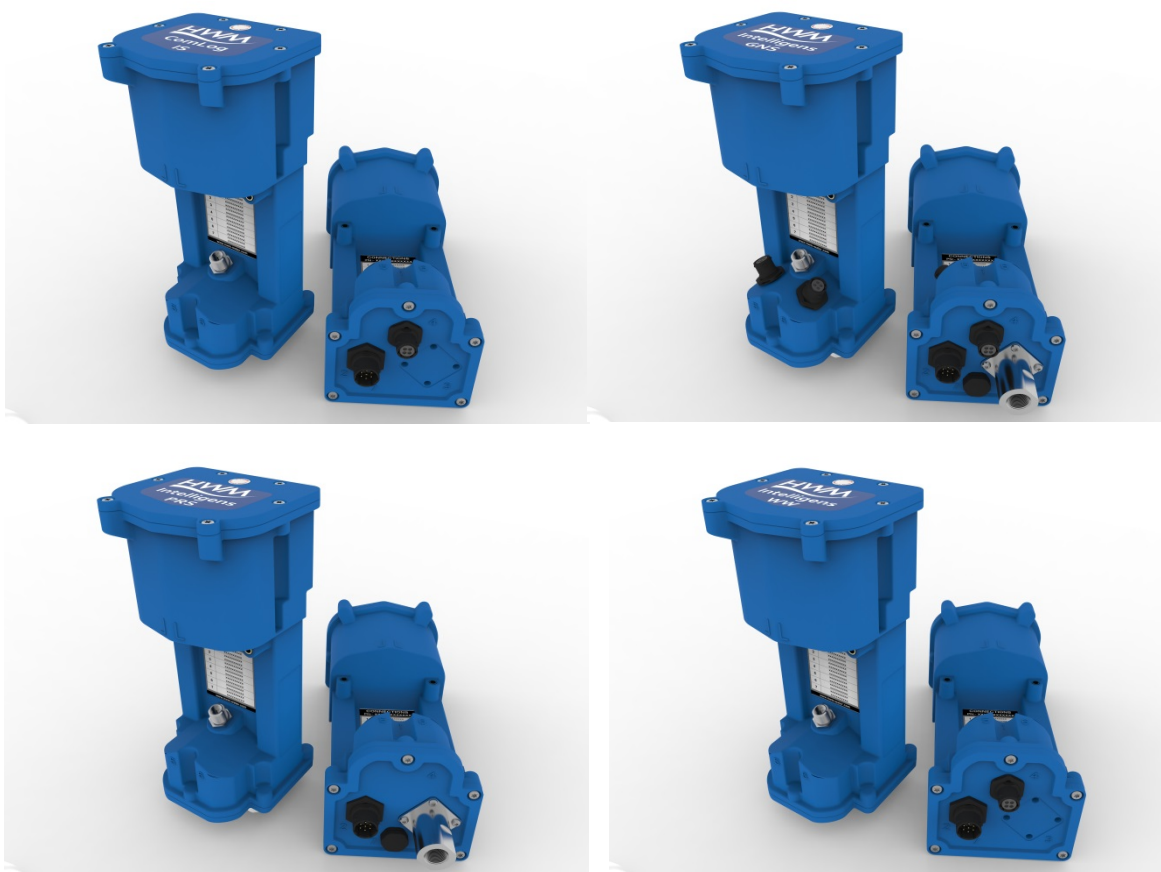

Device supplied may differ from the image above depending on input/output configuration



Warning: Always read this manual in conjunction with the Safety Supplement which contains important safety and operating information.
Please read, understand and follow the instructions in the manuals.

TABLE OF CONTENTS

WEEE AND THE BATTERY DIRECTIVE	3
INTRODUCTION	4
UNPACKING	4
INSTALLING THE SOFTWARE.....	5
INSTALLATION AND SITE HARDWARE DIAGNOSTICS TOOL (IDT).....	6
READING THE LOGGER.....	6
CONFIGURING THE LOGGER.....	8
Data Communications Confirmation – GPRS Test	12
Troubleshooting a GPRS test failure.....	13
Antenna installation considerations.....	14
Installation Process Decision Tree.....	15
Installing your logger at site	20
Connecting the pressure	20
Connecting the flow cable	21
Taking a reading from the logger and hardware diagnostics	22
Final site commissioning checks.....	24
Installation checklist	25
USING HWM DATAGATE™	26
Setting up DataGate™ Alarm Recipients.....	30
Setting up channel settings (optional)	32
USING HWMONLINE™	33
Viewing your data.....	33
Viewing information about your logger fleet.....	35
Appendix 1 – Fitting your own SIM card	36
Appendix 2 – Technical specifications	37

WEEE and the Battery Directive

Waste Electrical and Electronic Equipment.

HWM-Water Ltd is a registered producer of Electrical and Electronic Equipment in the United Kingdom (registration number WEE/AE0049TZ). Our products fall under category 9 (Monitoring and Control Instruments) of The Waste Electrical and Electronic Equipment (WEEE) Regulations. We take all environmental issues seriously and fully comply with the requirements for collection, recycling and reporting of waste products.

HWM-Water Ltd is responsible for WEEE from customers in the United Kingdom provided that:

The equipment was produced by HWM-Water Ltd (Palmer Environmental / Radcom Technologies / Radiotech / ASL Holdings Ltd) and supplied on or after 13th August 2005
The equipment was supplied before 13th August 2005 but has been directly replaced by an HWM-Water Ltd product manufactured since 13th August 2005.
HWM-Water products supplied after 13th August 2005 can be identified by the following symbol:



Under HWM-Water Ltd's Terms and Conditions of Sale, customers are responsible for the cost of returning WEEE to HWM-Water Ltd and we are responsible for the costs of recycling and reporting on that waste.

Instructions for returning WEEE:

Ensure that the WEEE meets one of the two conditions above.

The waste will need to be returned in accordance with the regulations for transporting data loggers with undamaged lithium batteries.

- a. Pack equipment in strong, rigid outer packaging to protect them from damage.
- b. Attach an appropriate Lithium Warning Label to the package.
- c. The package must be accompanied by a document (e.g. consignment note) that indicates:
 - i. The package contains lithium metal cells;
 - ii. The package must be handled with care and that a flammability hazard exists if the package is damaged;
 - iii. Special procedures should be followed in the event the package is damaged, to include inspection and repacking if necessary; and
 - iiii. A telephone number for additional information.
- d. Refer to the ADR/IATA regulations on shipping dangerous goods.

Return the WEEE to HWM-Water Ltd using an appropriate waste carrier.

In accordance with the regulations, customers outside the United Kingdom are responsible for WEEE.

The Battery Directive

As a distributor of batteries HWM-Water Ltd will accept old batteries back from customers for disposal, free of charge, in accordance with the Battery Directive.

PLEASE NOTE: All lithium batteries MUST be packaged and returned in accordance with the relevant regulations for transporting lithium batteries.

A licensed waste carrier must be used for transporting all waste.

For more information on WEEE compliance or the Battery Directive please e-mail CSservice@hwm-water.com or phone +44 (0)1633 489 479

Introduction

Thank you for choosing an HWM data logger(s), we trust it will provide you with many years of service.

The individual configuration of your logger(s) may differ slightly from the detailed descriptions that follow, but any additional setup information that you need, should be available from our website.

Unpacking

As you unpack your new logger, please confirm that you have the following parts required to install the equipment. If there are any omissions, please contact our sales team to rectify or supply the missing parts.

- Intelligens data logger
- Software Installation Tool (IDT) from www.hwm-water.com or CD-ROM
- External GPRS Antenna (optional)
- COMMS(-Y) USB/IS - Serial Communications lead (optional)
- Connection cables (optional)

Please dispose of your waste packaging responsibly.



Before proceeding to site for physical installation, please take the time to configure your logger in an office environment. Most settings can be configured before visiting site and this will save time at the point of install.

You will need to have:-

- A valid HWM-water.com account with username & password.
- A valid HWM DataGate™ account with username & password. See DataGate™ setup later in this manual.
- A PC with Windows 7/8 installed (IDT also supports Windows XP & Vista) 32bit and 64bit systems are supported.
 - Minimum Requirements are:-
 - 1GHz processor
 - 512Mb RAM
 - 2GB Disk Space
- A description and reference number for the installation site.
- The SIM card installed into the logger and a good GPRS signal* for the chosen network (Roaming SIMs are also available). This is already done for you if you ordered a data package with the logger. See the appendix if you have purchased a data pack & SIM separately.

*See section on Antenna Installation Considerations, page 14.

Installing the software

1. Insert the CD-ROM supplied into your CD drive.
(If your PC does not have a CD drive, then either copy the files from the CD-ROM onto a memory stick, or download and run the installation file from the HWM website at www.hwm-water.com)

NOTE: If you use proprietary archiving software, such as WinZip or 7zip, please ensure that you extract the files to a temporary folder using the automatic extraction buttons that maintain the original folder structure.

2. Ensure you have system administration rights for your computer, ask your IT department if you are unsure.
3. If the installation does not start automatically, locate and run the file "setup.exe" (in the IDTInstall/IDT folder), which installs the program and the necessary USB drivers for the logger.



4. Follow the on screen installation instructions to complete the install of the IDT.

Should the automatic installation fail, please check with your system administrator that you have sufficient rights to install the driver or try installing the drivers manually.

You may be required to update Microsoft .Net; the install file is included with the IDT setup files for your convenience.




Installation and site hardware Diagnostics Tool (IDT)

Once you have installed the IDT, connect USB cable first to the logger (7 pin socket) and then to your PC.

The first time you connect your logger to a new USB port, Windows will configure the driver, wait until this process is completed before proceeding.

Reading the logger


1. Run the “IDT” program.
2. The main window will appear of which the main items are:-

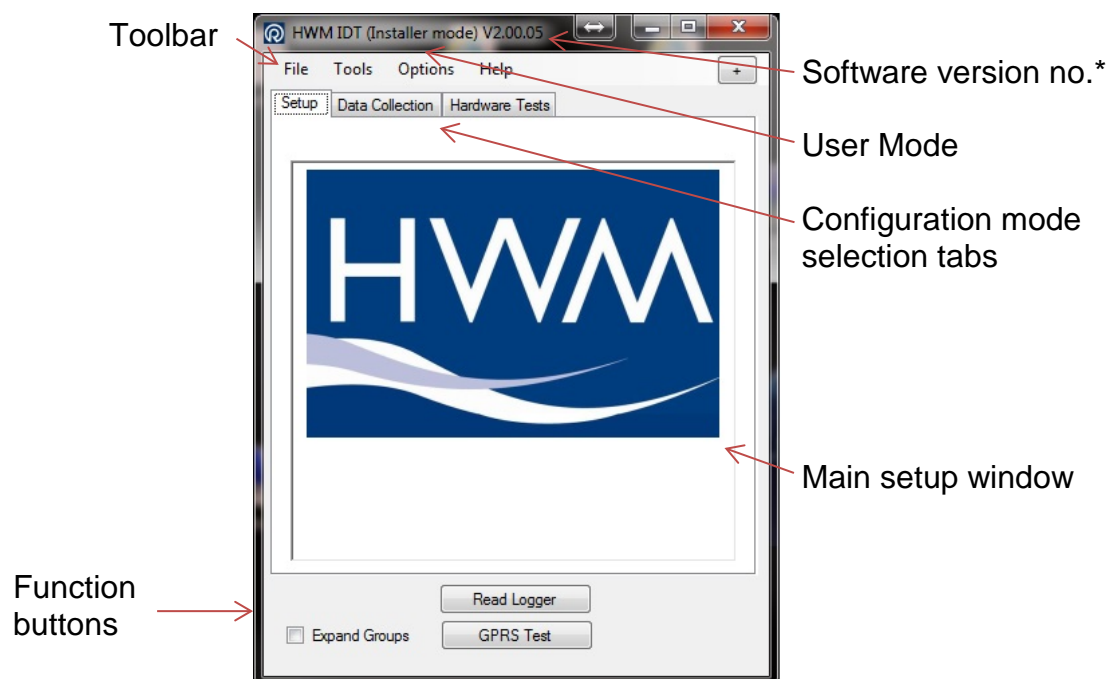

*Note actual software version numbers may differ from the ones shown throughout this user guide


3. Now click the <<Read Logger>> button to load the current logger settings into the setup window.
4. The IDT will now download the current settings from the logger.

If there is a more up-to-date version of the logger firmware available on your PC, you will see the message “Update Available”.

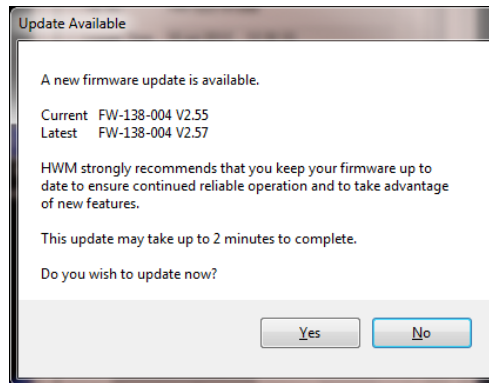

Click <<Yes>> to update the logger, the process will take approximately 5 minutes, however the logger will be restarted so you may wish to transfer any logged data first, in which case click <<No>>.

5. Once all the settings have been loaded, Click <<OK>> to start configuring your logger.

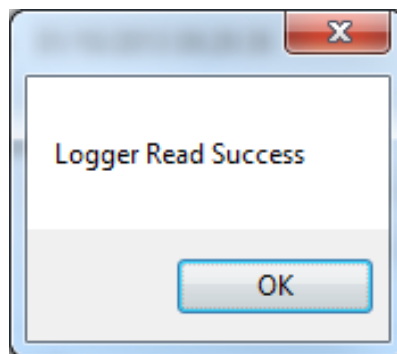

Configuring the logger

1. You will now see the main setup menu (expanded for illustration purposes) The menu is structured in sections for easy setup:

i) Logger Details including ID and SIM card phone number

ii) Logger start time and data capture interval (days or time of measurement period)

iii) Logger channel configuration including calibration factors where required (see appendix for info)

iv) Logger recorded meter readings

v) Cellular data service provider settings

vi) Data call settings

Data Destination details, the server address for the UDP data

vii) Backup call in timing details in case of main call failure or external battery exhaustion and SMS message destination number

viii) Alarm configuration

Final Setup button and logger time zone selection

Main function buttons

HWM IDT (Installer mode) V2.00.05

File Tools Options Help

Setup Data Collection Hardware Tests

Device on COM59

Logger

Type FW-138-004 V2.57 (Waiting)

ID INTELI1

Serial No 0201504

Tel No +447825791088

Logger Time 16 Apr 2015 14:27:49

Logging Parameters

Start Time 16 Apr 2015 14:30:00

Log Interval 24 Hours 00:15:00

Sample Interval 24 Hours 00:00:30

Logging Channels

Type	Mode	Offset	Scale
Ch1 Pressure1	Ave		
Ch2 Flow1 Uni	Ave		1
Ch3 Flow2 Uni	Ave		1

Meter Readings

Meter read Flow 1 001660.113

Meter factor Flow 1 x1000

Meter read Flow 2 000182.878

Meter factor Flow 2 x1000

APN

☒ Use GPRS test to choose APN settings

☐ Let me choose APN settings

Time(s) Data Is Sent

Address Type Mode Freq hh:mm

On UDP (HWM) Freq 12:00

Days Of Week To Send Data

☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☒ Sat ☒ Sun

Data Destination

Address inbound.hwmonline.com

Port 23024

Fall back dial time 06:00:00 Time 1

18:00:00 Time 2

SMS No. +447479638000

Alarms

Call frequency while in alarm 00:05

MNF Window end hh:mm 06:00

Flow level units Litres/sec

☐ Alarms sent via SMS

Alarm SMS No.

☐ Disable notifications when alarm condition cleared

☐ Resend active alarms at midnight

☐ Disable alarm fast call frequency

Cond 1 Cond 2 Cond 3 Cond 4 Cond 5 Cond 6

Persistence

1 out of 1

☐ Lower

☐ Upper

☐ Minimum Night Flow

☐ Rate of Change

☐ Dif<

☐ Out Band

☐ In Band

Setup Logger

UTC Time

Stop Logger

Copy Logger

Read Logger

☐ Expand Groups

GPRS Test

2. Now you can enter the configuration you require for each section
 - i. **Logger** – enter the site ID that you wish for the logger, e.g. Postal/ZIP code up to 7 alpha-numeric characters and the telephone number associated with the SIM card. If you ordered a SIM with the logger, this will have been programmed already for you, otherwise enter the number from your service provider in international format (e.g. +44...)
 - ii. **Logging Parameters** – Accept the default start time or enter your own. Default start time is in the past so the logger will begin recording immediately. You can delay this start time by selecting one from the calendar or enter the time directly from your number keypad. Set your log interval by ticking the “24 hour” box or enter a shorter time in the time box. (Default is 15mins)
 - iii. **Logging Channels** – Here you can configure your connections and what data you wish to see.

From the dropdown box select the Type of data to appear on Channel 1. This will depend on your individual order, but you may have a selection like that show here. Click “-----” if you do not wish to use that channel.

Next choose what mode of collation you wish
 Avg = average reading over the log interval
 Min/Max = Min/Max values measured over the log interval
 Spot = The value at the log interval
 State= the state of the switch at the log interval

Now, if required, enter the scaling factor for the chosen Type of logger input, click in the box and enter the multiplication factor you require. See appendix for info.

- iv. **Meter Readings** – If you wish the meter reading to be sent through to HWMOnline, enter the current value in the box(s). This needs to be configured on site as the timing is important, however it can be corrected later via HWMOnline.
- v. **APN** – If you have ordered a data pack from HWM you can leave this setting alone (as below) as your logger will have been preconfigured by HWM.

If you have ordered your data service & SIM card, then you will need to separately configure your service. HWM recommends that you allow the GPRS test utility to search for these settings automatically, however if you wish to enter them manually, click the button beside “Use the following settings”

You can now enter your data service provider’s details into the appropriate boxes.

Alternatively select your network from the drop down list of presets

- vi. **Time(s) Data sent** – Here you specify the Call Out requirement for the logger. There are 2 modes available, SMS and UDP. SMS is a one way unacknowledged data transfer service using the common text messaging service. UDP is a true 2 way confirmed data transfer process via the internet over a GPRS connection. Both have advantages, however HWM recommends UDP wherever possible as this offers the most secure method of data transfer.

Switch on the Call out by selecting “1” in the Address selector, then choose UDP or SMS from the Type selector.

- vii. **Call Addresses** – These will usually have been entered at the factory and should not be adjusted, however if you have your own data server, then you can enter either the telephone number for your receiving modem, or the UDP address & port no for where the logger is to send its data.

The fall back times specified here instruct the logger what to do in the event of the primary Call Out requirement not being met. This can be for 2 reasons:-

- a. If a connected external battery goes flat, the logger will default from the normal call out requirement to a 2 times per day routine. The times of these calls are specified by both Fall back 1 & 2.
- b. If a GPRS data call cannot be completed due to non-availability of a GPRS service, then the logger will try to send an SMS message at the Fall back 1 time.

Now choose your Call out mode, this can be either “Freq” for a call made at a regular frequency throughout the day or “Time” to specify up to 8 individual times during the day. Enter either the frequency (e.g. 00:05 minutes) or the time for the call in the box.

- viii. **Alarms** – The data logger has a comprehensive alarm system that you can configure to send out Alarm messages when certain defined conditions are breached.

When an alarm condition is triggered a new call frequency can be specified to allow the observer to gain more up-to-date data during an event.

Minimum Night Flow is measured between Midnight and the time specified here.

Choose your flow units

If you want SMS alarm messages to be sent, tick this box and enter a phone number

There are 8 possible different alarm conditions that can be configured, select each one from the tabs.

Choose the main alarm channel and then the difference channel if making a comparison.

Set your persistence or trigger point, e.g. 3 occurrences out of 5 incidents triggers the alarm

Choose your type of alarm from the list:-

Lower or **Upper** Limit breach
Minimum Night Flow (**MNF**) not met
Rate Of Change (**ROC**) faster than x per minute
Difference (**Dif**) between channels greater or less than limit
Either **In** or **Out** of **Band** set by Upper & Lower levels

Enter the alarm threshold

Enter the alarm clear Hysteresis

Note on Hysteresis: When an alarm is triggered, if the value is set to zero then immediately the threshold is re-crossed then another clear message will be sent. If there is a period when the alarm threshold is borderline, this can result in numerous messages for the same event. By specifying a value in the Hysteresis box, you can provide a window that allows the threshold to be repeatedly crossed without sending repeated messages. e.g with an Upper limit of 5 and a hysteresis of 1, the alarm will trigger at 5, but the clear message will not be sent until the value drops to below 4.

3. Final steps – By default the logger is set to UTC (Coordinated Universal Time, equivalent to GMT), however you can choose either an offset from this time, or for the logger to use your PC time.

UTC Time ▼


When you are happy with all the settings click the <<Setup Logger>> button to program the logger.

Setup Logger

Data Communications Confirmation – GPRS Test

It is important to confirm that your logger is communicating with the data server before you leave site (or to be confident, your office), so you should undertake a GPRS test before you leave the logger in the field.

1. Connect an appropriate GPRS antenna to the FME socket on the logger.

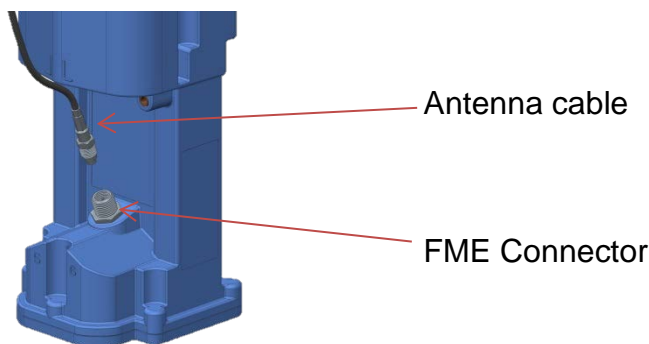

Note: If this is the final Antenna connection, ensure that the connector is tightened with spanner or pliers to prevent water ingress to the antenna plug as this will reduce performance. Do not over tighten.


2. Run the IDT and read your logger as in steps 1 to 3 above.

3. Now click the <<GPRS Test>> function button.

Read Logger

GPRS Test

4. The GPRS Test program will now automatically execute a communications check with the data server, DataGate™ and deposit a test message that can be checked later on.

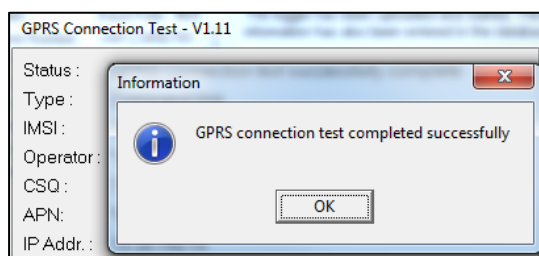

The test will take a few minutes and will confirm that the communication is successful.

Troubleshooting a GPRS test failure.

There are a number of reasons why a GPRS test may fail,



the following points should be checked before calling HWM support for assistance:-

Possible Problem	Solution
Network Busy due to excessive traffic. Commonly occurs around schools.	Retry the test after a few minutes.
GPRS signal not available at your location. Not all Cell masts carry GPRS traffic	The logger will call into the data warehouse once per day using an SMS message; relocate the logger if more frequent communications is required.
Network signal not strong enough. You need a CSQ (reported by the GPRS test) of at least 8 for reliable communications.	Relocate the antenna if possible or try alternative antenna configurations. Ensure antennas are vertically orientated where possible. See Antenna placement notes section.
APN settings incorrect.	The GPRS tester knows about a large number of cellular networks and will try as many settings as possible and correct any error automatically. If there is still a failure, then you need to check with your network operator that you have the correct settings for your SIM.

If you continue to experience problems with communication, you may need to check the network coverage in your location.

Antenna installation considerations

The method of installation at site should be carefully selected.


Signal strength within the cellular network can vary dramatically even within the same cell; proximity to the transceiver, type of antenna, position and angular orientation of the antenna, all have a significant effect on the ability of a device to reliably communicate with the cellular network. To ensure reliable GSM/GPRS data communications it is essential that the most suitable antenna is selected and it is mounted in the most appropriate location.

Installing a device without considering the type of antenna and its installation constraints can lead to disrupted and unreliable data communications and accelerated battery consumption. The following gives practical advice on how to minimise potential problems.

General Considerations

- Always perform multiple signal strength tests moving the antenna to different positions (please see below for description of signal strength test results).
- When fitting the “puck” antenna to a cabinet, always fit it to the top wherever possible. Ensure the surface is as clean as possible prior to attaching the antenna with the adhesive pad and that the nut on the inside of the cabinet is fully tightened.
- When performing Signal Strength Tests ensure that the chamber lid/cabinet door is in as close to normally closed position as possible to ensure an accurate result.
- If the device is installed in an underground chamber consider, where possible, locating the antenna in a secure position outside the chamber.
- Ensure that the antenna connector is in good condition and correctly tightened (finger-tight is not sufficient for the type of connectors used). Adequate tightening of the connector reduces the risk of water ingress and thereby signal attenuation as a result of changes in impedance.
- Never attempt to modify the dielectric seal of the antenna connector, it is designed to keep moisture away from conducting parts which lead to corrosion and attenuation.
- Consider using secondary environmental protection for the antenna connector such as self-amalgamating tape.
- Use the shortest possible antenna lead.
- Where long transmission leads are required, consider using a low-loss alternative to corrugated copper cables, e.g. Times Microwave white braided coaxial cable.
- The signal emitted from any antenna submerged under water will be significantly attenuated; place the antenna in a location where it will not become submerged.
- Always ensure that the latest firmware is installed in the device.

Installation Process Decision Tree

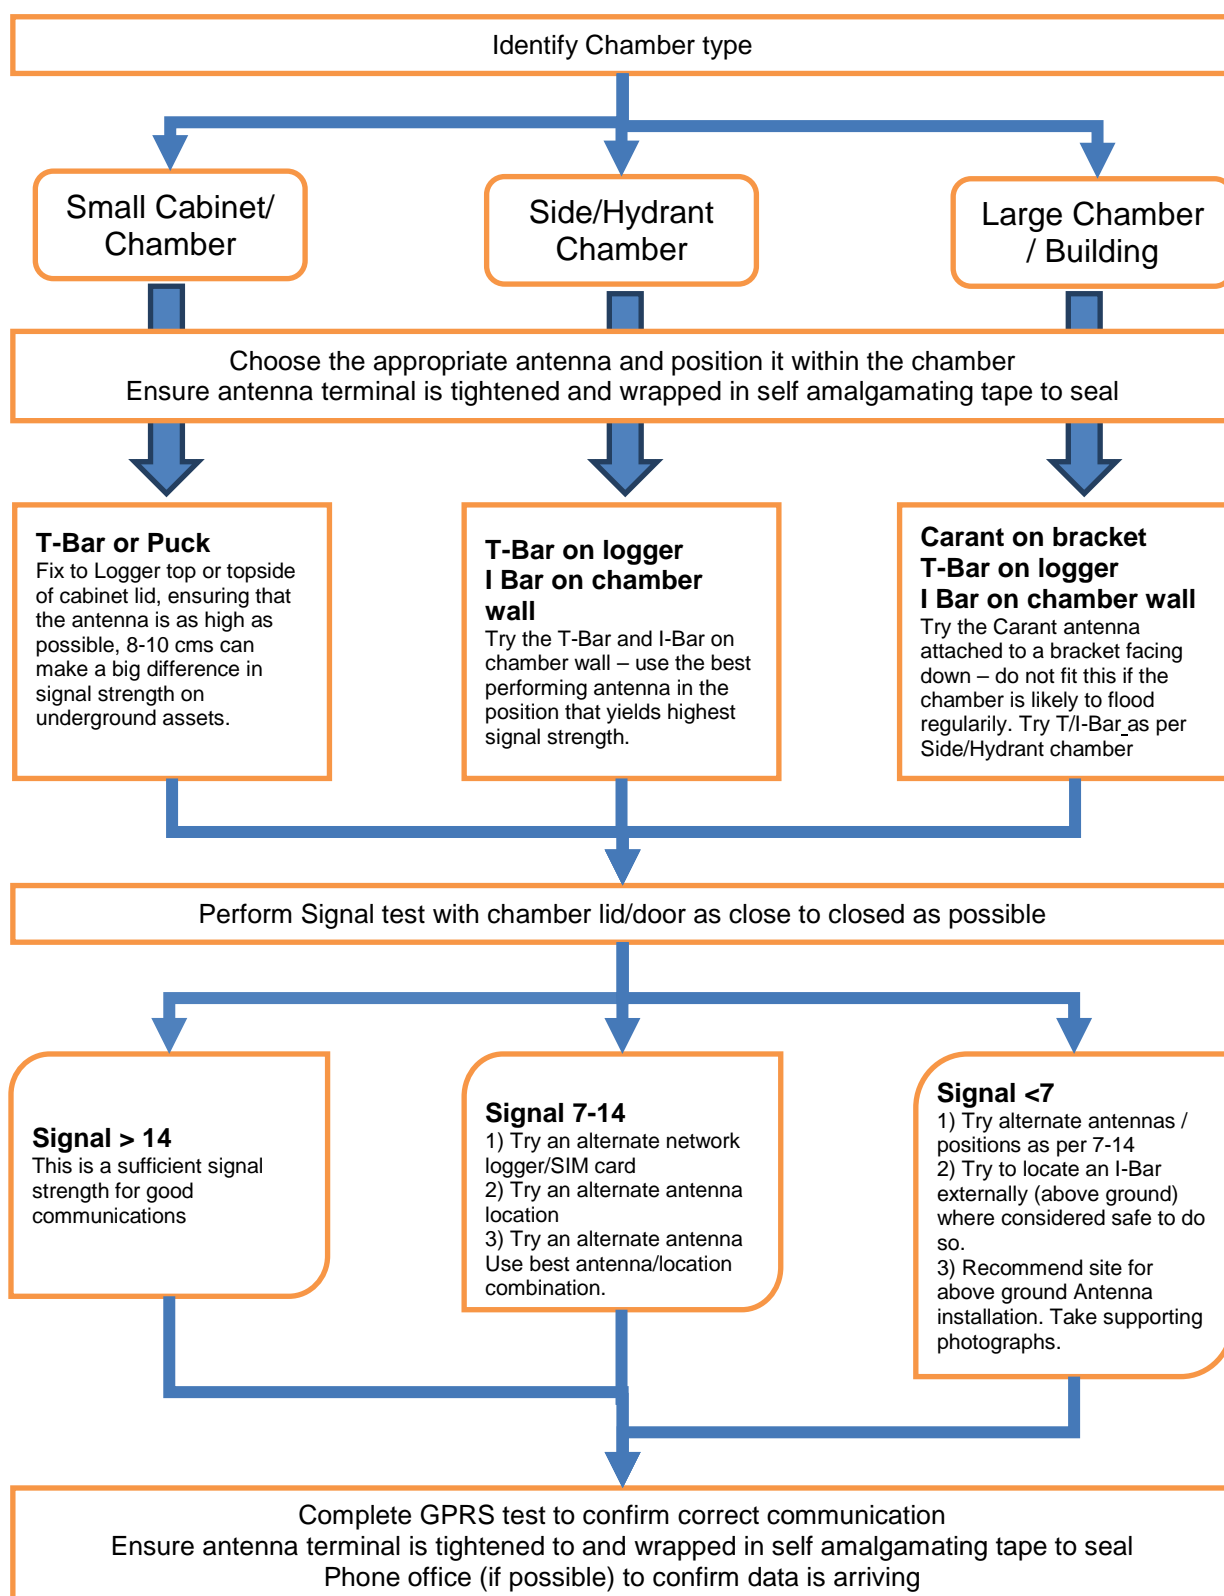


Cellular Network Signal Strength (as measured by CSQ Test)

- 0-7 Insufficient, the device may be able to register with network but will not be able to send or receive data reliably.
- 7-14 Marginal, depending upon the ambient conditions data transmission may be possible, important to select the correct antenna and install it in the most suitable location.
- 14-21 Adequate, Data transmission should be reliable.
- 21+ Ideal, Strong signal strength data transmission will be reliable.

Antenna Options

Carant Monopole antenna – For most installations the Carant antenna will give the best performance.

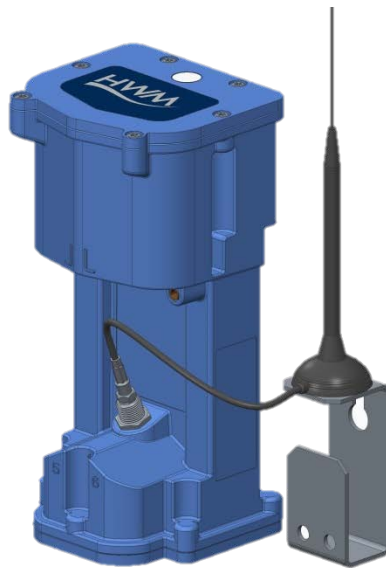


Carant Installations Considerations

For optimum performance the antenna requires a metal grounding plane, consider installing a metal bracket made of a ferrous material to attach the magnetic base of the antenna.

- Install the antenna near to as close to the surface in large underground chambers, ensuring that the lid will not interfere with the antenna when being opened/closed.
- This antenna is vertically polarised, it should always be installed in the vertical orientation.
- Never bend the radiating element of the antenna
- The Carant can also be attached to an installation bracket mounted to an existing marker post


Puck – This antenna is designed to be fitted into the top of a cabinet or post
First drill an appropriate hole in the top of the post, then fit the antenna.

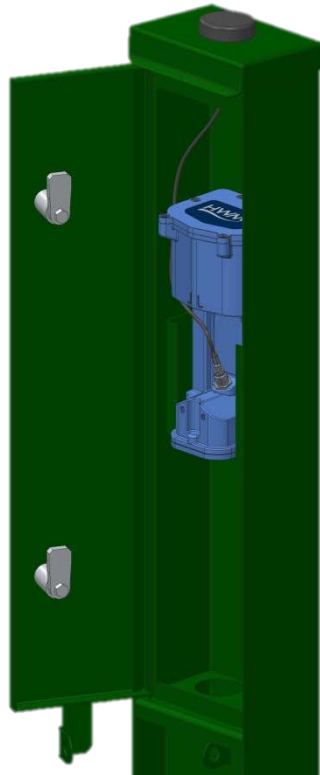

Puck Installation Considerations

- Ensure the top of the post is clean and that the adhesive pad is firmly located to prevent water getting into the cabinet.


T-Bar – This antenna is ideal for installing on top of the device especially in locations with restricted space.

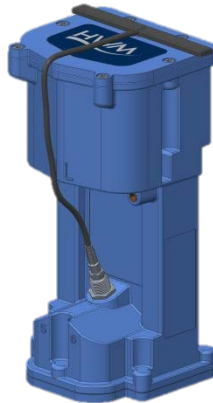

T-Bar Installations Considerations

- Adhere the antenna to external structures using marine quality adhesive (such as the brand 'Goop').
- Keep the antenna cable as short as possible, 0.5m.
- Avoid attaching the T-Bar to a metallic surface as this can adversely affect signal strength and performance, however it may be better than underground

I-Bar – The physical construction of this antenna makes it ideal for attaching to structures external to subsurface chambers.

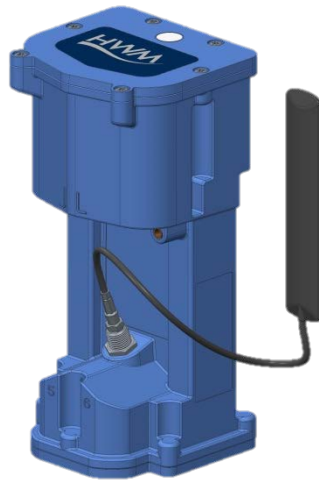

I-Bar Installations Considerations

- Antenna can be attached to the side wall of a small chamber or to the top side of the chamber lid.
- With the use of a longer cable version (or an extension cable where absolutely necessary) and a sealing compound, this antenna can also be fitted in the ground, on marker posts, in cracks or brickwork near to the chamber.
- If the antenna is to be placed outside the chamber care must be taken to physically protect both the antenna and cable from damage. This can be done by burying the cable or installing a suitable conduit.
- Avoid attaching the I-Bar to a metallic surface as this adversely affects signal performance

Installing your logger at site

Having performed all the steps in the previous sections, you should now be confident that your logger is configured for your purposes and is communicating correctly in a controlled environment. The next step is to physically install you logger on site.

Every site installation is unique with various types of connections, positioning or environmental conditions possible, the following recommendations will assist in a reliable installation.

- Keep the equipment neatly arranged in chambers so that cables are not crushed.
- Do not allow logger or battery to rest on the connectors as crush damage to cables can result.
- Ensure connections to any pulse cables are good and watertight (see page 21).
- Use wall mounting brackets where possible to keep the logger in clear space.
- Where space is tight, consider shortening flow cables to avoid squashing excess cable into small chambers.
- Position loggers away from sources of electrical interference such as motors or pumps.

Connecting the pressure

Before connecting the pressure to the logger you need to set the atmospheric zero point on the pressure sensor.

Using the IDT software, read the logger and then select the Hardware Tests tab. Ensure you follow all the safety instructions in the Safety Supplement.

Click the  button to start the zeroing process.

Once the new zero level is set, proceed with the physical connection to the logger.

The logger is fitted with a 1/4in BSPT thread. Ensure you follow the appropriate network guidelines for sealing the connection.



IMPORTANT: Always hold the metal body of the sensor with a 19mm A/F spanner; do not hold only the case.

Connecting the flow cable

When making a connection to the logger where a simple plug to plug is not available, you will often need to splice bare tails together. It is important that a waterproof connector housing is used, such as the “Tuff-Splice” enclosure available from HWM.



Fig. 1

Splice wires using supplied crimp connectors.

(DO NOT STRIP WIRES BACK).



Fig. 2

Insert spliced wires into the gel filled tube.



Fig. 3

Close Tuff-Splice lid for secure seal.



Final Connection

Note that Long data connections should always be made using screened cable. The use of screened cable will ensure maximum rejection of interference from outside sources. Always use a common ground point without creating ground loops.



 
WARNING

Always refer to the safety notes provided in the Supplemental User Manual 2/2 and the port parameters of the equipment you are connecting to the logger.

Taking a reading from the logger and hardware diagnostics

You are now ready to confirm that the logger is measuring real data from the sensors by taking an Instantaneous Value.

1. From the IDT menu bar, click the <<Hardware Tests>> tab.
2. Click the <<Start Test>> button to start to check the operation of your installed system.
3. The IDT will now display its measurements for a period of 10 minutes to allow you to diagnose any issues with cabling.



The screenshot shows the 'Hardware Tests' tab of the HWM IDT software. Red arrows point from text labels on the left to specific elements in the software window:

- Ambient and external probe temperatures** points to the '22.40°C 24.60°C' reading.
- Primary battery and external supply voltages** points to the '7.00V 11.60V' reading.
- Measured Pressure** points to the '15.30' reading.
- Flow Channel pulse info [Rate] [Count] [%age of Logger range]** points to the flow data rows for Flow 1, Flow 2, Flow 3, and Flow 4.
- Sonic Sense measurement** points to the '1087.00 mm' reading.
- Time until test stops & Manual Stop button** points to the 'Stop in (430)' button.
- Shortcut to Sonic Sense setup program** points to the 'SS Config' button.
- Open 10m power window button** points to the 'Power Window' button.
- Modem Diagnostics** points to the 'Modem' button.
- Force a data call now** points to the 'Force Call' button.

Other visible buttons include 'Re-Zero', 'Copy Logger', 'Read Logger', 'Expand Groups', and 'GPRS Test'.

When you are ready to stop the test just click the <<Stop>> button.

Note: If the flow readings do not meet your expectations, then check your connections and your calibration factors have all been entered correctly. If you still have incorrect readings, you may have a faulty pulse unit on the meter which will need to be replaced.

4. A "Power Window" allows you to keep the logger's modem turned on for a period of 10 minutes. This allows you to close the chamber lid and send a text message to it to confirm that communications is still OK. See final site checks on page 24.


5. Pressing <<Force Call>> forces the logger to send its data in immediately. Useful for when you wish to shift a logger to a new site.
6. The <<Modem>> button allows some more advanced diagnostics to be performed on the modem.

Indicates total number of calls made


Provides the current signal strength

Provides the IMSI & IMEI numbers for the modem


Enter a mobile phone number here & click <<Send SMS>> to instruct the logger to send you an SMS test message.

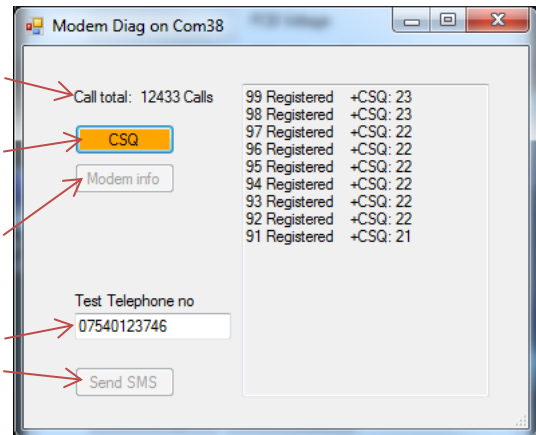

7. If you click the <<Data Collection>> tab you will now see a set of tools for downloading data from your logger for later uploading to the data server. It can also be of assistance for diagnosing problems.

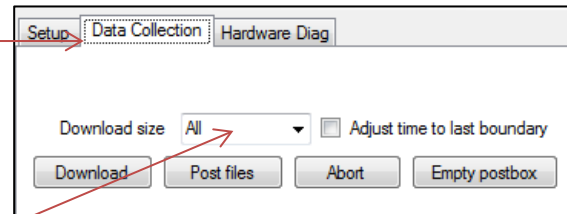

- a. From the Download size selection, choose how much data you wish to retrieve, from everything the logger has stored to any un-sent data since the last time the logger called in.
- b. Click <<Download>> and the data will commence downloading. If you wish to stop the process, click <<Abort>> and the download will cease.
- c. A small chart will now be displayed showing the data downloaded. By using your mouse to draw boxes in the graph area you can zoom into areas of interest. Click the small circles at the end of the drag bars to zoom out. By hovering your mouse over the points on the graph, you will see the exact value recorded.

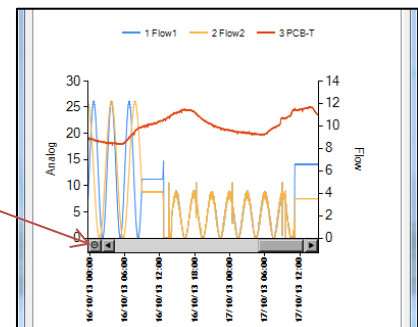

- d. If your logger is in a location where GPRS communication is not possible, you can now upload the data when you are next connected to the internet. Simply click <<Post files>> and all the data you have downloaded to your PC will be uploaded in one go. If you are downloading more than one logger in a route, all data is stored and transmitted together. If you decide that you do not wish to post the data you have downloaded, click the <<Trash Files>> button to remove the downloaded data from your PC.

Final site commissioning checks

Having made all the configuration checks, checked all the wiring is good, verified the instantaneous values are what you need and confirmed communications with a GPRS test, there is one last check that you can make with your mobile phone to confirm everything is working as it should.

1. In the Hardware Diag tab, click the <<Power Window>> button to power up the logger for 10 minutes.
2. Close the chamber or cabinet such that everything is in its final positions.
3. Now using a standard mobile phone, send a text message to the SMS number of the logger (see page 8 for the number) including the international dialling code if needed.
The text message should read **TTTT#**
4. After a few seconds/minutes (depending on the network operator) the logger will send a message back to you with details of its current status.
Example response from a logger:
TTTT138-002 V01.70CSQ:1010.9VyouridRT hh:mm ss dd-mm-yy ...
5. To decipher the message returned, please refer to the table below:

Message	Description
TTTT	Original command text without #
138-002	Logger type number
V01.00	Firmware version in Logger.
CSQ: nn	Signal strength nn (nn = 6 to 30)
10.9V	Operating voltage
yourid	Your Logger ID
RT hh:mm ss dd-mm-yy	Real Time Clock setting
ST hh:mm ss dd-mm-yy	First Time the logger was started
LR hh:mm ss dd-mm-yy	Last Time the logger was re-started
Ch1 (A) 0029.0	Channel 1 29.0 units
Ch2 (A) 0002.2	Channel 2 2.2 pulses/sec

6. If the CSQ: value in the message is OK then the installation is complete. The logger will automatically go back to sleep after 10 minutes.
7. There can be delays in the SMS network, so the response to your message may not be immediate. If you have had no response in 10 minutes, re-open the chamber and using the modem diagnostic send yourself a test SMS. If this gets through then improve the location of the antenna and try again.



Note: Some Roaming SIM cards do not accept incoming text messages. Check with your service provider if you are unsure.

Installation checklist

Before you leave site, review the following items to be sure that the installation is going to be a good one.

- ☐ Have you calibrated and zeroed your pressure transducer?
- ☐ Have you run an instantaneous value to confirm data quality?
- ☐ Have you set all necessary calibration factors?
- ☐ Have you run a GPRS test to confirm communications quality?
- ☐ Have you confirmed the GPRS message was received by DataGate™?
- ☐ Have you sealed any joins in the pulser cable?
- ☐ Have you confirmed an SMS message with the chamber lid/door closed?
- ☐ Have you recorded all your site information, serial nos, photos, etc?
- ☐ Have you closed all open chambers and recorded any damage?
- ☐ Have you left all wiring tidy and safe – not tied to ladders?
- ☐ Have you removed all your installation tools?
- ☐ Have you recorded the GPS location of the logger?

You have now completed your site installation and confirmed that the logger is operating and transmitting its data to DataGate™ (or your local data server). The next section deals with how to use DataGate™ and HWMOnline™.


Using HWM DataGate™

DataGate™ is the HWM secure data warehouse and is the data storage system behind the HWMOnline™ viewing platform (see later in this guide). DataGate™ stores the data messages from the logger and the information required for displaying all the logger details on HWMOnline™.

When you ordered your logger(s) with your HWM account manager, you will have been supplied with a Username and Password to the HWM systems. You can use DataGate™ to view your logger information and add additional information such as a meaningful site name, GPS location details, useful notes about the site, etc.

The following section explains how to log in to the system, enter basic logger details and explain what the information provided means. DataGate™ and HWMOnline™ are supported by most internet browsers, but for the purposes of this guide, Internet Explorer is assumed.

1. Locate your Username and Password and using your internet browser navigate to <http://datagate.mobifi.com>
2. Enter your username and password and click <<Login>>

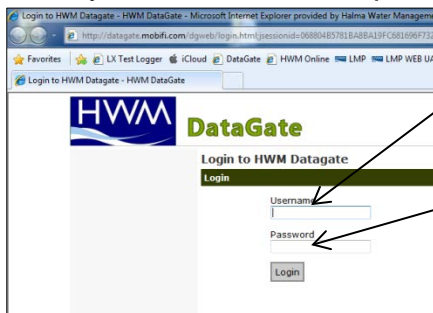


Your Username

Your Password

Note that passwords are case sensitive.

3. Once logged in, you will be presented with the main Summary screen. Here you can see a quick view of your logger fleet, showing the number of loggers in your fleet, the number of loggers that are not calling into DataGate™ (quiet), the number of loggers that are low or out of GPRS credits and the number of loggers whose contract is about to expire.

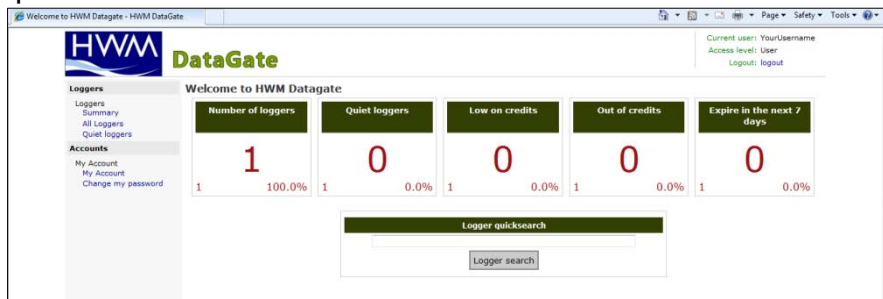

4. To see the full list of your loggers, click <<All Loggers>> from the left hand pane or if you know some detail about your logger, e.g. phone number or site info, enter it into the Logger quicksearch box and click <<Logger search>>.

5. You will now see a list of all the loggers you have requested.

Serial	Number	Site	SMS credits	GPRS credits	Outgoing credits	SMS received	GPRS received	Messages waiting	Last message received	Expiry date
AB123CD	44123456789	SOA12345 MyNetwork 1 of 1	5	982	1	0	18	0	03-Jan-2013 12:10:16	03-Jan-2018 23:59:59

In this view from Left to Right the list shows:-

- The logger serial number
- The logger's GSM telephone number
- The site ID for the logger
- The number of SMS message credits remaining
- The number of GPRS credits remaining
- The number of outgoing message credits remaining
- The number of SMS messages received from the logger
- The number of GPRS messages received from the logger
- The number of messages waiting for additional credits to be loaded
- The date and time that the last message was received from the logger
- The expiry date for the contract

6. Click either the logger serial number or the site ID for the logger you wish to examine/configure.


Serial number	Latitude
AB123CD	
Data number	Longitude
1581	
Mobile number	Height AOD
44123456789	
GSM data number	Start date
44123456789	03-Jan-2013 00:00
Site name	End date
SOA12345 MyNetwork 1 of 1	03-Jan-2018 23:59
Site id	Battery condition
SOA12345	0.0v
Date created	Signal strength
22-Oct-2010 08:50:21	6
Network	Version
Other	1.11
Type	Type
LX GPRS	FW-102-006U
Owned by	
Your Account	

Incoming GPRS messages	Incoming SMS messages	Outgoing messages
Deduct credits: true	Deduct credits: true	Deduct credits: true
Credits: 1000	Credits: 20	Credits: 20
Credits used: 18	Credits used: 0	Credits used: 0
Number received: 18	Number received: 0	Number sent: 0
Waiting for credits: 0	Waiting for credits: 0	Waiting for credits: 0
Last message: 03-Jan-2013 12:10	Last message:	Last message sent:
Alert after x days: 3	Alert after x days: 3	

This screen displays the full details about the logger you have chosen, the example above corresponds to the logger that you configured in previous sections so you can now see all the data concerning your logger.

Most information regarding the logger will have been entered for you already by HWM, but the following steps will show you how to confirm reception of the GPRS test conducted earlier and how to adjust the Site details, such as Site ID and GPS position.

 7. To verify the reception of messages, Click on the <<Incoming text>> tab




this will display a list of the last 100 messages received by the logger:-

Latest incoming data messages											
Number	Received	Unlocked	Network	Number	Source	Type	State	Deducted	Battery	Signal	Message
272105081	03-Jan-2013 12:10:16	03-Jan-2013 12:10:16		44123456789	HTTP	GPRS	PROCESSED	true	0	6	GPRS Test (V1.11)
272095893	03-Jan-2013 12:00:14	03-Jan-2013 12:00:14		44123456789	HTTP	GPRS	PROCESSED	true	0	7	GPRS Test (V1.11)

In this view the GPRS test message that the logger sent in step 4 on page 12 can be seen (highlighted) confirming that the logger can successfully communicate with the data centre.

 8. To edit the site information about the logger, click the <<Edit logger>> button.



9. You can now enter/edit the information about your logger:-

Logger type LX GPRS	Network name Other
Serial number AB123CD	Consider quiet after x days 3
Mobile number 44123456789	Latitude _____
Owner Your Account	Longitude _____
Site name SOA12345 MyNetwork 1 of 1	Height (Above Ordnance Datum) _____
Site id _____	
Site notes _____	

Fields that you can safely adjust are as follows:-



- Mobile number – Where HWM fit the SIM card, this number is entered by the factory. If you have installed your own SIM card, enter the number here. This number must **exactly** match the one entered in step 2.i on page 9, but **without** the leading '+’.
- Site Name – This is a long character string (up to 70 chars) for details of the logger location, e.g. 13 MyStreet, YourTown.
- Site ID – This is a shorter id, usually but not limited to the Zone/Location code of the logger, e.g. AB123CD.
- Site notes – This is a free entry field where you can put any relevant information you like, such as “Outside no 17” or “regularly overgrown”, etc.
- Consider quiet after x days – This allows you to define how long to wait before being alerted that the logger has stopped sending in data. When a logger is quiet for longer than the entered value, the entry in the “All Loggers” list will show in pink. The logger will also appear in the “Quiet Loggers” list.
- Latitude and Longitude – This is the precise location for the logger and allows HWMOnline™ to display the loggers location on a map.
- Height (Above Ordnance Datum) can be useful for computer network modelling.

Update logger

View logger

Serial number

AB123CD

Datagate number

1581

Mobile number

44123456789

GSM data number

44123456789

Site name

13 MyStreet, YourTown

Site id

AB123CD

Date created

22-Oct-2010 08:50:21

Network

Other

Type

LX GPRS

Owned by

Your Account

Latitude

51.634238

Longitude

-3.016764

Height AOD

12.34

Start date

03-Jan-2013 00:00

End date

03-Jan-2018 23:59

Battery condition

6.4v

Signal strength

6

Version

3.30

Type

FW-102-001U

Edit logger

Edit logger channels

Credits

Channels

Accounts

Alarm responses

incoming data

Incoming text

Outgoing messages

Latest incoming data messages


Number	Received	Unlocked	Network	Number	Source	Type	State	Deducted	Battery	Signal	Message
272299333	03-Jan-2013 18:06:19	03-Jan-2013 18:06:19		44123456789	HTTP	GPRS	PROCESSED	true	64	6	<div> <div>_NP443AW0C001E0A03010D000F0024</div> <div>051203010D001E0A03010D00030000</div> <div>010084030100640064006400000000</div> <div>0000000000000000000008F6C1700</div> <div>ED8E18000000000078000000000000</div> <div>0000006601C31E000043005F084300</div> <div>5F087900A4057900980543005F0843</div> <div>005F0843005F0843005F0843005F0843</div> <div>43005E0843005F0843005F0843005F</div> <div>0843005F0843005F0843005F084300</div> <div>5F0843005F0843005F0843005F0843</div> <div>005F0844005F0844005F0843005E08</div> <div>44005F0843005F0844005F0844005F</div> <div>0844005F0844005F08</div> </div>

29


Setting up DataGate™ Alarm Recipients

You can configure DataGate™ to relay alarm signals from your logger to e-mail addresses and/or send SMS messages to mobile phones.
To add a new recipient for alarm messages, follow the steps below:

1. Click <<My Account>>

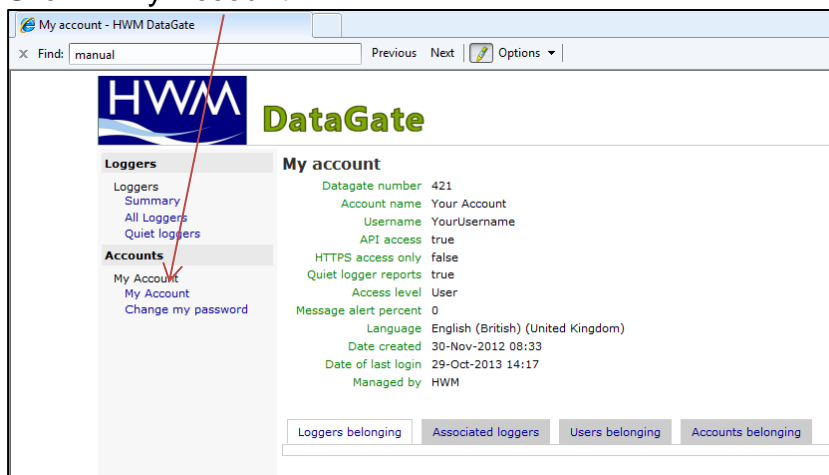


2. Next select the <<Users belonging>> tab

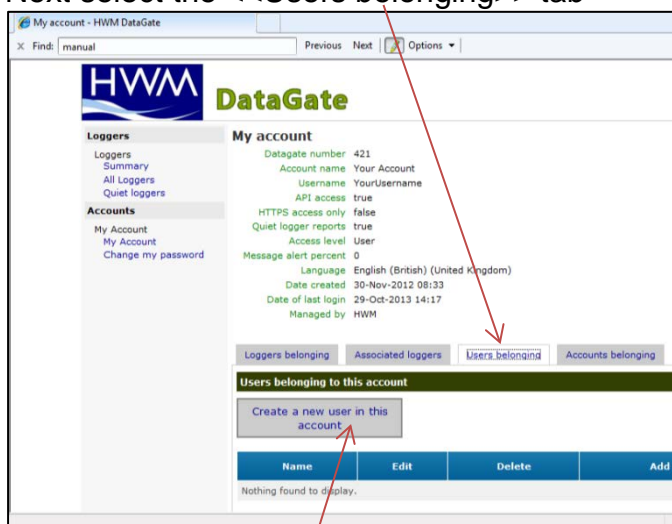

and click <<Create a new user in this account>>

3. Enter the new user name in the appropriate boxes

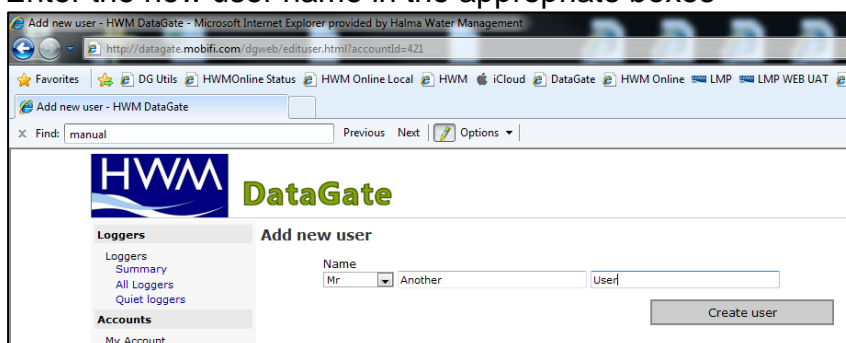

and click <<Create user>>

- Now click <<add>> in the “Add alarm” column

Loggers belonging Associated loggers Users belonging Accounts belonging

Users belonging to this account

Create a new user in this account

Name	Edit	Delete	Add alarm	Alarm actions				
Another User	edit	delete	add	Type	Address	Enabled	Edit	Delete
Nothing found to display.								

- Choose the “Type” of alarm from the dropdown – SMS or EMAIL

DataGate

Add new alarm

Type
SMS
EMAIL

Address

Enabled
☒

Create alarm action

then enter the SMS phone number or the e-mail address in the “Address” box.

and click the <<Create alarm action>> button.


Name	Edit	Delete	Add alarm	Alarm actions				
Another User	edit	delete	add	Type	Address	Enabled	Edit	Delete
				SMS	447540123456	true	edit	delete

- You can add additional alarms for each user by repeating step 4 & 5 and additional users by repeating steps 2 - 5.


Setting up channel settings (optional)

The data logger passes all its channel information automatically to HWMonline, however if you would like to change the channel description & type, manually add channels to DataGate™. The example below shows how to setup a new channel to be an Electricity channel.


1. Select your logger (see page 27) and click the <<Channels>> tab

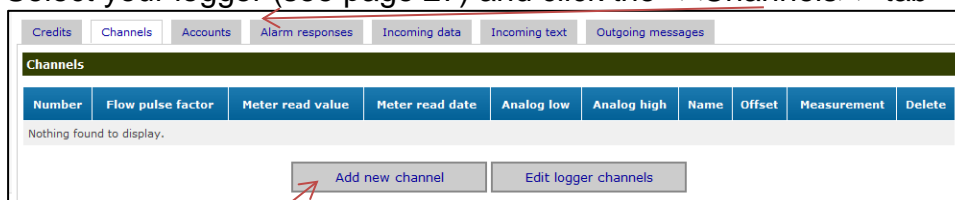

2. Click <<Add new channel>> once for each channel you wish to add, then click <<Edit logger channels>>

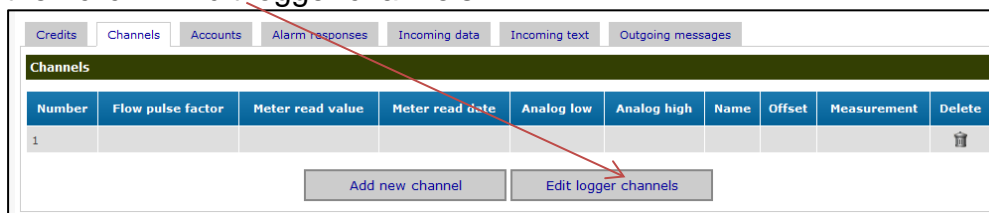

3. Enter the details for the channel you wish to configure

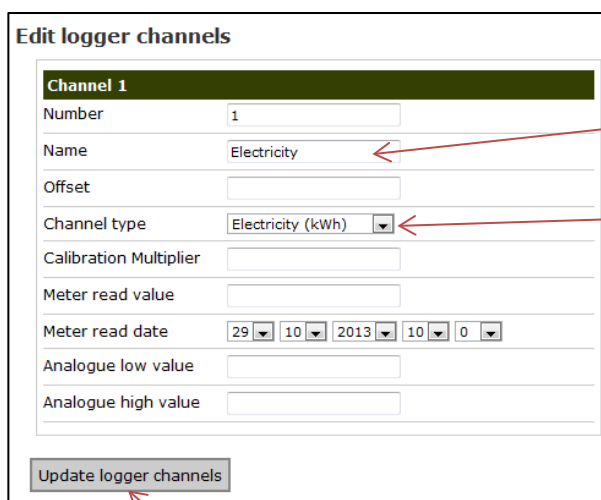

Enter a reference name.

From the drop down, choose your channel type.

Click <<Update logger channels>> to store the new names.

Any further information regarding DataGate™ can be obtained from HWM support or your account manager.

Using HWMOnline™


HWMOnline™ is a web viewing and management package for viewing the data for your fleet of loggers.

HWMOnline™ uses the data stored in the DataGate™ data warehouse to display charts for the data recorded by the loggers and other useful information like the location of the loggers.

If you have HWMOnline™ as part of your package, you will use the same username and password that was provided to you by your HWM account manager.

Viewing your data

1. Open a new web browser window and navigate to www.hwmonline.com

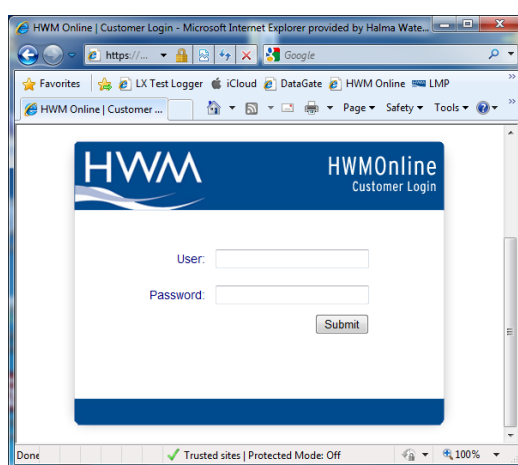


You will be asked to enter your Username and Password details.

2. Once logged in successfully, you will see the main window below

Logger selection dropdown

Time period to view

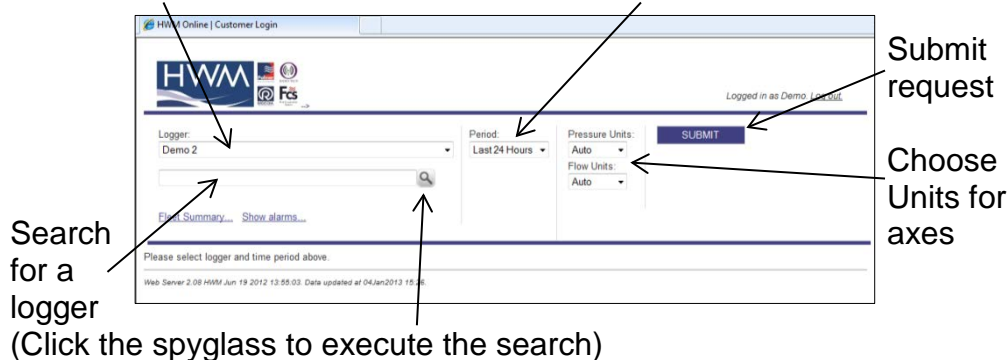


3. Chose the logger you wish to view and the appropriate period & units and click <<SUBMIT>>
HWMOnline will then retrieve your data from DataGate™ and display it on the page.



Note: If your logger has not been able to communicate with DataGate™ then the message “No Data Has Been Received For This Location.” will appear. Investigate the cause of the communication issue of contact HWM support for assistance.

4. The page below shows a typical result of a site query:-

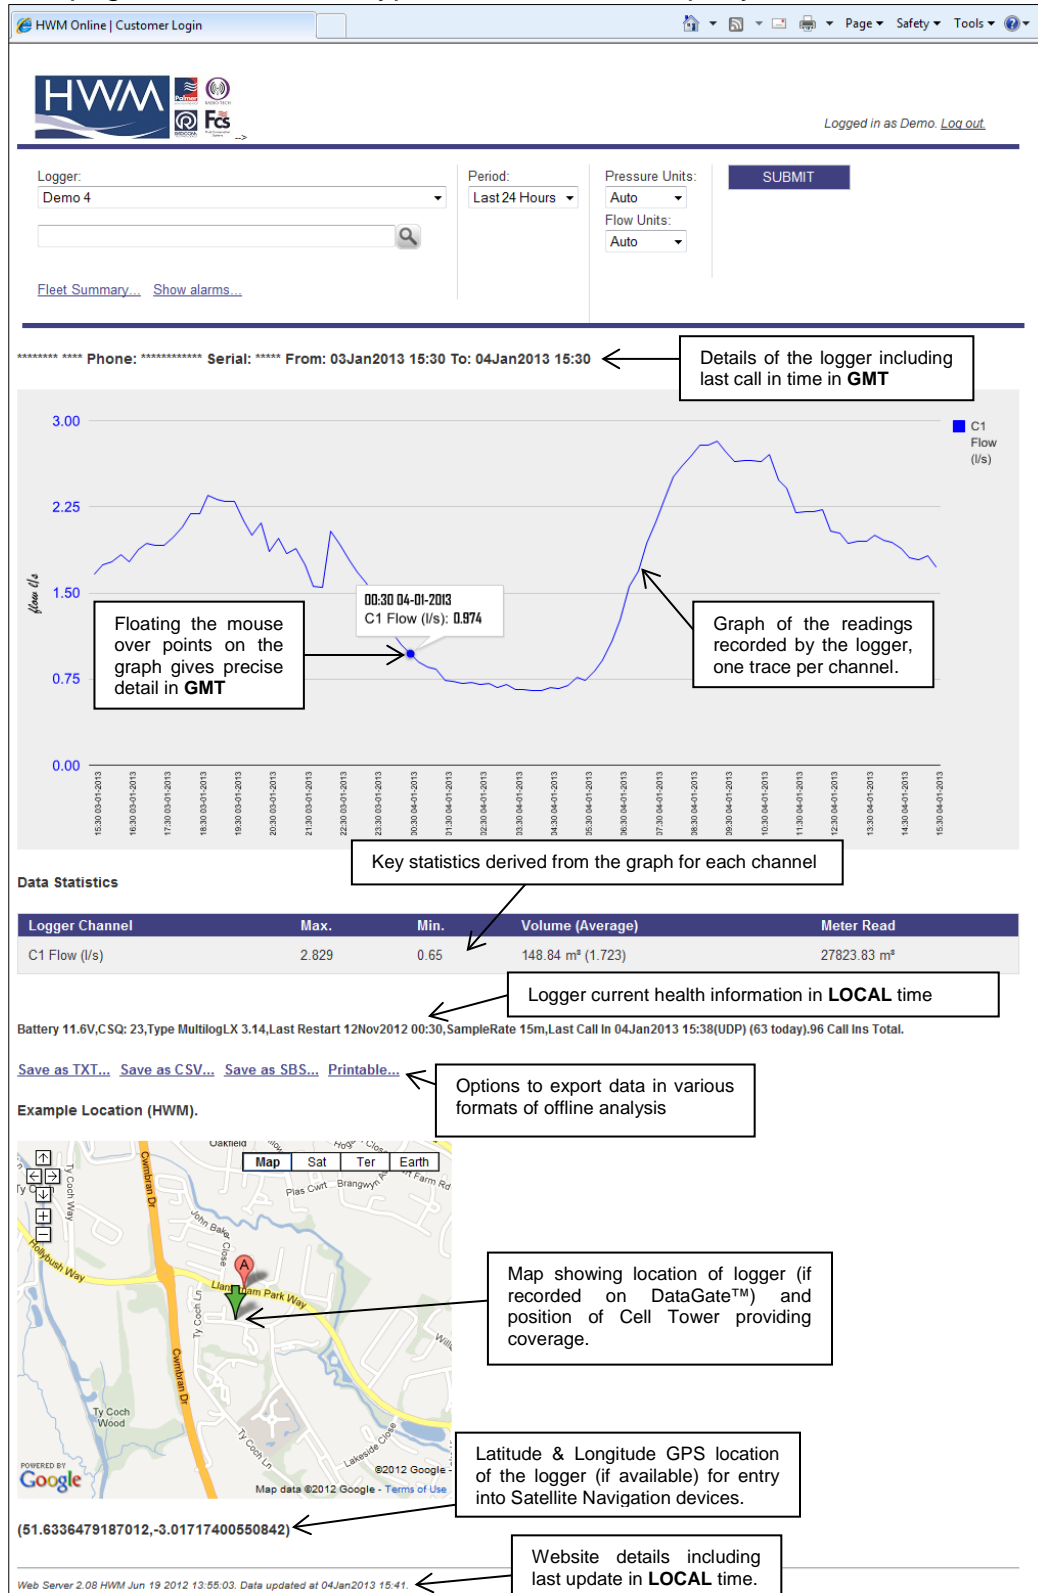

Note: The resolution of the graph reduces the more data you display. If you wish to zoom into an area of interest, use the "Custom" time Period and enter the precise range you wish to view.

Viewing information about your logger fleet

HWMOnline can also be used as a fleet management tool.

1. From the Home screen click the “[Fleet Summary...](#)” link.
2. The summary screen below appears:-

Details regarding your loggers

The screenshot shows the HWMOnline Customer Login page. At the top, it says 'HWM Online | Customer Login' and 'Logged in as Demo Logout'. Below this is the 'Fleet Summary' section, which contains a table with the following data:

#	Type	Serial	Address	Battery	Start Time	Channels	Last Call In
1	MultilogX 1.30	****	HWM SITE DEMO	7.1V 13	-	1Pr0(0.1) 2Pr20.2(0.1) 4Pr22.6(0.1) 5Pr0(0.1) 6Pr0(0.1)	- (0)
2	Multilog SMS	*****	Demo 2	0.0V 0	-	1F0.048(1) 1F0.319(1)	17Oct2012 07:06 (0/SMS)
3	RDL32LF/1100 2.29	****	Demo 3	6.6V 14	25Mar2011 15:30	2Pr0(0.1) 3F0.332(1)	04Jan2013 15:02 (2/FTP)
4	MultilogX 3.14	*****	Demo 4	11.6V 22	12Nov2012 00:30	1F1.854(1) 2Pr0(0.1)	04Jan2013 16:08 (65/15m/UDP)

Below the table are links for 'View Alarms...' and 'Graphing...'. The 'Generate Fleet Report' section has several checkboxes for selecting report content:

- ☒ Channel Settings
- ☒ Meter Readings
- ☒ Call In Settings
- ☒ Install Times
- ☒ Call In Report
- ☐ 7 Days
- ☒ Locations
- ☒ Parameter Report
- ☒ Pressure Flatlines
- ☒ Overpressures
- ☒ Negative Pressures
- ☒ No Change In Flow
- ☒ Zero Flows
- ☒ Negative Flows

There is a 'Save Defaults' checkbox and a 'SUBMIT' button. A text box indicates 'Options for creating a custom report'.

Web Server: 2.08 HWM Jun 19 2012 13:55:03. Data updated at 04/Jan2013 16:12.

3. From this screen you can either choose a logger to view or you can create a bespoke report containing details of your whole fleet of loggers.

Tick the appropriate boxes in the “Generate Fleet Report” area and then click the <<SUBMIT>> button. Depending on how big your fleet is, this may take a few minutes to create. You can then choose to save the report file or open it immediately in MS Excel.

Experiment with the settings until you find a format that you like, then tick the <<Save Defaults>> box so HWMOnline™ will remember the style for the next time.

A note about security settings

HWMOnline is hosted as an https:// site. If you do not see the maps on your browser, check your internet security options and add HWMOnline as a trusted site:-

The screenshot shows the 'Internet Options' dialog box with the 'Security' tab selected. The 'Trusted sites' section is highlighted, showing a list of trusted sites. The 'Add' button is clicked, opening a 'Trusted sites' sub-dialog box. In this sub-dialog, the 'Add this website to the zone:' field is filled with 'https://www.hwmonline.com'. The 'Add' button is clicked again. The 'Trusted sites' sub-dialog box is then closed, and the 'OK' button is clicked on the main 'Internet Options' dialog box.

Select “Tools”, “Internet options” and “Security”. Click “Trusted sites”, then the <<Sites>> button. Click <<Add>> to add HWMOnline as a trusted site, then <<Close>> & <<OK>>. You may need to restart your browser.


Appendix 1 – Fitting your own SIM card



Warning:

DO NOT OPEN WHEN EXPLOSIVE ATMOSPHERE IS PRESENT.

1. Remove the lid of the logger taking care not to damage the seal.

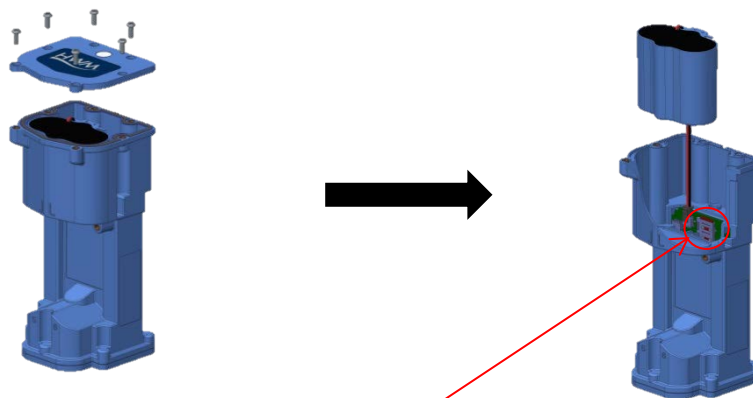

2. Lift out the battery, the SIM card slot is located beside the battery plug.
3. Insert the SIM with the shaped corner facing down and away from the battery connector.
4. Refit the battery and lid ensuring the screws are retightened to 1.2Nm to ensure the logger remains water tight.
5. Proceed with programming the logger and ensure you enter the new SIM phone number into the software (page 9) including the '+' symbol and the international dialling code with no spaces.
e.g. +4477xxxx.

This is an important step as the logger sends an SMS message to itself once a month to synchronise its clock. If the wrong phone number is entered, this can result in an international SMS message being sent.

Appendix 2 – Technical specifications

Sensor Input Options	Digital	Up to 4 user configurable pulse/status inputs Reed switch contact closure type or other pulse input Up to 128 pulses per second
	Pressure Internal	100mBar to 20Bar 0.5% FSD available on request Female ¼ BSPT thread
	Pressure External	100mBar to 100Bar 0.5% FSD available on request Female ¼ BSPT thread
	Temperature	PT100 -40°C to 140°C (2/3/4 wire compatible)
	Level Detection	Ultrasonic Level Detection 2.5m or 5m using HWM "Sonic Sens"
Control output ports	Digital	2 independent configurable outputs. e.g. pulse replication (option)
Logger Features	Memory	Non-volatile primary recording 2 million readings (larger sizes available on request) Future proof in field local and remote upgradable software
	Analogue	Variable sample rate 5s to 24hrs (*please note that this may affect battery life and communications cost)
	Alarms Logger ID	Lower/Upper Limit, Min Night Flow, Rate Of Change, Channel Difference, In/Out of Band alarm types. 6 programmable condition sets available sending SMS alarm message to a mobile phone Up to 7 alphanumeric characters. Also readable factory set serial number in firmware
	Clock	On board 24 hour synchronized real time clock with date facility
	Internal Cellular modem	GPRS to HWM DataGate or customer specific FTP server, multiple messages per day User replaceable SIM card
		Quad band modem supplying 850/900/1800/1900MHz bands (3G option)
		GPRS can send data down to every 5 mins (*please note this will affect battery life)
	Dimensions (mm)	200H x 97W x 88D
	Weight	1kg
	Operating Temp	-20°C to +60°C (-5°F to +140°F)
	Ingress protection	IP68
	Power	User Replaceable Lithium Thionyl-Chloride battery pack operational for 5 years + under standard operating conditions*, complete with low battery alarm External power available with a suitable ATEX certified power source (option)

* Typical battery life expectancy is based upon achieving network registration regularly and with ease. If the GPRS-enabled network registration is unachievable, the GPRS logger will convert to SMS-only operation after 24 hours and will attempt to re-establish GPRS communication when possible. A signal strength test should be performed during installation.

Order Codes – Optional extras	
COMMS USB/IS	USB programming cable
COMMS-Y USB/IS	USB programming cable with flow pulse pass through
INTBATTPACK/7V2/H95	7.2V Replacement Battery Pack
CABA9425	RJ11 pulse input cable
CABA9420	4 input pulse/status cable (bare tails)
CABA8472	Sonic Sense connection cable
AER9005	Puck antenna for cabinet mounting 0.5m
AER8015	T-Bar antenna 0.5m
AER8020	I-Bar antenna 1.0m
AER8025	I-Bar antenna 3.0m
AER6000	High Gain antenna 2.5m
AER6001	High Gain antenna 5.0m
AER6003	High Gain antenna 8.0m
AER6002	High Gain antenna 10.0m
CABA8510	FME Antenna Extension 10.0m
CABA8510-1	FME Antenna Extension 8.0m
CABA8510-2	FME Antenna Extension 5.0m
CABA8510-3	FME Antenna Extension 2.0m

HWM-Water Ltd
Ty Coch House
Llantarnam Park Way
Cwmbran
NP44 3AW
United Kingdom
+44 (0)1633 489479
www.HWM-water.com



MAN-142-0001-A Intelligens - COMLogIS Installation User Guide.docx