





Ref: FAQ0336

Version: 1.0


Title – Datagate neg values to pos

Made By: AB 06/12/13

(Issue 1)

Question – How do you change negative logger data to positive in **Datagate / HWM Online**

In instances where a logger has a fault which has turned normally positive flow data into mirror image negative data it is possible to correct this in Datagate / HWM Online for all data as follows:-In your Datagate Account locate the logger and -

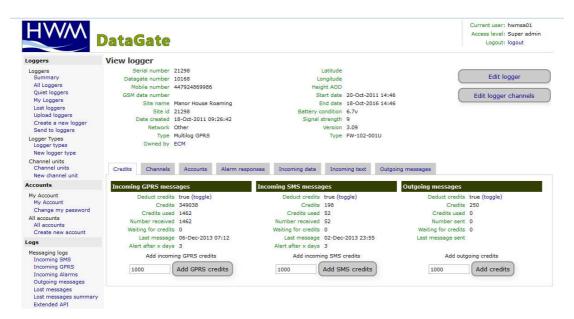

Select the 'Channels' tab -



And select 'Edit logger Channels'

Select the channel you want to apply the configuration to -










Title - Datagate neg values to pos

Made By: AB_06/12/13


(Issue 1)

Version: 1.0

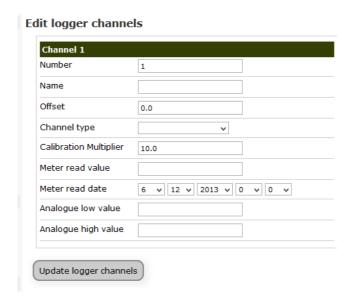

For the Analogue low value – put in zero (0.0)

For the Analogue high value – put in one (1.0)

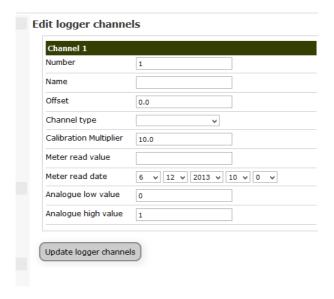

Then select 'Update the logger channels'

This will modify the all in Datagate / HWMOnline data by transposing negative values to positive values.

Document History:

Edition	Date of Issue	Modification	Notes
1st	06/12/13	Release	