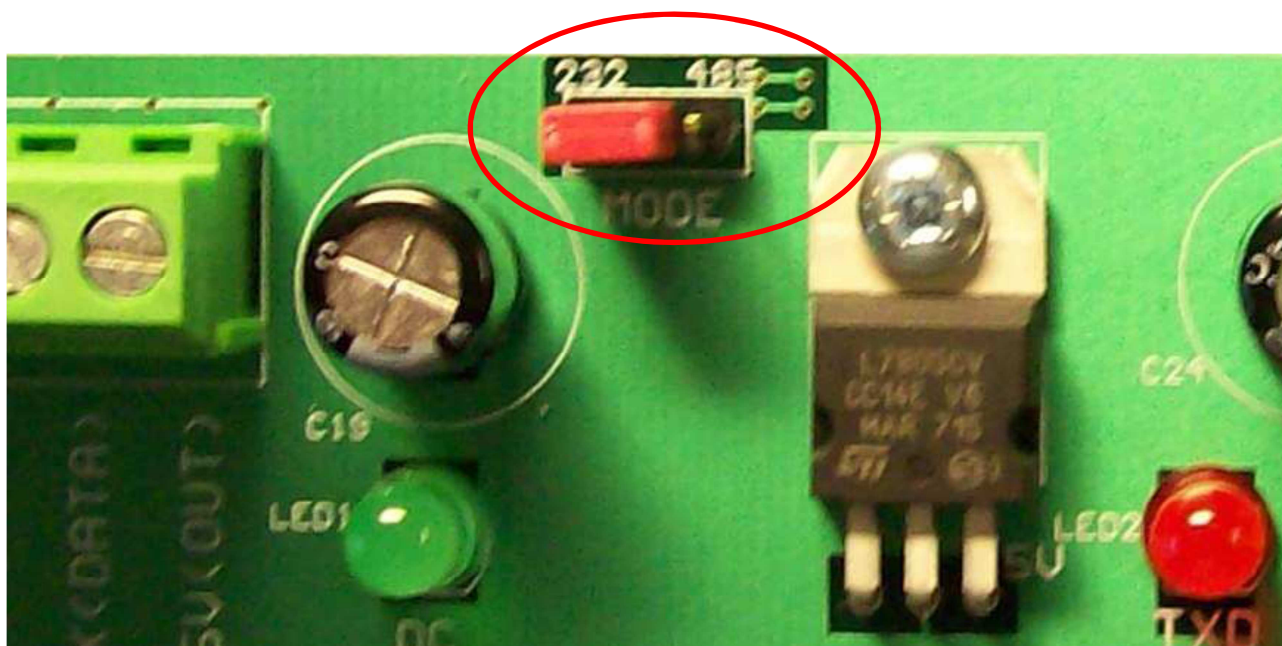# Radiotech – Modbus Receiver – how to configure jumper for RS485

The communication mode selection jumper should set to either:

Left + Middle of header pins for RS232 mode.
Or *Middle + Right* of header pins for RS485 mode.

Document History:

Edition	Date of Issue	Modification	Notes
1st	05/07/13	Release	
2nd	22/09/15	Format update	