


How To Install HWM Loggers On To Technolog Controllers



Step 1 – Remove controller from chamber. AT NO POINT TOUCH OR REMOVE GREEN PIPE

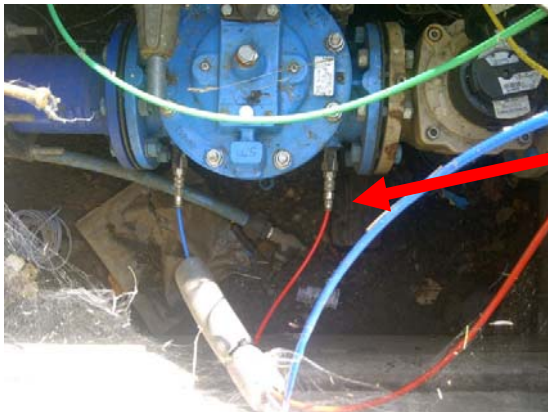


Step 2 – Remove quick release pressure fitting containing the thin red pipe from the PRV



Step 3 – Connect a new T-piece to the pressure taping on the PRV where you have just removed in Step 2 and reconnect up the thin red pressure hose from the Technolog controller to one side of the new T-piece


How To Install HWM Loggers On To Technolog Controllers

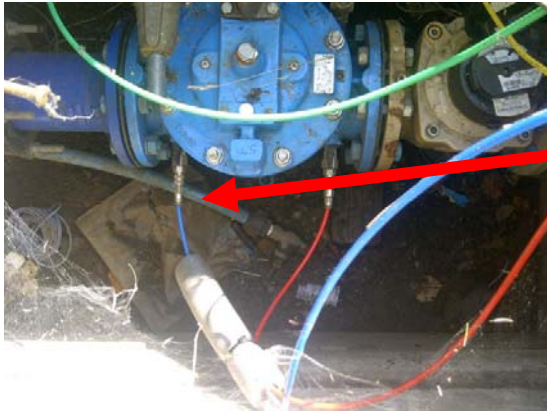


Step 4 – Remove quick release pressure fitting containing the thin blue pipe from the PRV




Step 5 – Connect a new T-piece to the pressure taping on the PRV where you have just removed in Step 4 and reconnect up the thin blue pressure hose from the Technolog controller to one side of the new T-piece

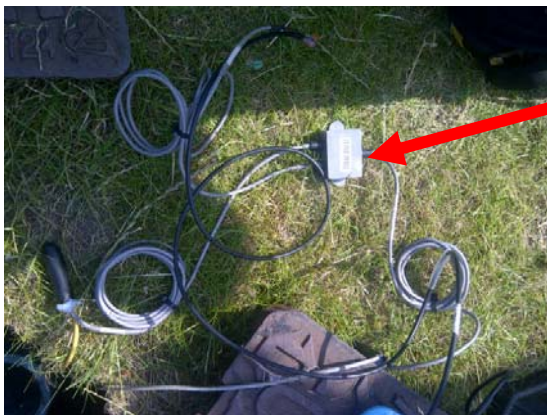

Step 6 – Do normal flow splice from HWM flow cable, but you must use a Technolog splitter box CBL250. See diagram below. Combine these with normal relevant pulse cable colours for connecting pulse unit, using standard crimping techniques.

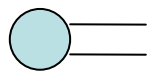

Pulse Unit

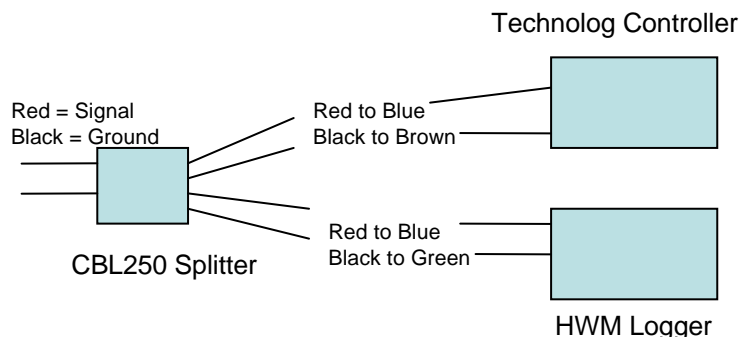

Step 7 – Install Radcom logger as normal, remembering install pressure transducers with Channel 1 on inlet (red pipe) and Channel 3 on outlet (blue pipe), using the last quick fit connector from the new T-piece previously installed.

Any problems contact
James McNab Utilitec
07885706170