



Ref: FAQ0329

Version: 1.0

Title – Radiotech – TX wiring to meters

Made By: AB 22/09/15


(Issue 2)

## Radiotech Pulse Transmitters - How to wire to Cybal, Sappel, Zener and Sensus HRi A3 Sensors

Cybal Itron, Sappel & Zener

White is pulse

Brown is GND

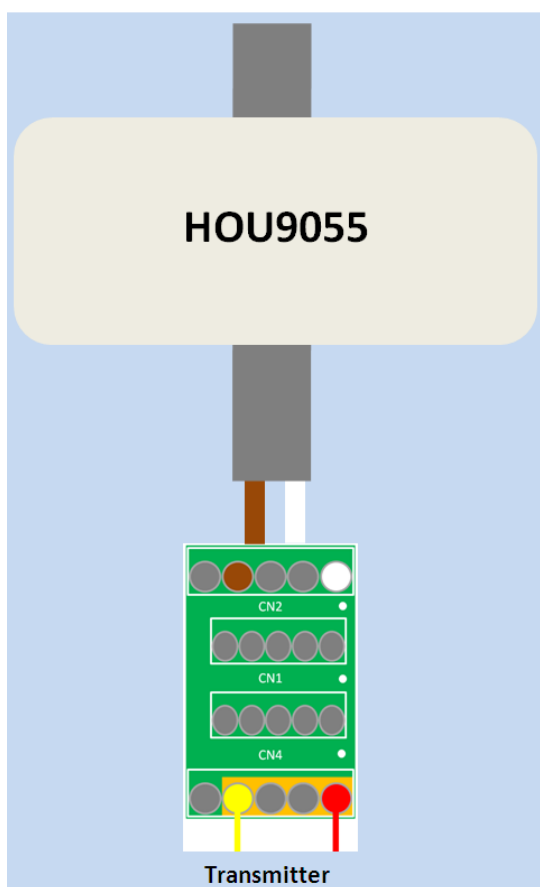

Zenner Sensor	Transmitter
Brown	GND - Yellow
White	Ch1 - Red



**Ref: FAQ0329**


**Version: 1.0**

**Title – Radiotech – TX wiring to meters**

**Made By: AB 22/09/15**

**(Issue 2)**

## Sensus HRI A3

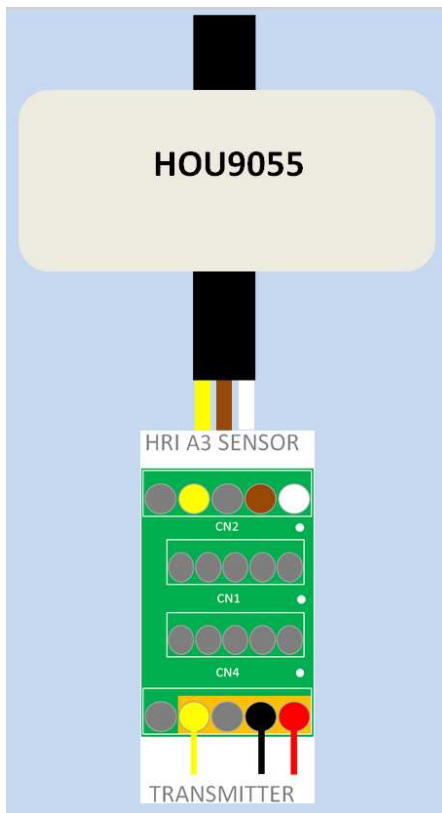

HRI A3 Sensor	Transmitter
Yellow	Ch2 - Yellow
Brown	Black
White	Ch1 - Red

## Document History:

Edition	Date of Issue	Modification	Notes
1st	05/07/13	Release	
2nd	22/09/15	Format update	