



Ref: FAQ0362

Version: 1.0

Title-Hydrins 2 plastic case mode change

Made By: AB 15/05/15

(Issue 1)

Procedure for changing Hydrins with display for use without display

1. Undo the 6 lid securing screws and remove the lid.



2. Undo the second battery connector plug





Ref: FAQ0362


Version: 1.0

Title-Hydrins 2 plastic case mode change

Made By: AB 15/05/15

(Issue 1)

3. Connect the second battery and secure it with the strap provided. Secure the spare connector under the strap.

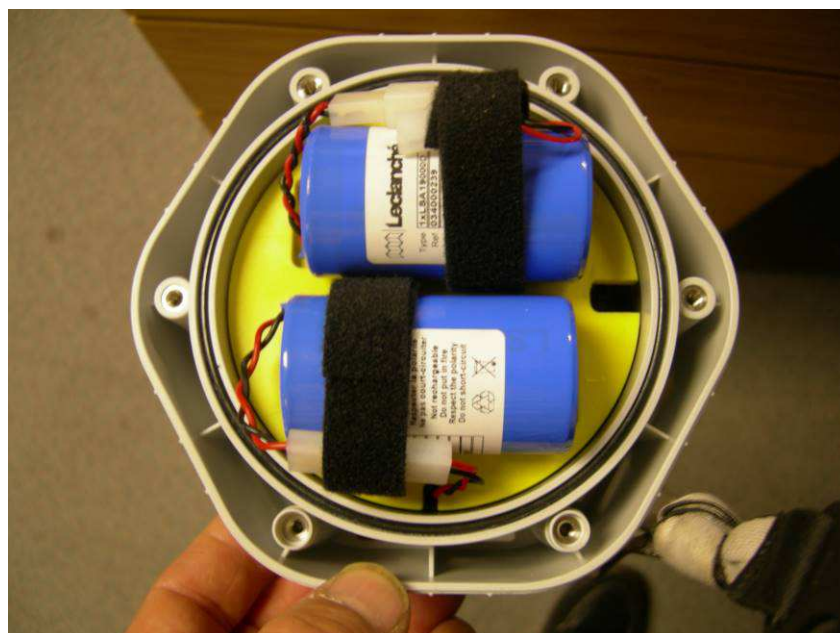

With a small implement, move the Mode selection switch from position 2 (with display) to position 1 (without display). The switch can be seen in the slot indicated below.





Ref: FAQ0362


Version: 1.0

Title-Hydrins 2 plastic case mode change

Made By: AB 15/05/15

(Issue 1)

Reassemble lid (note it can only be orientated in one direction using the two bosses provided as indicated below). Ensure the 'O' Ring is properly seated in its groove before you re-assemble the lid.

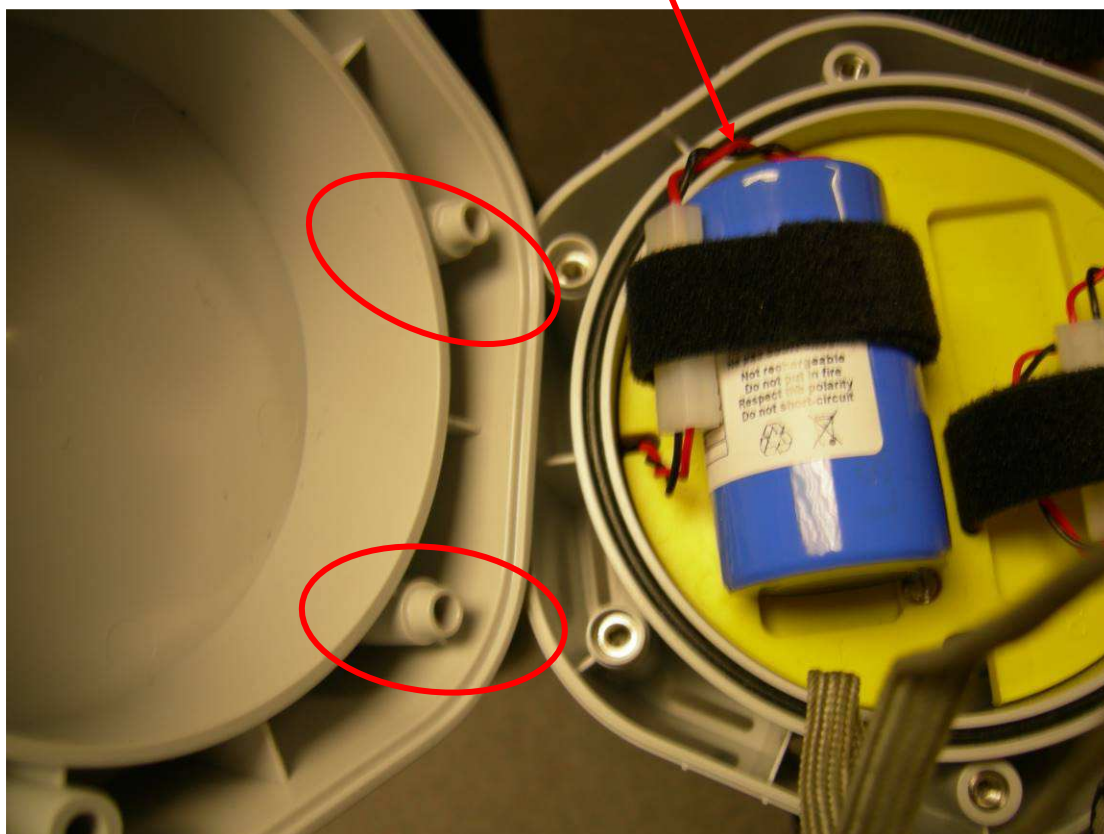

Tighten the lid securing screws to 0.5Nm

Document History:

Edition	Date of Issue	Modification	Notes
1st	15/05/15	Release	