



Ref: FAQ0363

Version: 1.0

Title-Hydrins 2 plastic case mode change

Made By: AB 15/05/15


(Issue 1)

Procedure for changing Hydrins without display for use with display or external power option


1. Undo the 6 lid securing screws and remove the lid.



2. Remove the Velcro strap securing Battery 2 and undo its inline connector and remove this battery

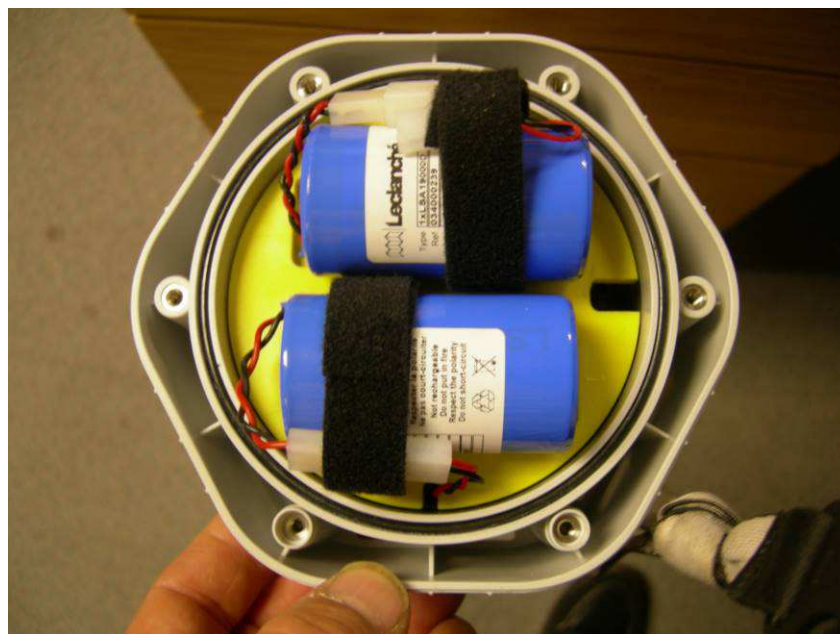


3. Locate the spare connector half and connect it to the other half which was just removed from Battery 2

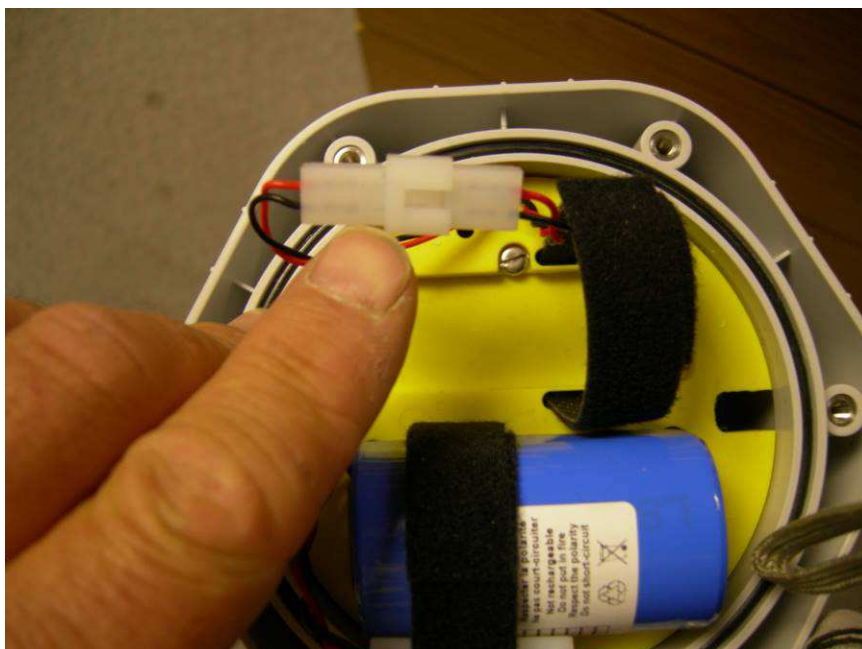

4. With a small implement, move the Mode selection switch from position 1 (without display) to position 2 (with display). The switch can be seen in the slot indicated below.



Reassemble lid (note it can only be orientated in one direction using the two bosses provided as indicated below). Ensure the 'O' Ring is properly seated in its groove before you re-assemble the lid.

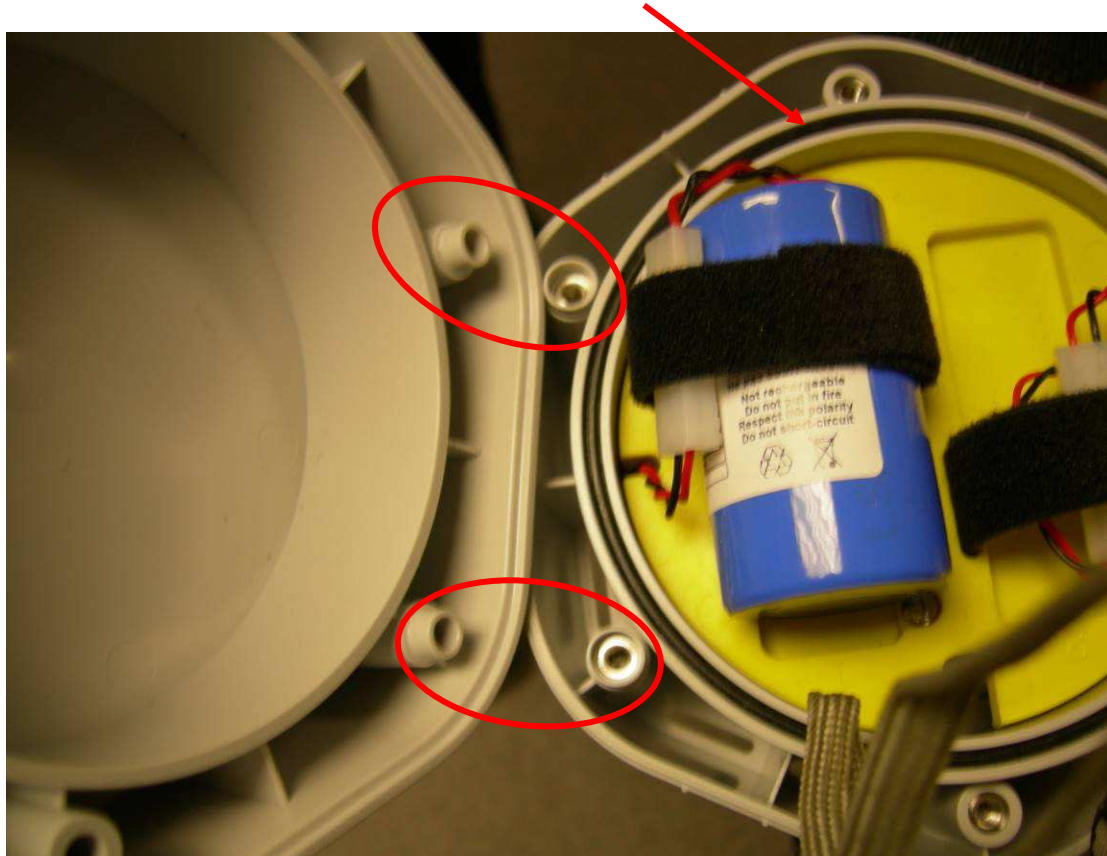

Tighten the lid securing screws to 0.5Nm

Document History:

Edition	Date of Issue	Modification	Notes
1st	15/05/15	Release	