




Ref: FAQ0220	Version: 1.0
Title –Wessex LoLog – setting the screen	
Made By: AB 18/09/15	(Issue 2)

LoLog Vista equipped with Wessex Firmware – how to set the screen

Using Wessex RM301 Software

Go to F1 – Setup

Then F9 – Display Options

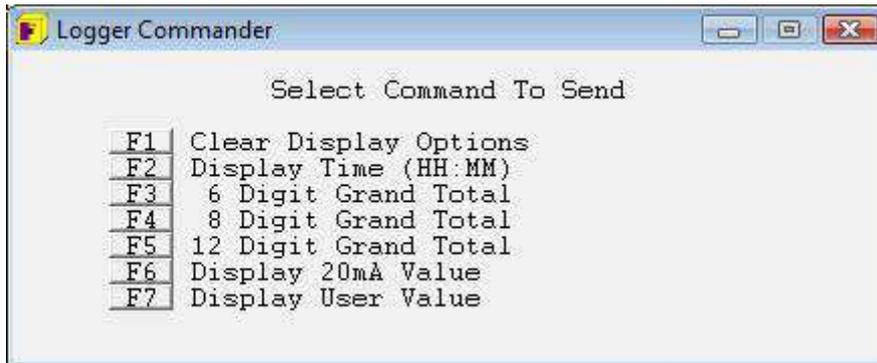

Press F1 to clear current options.

Add the elements of the display sequence you wish to add using F2 to F7

Document History:

Edition	Date of Issue	Modification	Notes
1st	04/01/13	Release	
2nd	17/09/15	Format update	