



Ref: FAQ0174

Version: 1.0

Title – MicroCall+ with Hydrophones


Made By: AB 17/09/15

(Issue 2)

## How to set up MicroCall + for use with Hydrophones

The hydrophone options were added to the Microcall+ software in version 1.19b. The update for this is available for download on the HWM web site.

You need to go to the HWM web site (<http://hwm-water.com/>) and download the items as highlighted in the screenshot below in the language you require. If you already have the “File Transfer Utility” you only need to download the first item highlighted below (the language software file).

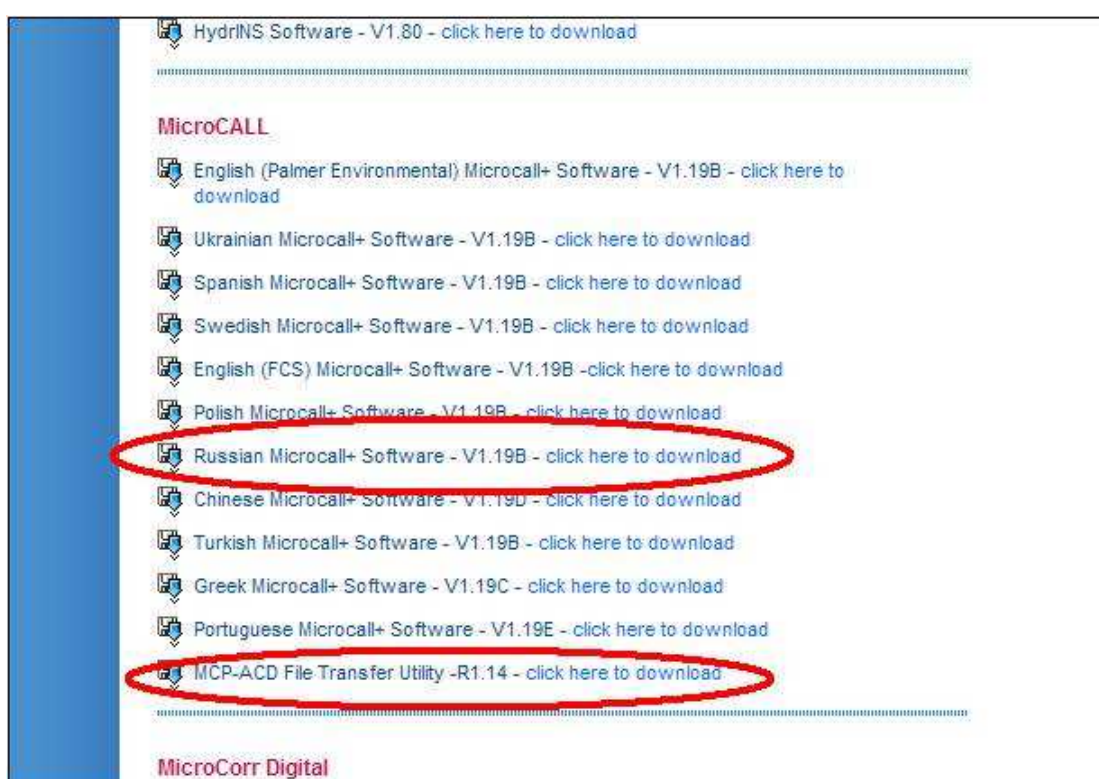

The first highlighted item is the software that is uploaded to the Microcall+ unit. This contains the options for Hydrophone usage.

The second highlighted item is the utility that enables you to upload software updates to the Microcall+ unit.

A user guide is supplied with the File transfer Utility. This will help you re-program the unit.

Note that re-programming the Microcall+ unit takes about 50 minutes.

### Document History:

Edition	Date of Issue	Modification	Notes
1st		Release	
2nd	17/09/15	Format update	