



Ref: FAQ0207

Version: 1.0

Title- Permalog+ set up DMA on PC software


Made By: AB 18/09/15

(Issue 2)


How to set up a DMA database on Permalog PC software

Open Permalog PC software

Click on file >New

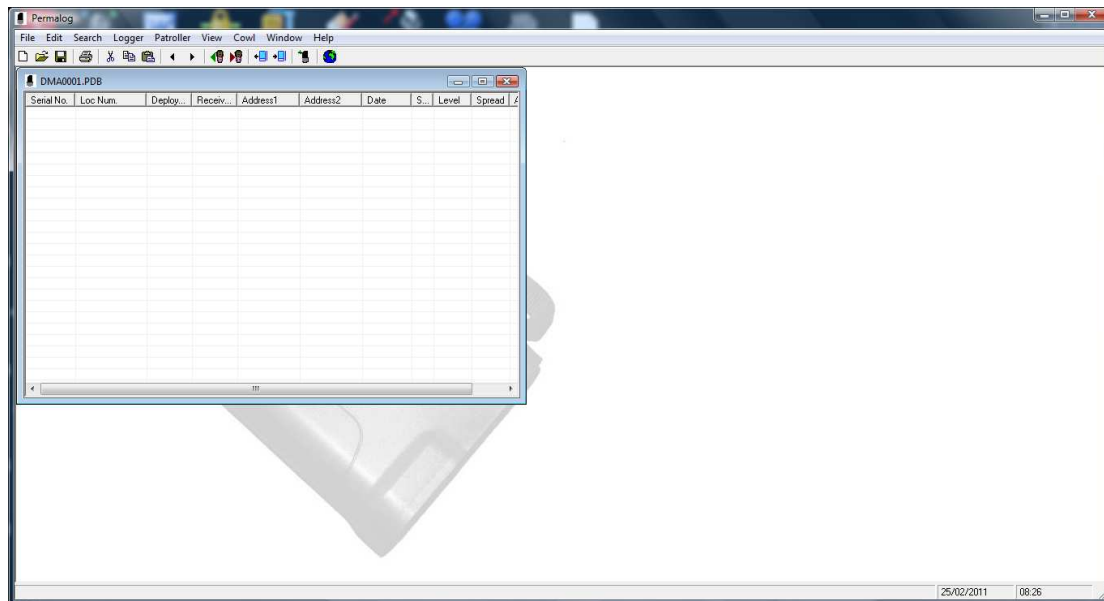

Then Select Logger and Fill

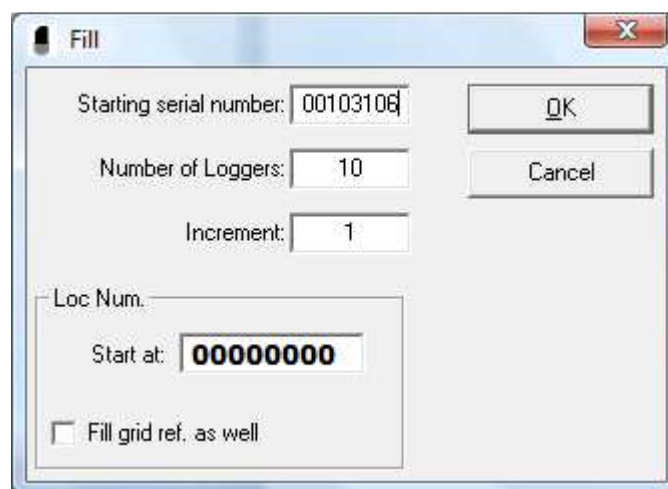

Enter the number of loggers you have and the starting serial number (if you have a batch of consecutively numbered loggers)

Then OK – the Database will be populated with all the loggers




Ref: FAQ0207

Version: 1.0


Title- Permalog+ set up DMA on PC software

Made By: AB 18/09/15

(Issue 2)

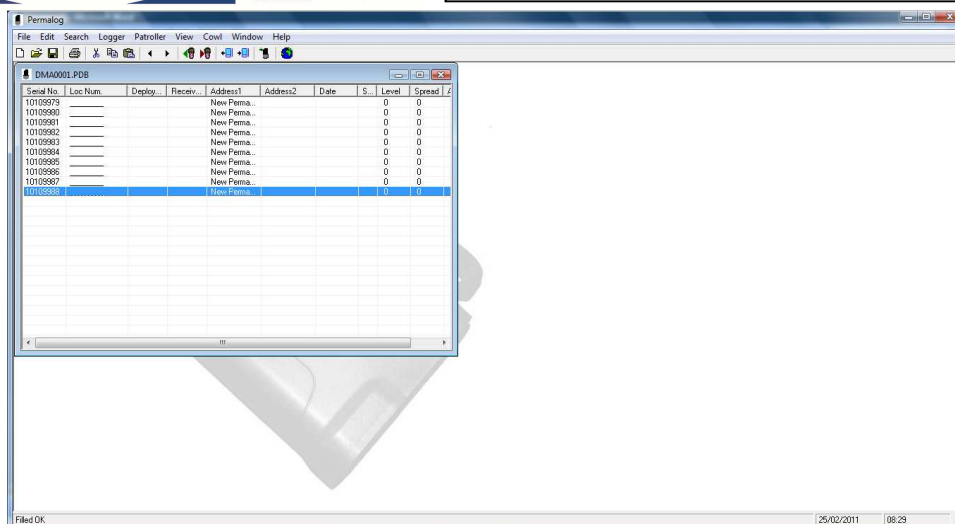

Double click on each logger in the table - Populate the information for each logger as you require in the screen as below.

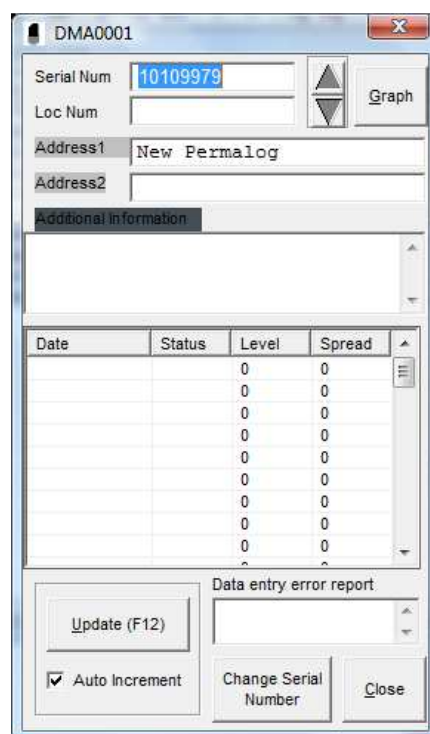

Once you have completed all the information in the table Select 'Save As' and save the data file as a .csv file. You can now transfer this database to your PDA

Document History:

Edition	Date of Issue	Modification	Notes
1st	19/01/13	Release	
2nd	17/09/15	Format update	