



PermaNet+ with Leak Noise Sensor

Basic User Manual for DataGate™/ Almos or PermaNet+ for PC installation

Version 1.1



Warning: This manual contains important safety and operating information.
Please read, understand and follow the instructions in the manual.

TABLE OF CONTENTS

WEEE AND THE BATTERY DIRECTIVE	2
INTRODUCTION	3
UNPACKING	3
INSTALLING THE SOFTWARE	4
INSTALLATION AND SITE HARDWARE DIAGNOSTICS TOOL (IDT)	5
READING THE LOGGER	5
CONFIGURING THE LOGGER	7
AquaLogs & Sound Recording	10
Data Communications Confirmation – GPRS Test	11
Troubleshooting a GPRS test failure.	12
Aerial installation considerations	13
Installation Process Decision Tree	14
Adding an External Battery Pack	18
Installing your PermaNet+ with Leak Noise Sensor at site	19
Taking a reading from the logger and hardware tests	20
Final site commissioning checks	22
Installation checklist	23
USING HWM DATAGATE™	24
Setting up DataGate™ Alarm Recipients	28
Setting up channel settings	30
USING HWMONLINE™	31
Viewing your data	31
Viewing information about your logger fleet	33
USING ALMOS	34
Logging in	34
Map View	35
List View	37
Missing Data: Level & Spread	39
Missing Data: Last Received	39
Signal level	40
USING PERMANET+ FOR PC	42
Configuration for DataGate	42
Creating your first DMA	43
Additional settings	44
Map view	45
Sound recordings and Aqualogging	46
Leak Localisation and Correlation Tool	48
Technical Specifications	49
APPENDIX – ADDITIONAL INFORMATION	50
Fitting your own SIM card	50

WEEE and the Battery Directive

Waste Electrical and Electronic Equipment.

HWM-Water Ltd is a registered producer of Electrical and Electronic Equipment in the United Kingdom (registration number WEE/AE0049TZ). Our products fall under category 9 (Monitoring and Control Instruments) of The Waste Electrical and Electronic Equipment (WEEE) Regulations. We take all environmental issues seriously and fully comply with the requirements for collection, recycling and reporting of waste products.

HWM-Water Ltd is responsible for WEEE from customers in the United Kingdom provided that:

The equipment was produced by HWM-Water Ltd (Palmer Environmental / Radcom Technologies / Radiotech / ASL Holdings Ltd) and supplied on or after 13th August 2005
The equipment was supplied before 13th August 2005 that has been directly replaced HWM-Water Ltd products manufactured since 13th August 2005.

HWM-Water products supplied after 13th August 2005 can be identified by the following symbol:



Under HWM-Water Ltd's Terms and Conditions of Sale, customers are responsible for the cost of returning WEEE to HWM-Water Ltd and we are responsible for the costs of recycling and reporting on that waste.

Instructions for returning WEEE:

Ensure that the WEEE meets one of the two conditions above.

The waste will need to be returned in accordance with the regulations for transporting data loggers with lithium batteries.

- a. Pack loggers in strong, rigid outer packaging to protect them from damage.
- b. Attach a Lithium Warning Label to the package.
- c. The package must be accompanied by a document (e.g. consignment note) that indicates:
 - i. The package contains lithium metal cells;
 - ii. The package must be handled with care and that a flammability hazard exists if the package is damaged;
 - iii. Special procedures should be followed in the event the package is damaged, to include inspection and repacking if necessary; and
 - iiii. A telephone number for additional information.
- d. Refer to the ADR regulations on shipping dangerous goods by road.

Return the WEEE to HWM-Water Ltd using a licensed waste carrier.

In accordance with the regulations, customers outside the United Kingdom are responsible for WEEE.

The Battery Directive

As a distributor of batteries HWM-Water Ltd will accept old batteries back from customers for disposal, free of charge, in accordance with the Battery Directive.

PLEASE NOTE: All lithium batteries MUST be packaged and returned in accordance with the relevant regulations for transporting lithium batteries.

A licensed waste carrier must be used for transporting all waste.

For more information on WEEE compliance or the Battery Directive please e-mail CSservice@hwm-water.com or phone +44 (0)1633 489 479

Introduction

Thank you for choosing an HWM data logger(s), we trust it will provide you with many years of service.

The individual configuration of your logger(s) may differ slightly from the detailed descriptions that follow, but any additional setup information that you need, should be available from our website.

Unpacking

As you unpack your new logger, please confirm that you have the following parts required to install the equipment. If there are any omissions, please contact our sales team to rectify or supply the missing parts.

- PermaNet+ data logger
- Leak Noise Sensor
- Software Installation Tool (IDT) from www.hwm-water.com or CD-ROM
- External GPRS Antenna
- USB Cable (optional)
- Connection cables (optional)
- External battery and appropriate cable (optional)
- Hanging bracket for logger, external battery and logger (optional)

Please dispose of your waste packaging responsibly.




Before proceeding to site for physical installation, please take the time to configure your logger in an office environment. Most settings can be configured before visiting site and this will save time at the point of install.

You will need to have:-

- A valid HWM-water.com account with username & password.
- A valid HWM DataGate™ account with username & password. See DataGate™ setup later in this manual.
- A valid Almos account with username & password.
- A PC with Windows 7/8 installed (IDT also supports Windows XP & Vista) 32bit and 64bit systems are supported.
 - Minimum Requirements are:-
 - 1GHz processor
 - 512Mb RAM
 - 2GB Disk Space
- A USB cable for connection to the logger.
- A description and reference number for the installation site.
- The SIM card installed into the logger and a good GPRS signal on site for the chosen network (Roaming SIMs are also available). This is already done for you if you ordered a data package with the logger. See the appendix if you have purchased a data pack & SIM separately.

Installing the software

1. Insert the CD-ROM supplied into your CD drive.
(If your PC does not have a CD drive, then either copy the files from the CD-ROM onto a memory stick, or download and run the installation file from the HWM website at www.hwm-water.com)
2. Ensure you have system administration rights for your computer; ask your IT department if you are unsure.
3. If it did not run automatically, locate and run the “Installer” program and click <<PermaNetPlus>> when you see the screen below

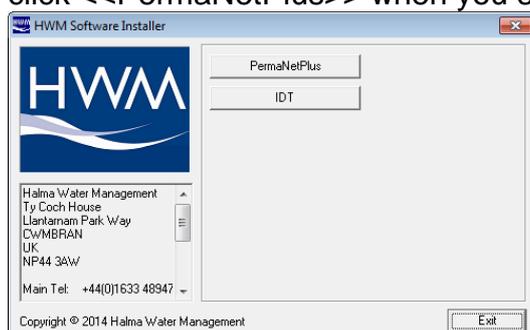


4. Follow the on screen installation instructions to complete the install of the PermaNet+ software.
5. When the installer menu re-appears, click the <<IDT>> button and follow the on screen instructions to install the Installation and Diagnostic Tool which is required for configuring loggers. If you do not need to configure loggers, then this step can be skipped.

Should the automatic installation fail, please check with your system administrator that you have sufficient rights to install software or try installing the drivers manually.

You may be required to update Microsoft .Net; the install file is included with the IDT setup files for your convenience.

Installation and site hardware Diagnostics Tool (IDT)


Once you have installed the IDT, connect the Leak Noise Sensor to the PermaNet+ and then the USB communications cable first to the logger and then to your PC – Note there will be a short delay before the PC recognises the connection of the logger. This is normal, if your PC has sound enabled you will hear the “ping pong” sound as the logger connects.

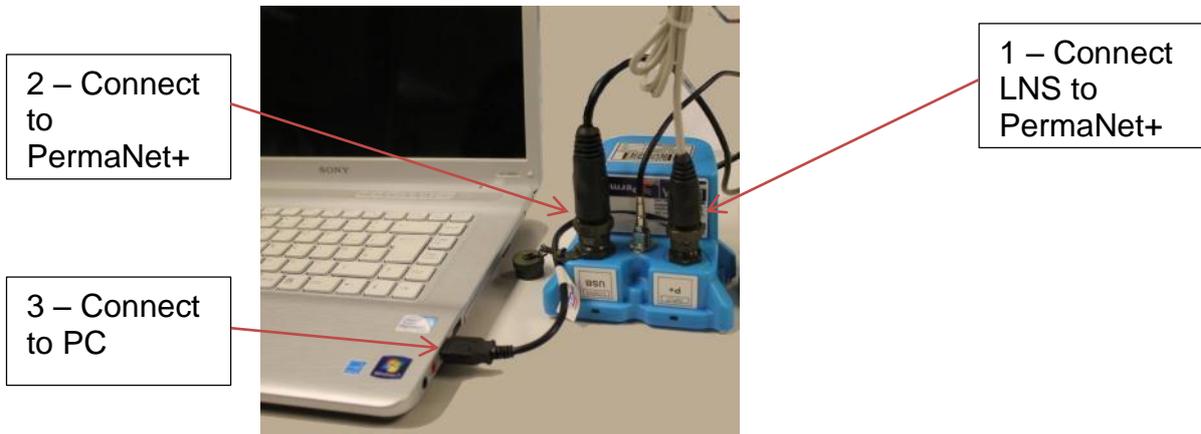

i The first time you connect your PermaNet+ to a new USB port, Windows will configure the driver, wait until this process is completed before proceeding.

Reading the logger

1. Run the “IDT” program.
2. The main window will appear of which the main items are:-

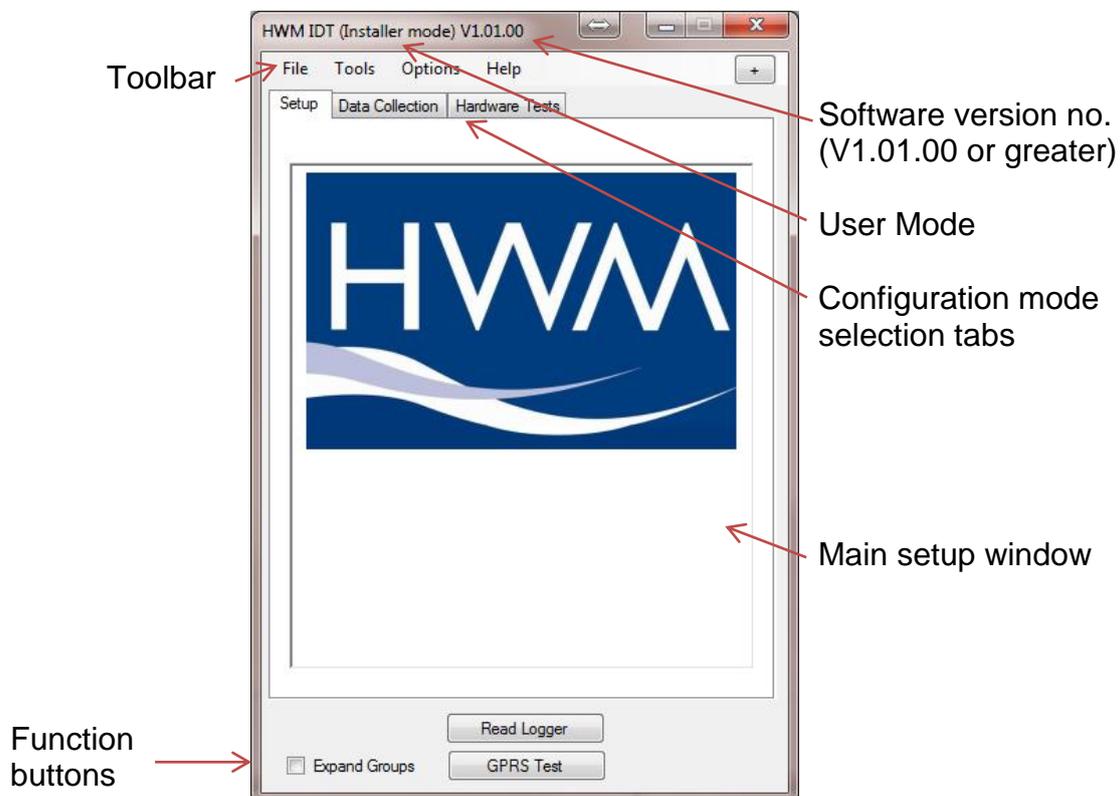

3. Now click the <<Read Logger>> button to load the current logger settings into the setup window.




Important: As the logger is not powered from the PC directly, to preserve battery, the logger will automatically disconnect from the PC and shutdown if there has been no activity for **10mins**. If you try to communicate with the logger after this time, a message “Connect/Re-connect logger!” will appear. Simply unplug the USB plug from your computer, wait for 2 seconds and then reconnect. This will wake up the logger again.




4. The IDT will now download the current settings from the logger.

At this point the IDT will check to see if there is a more up-to-date version of the logger firmware available on your PC, if so, you will see the message “Update Available”. Click <<Yes>> to update the logger, the process will take approximately 2 minutes, however the logger will be restarted so you may wish to transfer any logged data first, in which case click <<No>>. The IDT checks the firmware version each time you read it.

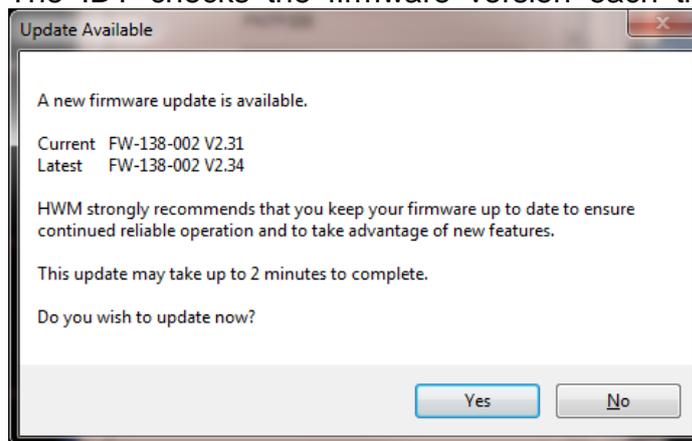

5. Once all the settings have been loaded you will see this message, Click <<OK>> to start configuring your logger.

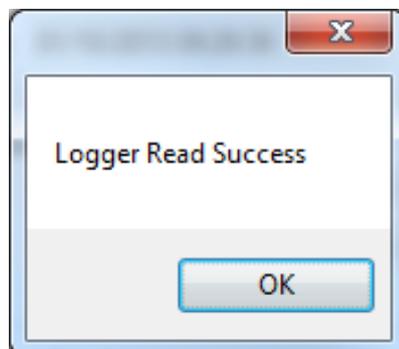

Configuring the logger

1. You will now see the main setup menu (expanded for illustration purposes) The menu is structured in sections for easy setup:

i) Logger Details including ID, SIM card phone number and recording indicator: Recording, Waiting to record or Stopped

ii) Logger start time, data capture interval and Leak Noise Sensor read time

Selections for Aqualog and Acoustic logging (see page 10)

iv) Cellular data service provider settings

v) Data call settings

Data Destination details, the server address for the UDP data

vi) Backup call in timing details in case of main call failure or external battery exhaustion and SMS message destination number

Final Setup button and logger time zone selection

Main function buttons

The screenshot shows the 'HWM IDT (Installer mode) V1.01.00' application window. The 'Setup' tab is active, and the 'Unlog on COM15' status is shown. The interface is divided into several sections:

- Logger:** Type: FW-138-002 V2.31 (Recording); ID: PNTP309; Serial No: 0000242; Tel No: +204043726254328; logger time: 12/11/2014 15:15:42.
- Logging Parameters:** Start Time: 24/10/2014 03:45:00; Log Interval: 24 Hours; Leak Noise Read time: 02:15; Read leak noise once per day; Enable AquaLogs: unchecked; Enable Sound Recording: unchecked; Send leak sound recording when leak first detected: checked; Send alarm when leak first detected: unchecked; Leak Threshold: Metal (selected).
- APN:** Use GPRS test to choose APN settings (selected); Let me choose APN settings: unselected.
- Time(s) Data is Sent:** Address: On; Type: UDP (HWM); Mode: Time; Time hh:mm: 07:00; Days of week to send data: Mon, Tue, Wed, Thu, Fri, Sat, Sun (all checked).
- Data Destination:** Address: inbound.hwmonline.com; Port: 23024.
- Fall back dial time:** 07:00:00 (Time 1); 05:00:00 (Time 2); SMS No.: +447786200833.
- Buttons:** Setup Logger, Stop Logger, Copy Logger, Read Logger, Expand Groups, GPRS Test.
- Time Zone:** UTC Time (selected).

2. Now you can enter the configuration you require for each section
 - i. **Logger** – enter the site ID that you wish for the logger, e.g. Postal/ZIP code up to 7 alpha-numeric characters and the telephone number associated with the SIM card. If you ordered a SIM with the logger, this will have been programmed already for you, otherwise enter the number from your service provider in international format (e.g. +44...)
 - ii. **Logging Parameters** – Accept the default start date or enter your own. Default start date is in the past so the logger will begin recording immediately. You can delay this start date by selecting one from the calendar. Enter the time you wish to make a leak determination by reading the Leak Noise Sensor.
 - iii. **APN** – If you have ordered a data pack from HWM you can leave this setting alone (as below) as your logger will have been preconfigured by HWM.

If you have ordered your data service & SIM card, then you will need to separately configure your service. HWM recommends that you allow the GPRS test utility to search for these settings automatically, however if you wish to enter them manually, click the button beside “Use the following settings”

APN

Use GPRS test to choose APN settings

Use the following settings.

You can now enter your data service provider’s details into the appropriate boxes.

APN

Use GPRS test to choose APN settings

Use the following settings.

Presets: -----

Address: mobile.o2.co.uk

User: mobileweb

Password: password

Alternatively select your network from the drop down list of presets

- iv. **Time(s) Data sent** – Here you specify the Call Out requirement for the logger. There are 2 modes available, SMS and UDP. SMS is a one way unacknowledged data transfer service using the common text messaging service. UDP is a true 2 way confirmed data transfer process via the internet over a GPRS connection. Both have advantages, however HWM recommends UDP wherever possible as this offers the most secure method of data transfer.

Switch on the Call out by selecting "1" in the Address selector, then choose UDP or SMS from the Type selector.

Now choose your Call out mode, this can be either "Freq" for a call made at a regular frequency throughout the day (e.g. every 6hrs) or "Time" to specify up to 8 individual times during the day.

For the PermaNet+ system it is recommended to set 2 "Time" based calls at the earliest 1.5hours & 2hours after the Leak Noise Read time to allow for the data processing time.

You can also choose the days of the week that you wish the logger to send its data, this way you can save battery on days you don't need data.

- v. **Call Addresses** – These will usually have been entered at the factory and should not be adjusted, however if you have your own data server, then you can enter either the telephone number for your receiving modem, or the UDP address & port no for where the logger is to send its data.

The fall back times specified here instruct the logger what to do in the event of the primary Call Out requirement not being met. This can be for 2 reasons:-

- a. If a connected external battery goes flat, the logger will default from the normal call out requirement to a 2 times per day routine. The times of these calls are specified by both Fall back 1 & 2.
- b. If a GPRS data call cannot be completed due to non-availability of a GPRS service, then the logger will try to send an SMS message at the Fall back 1 time.

3. Final steps – By default the logger is set to UTC (Coordinated Universal Time, equivalent to GMT), however you can choose either an offset from this time, or for the logger to use your PC time.

4. When you are happy with all the settings click the <<Setup Logger>> button to program the logger.

5. If you wish to copy all these settings to another logger, simply connect the next logger and click the <<Copy Logger>> button.


AquaLogs & Sound Recording

The PermaNet+ system allows you to capture Histograms of leak noise and Sound recordings. The set up of these is similar. Tick the appropriate box to show the logging details panel:-

<input checked="" type="checkbox"/> Enable AquaLogs
<input type="checkbox"/> Enable Sound Recording

Choose the start time for the logging mode, the duration of how long the measurement log should be. If you wish to make more than 1 log per day, specify the gap between log events and the number of logs per day. Finally choose how many days you wish recordings to be taken.

If you wish to send Aqualog or Sound recording settings only, then click the “Send” button, otherwise click the “Setup Logger” button to send all the settings to the logger.

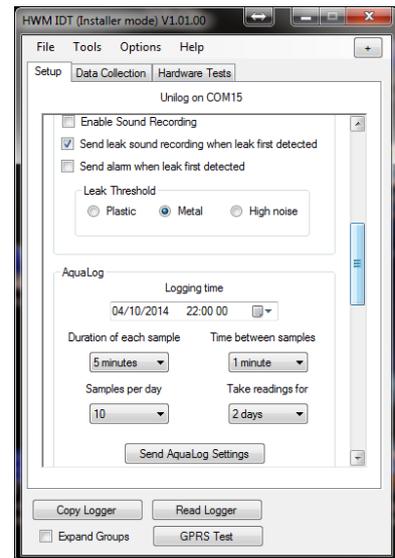


The Histograms and Sound recordings are then forwarded by the logger to DataGate and can be later downloaded to your PC using the PermaNet+ software (see page 42).

Data Communications Confirmation – GPRS Test

It is important to confirm that your logger is communicating with the data server before you leave site (or to be confident, your office), so you should undertake a GPRS test before you leave the logger in the field.


1. Connect an appropriate GPRS antenna to the FME socket on the logger. The location on the logger can vary depending on the configuration of logger ordered, but the picture below illustrates a typical connection.

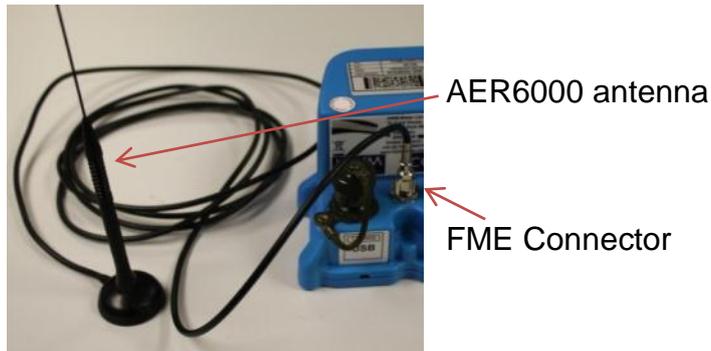


Note: If this is the final aerial connection, ensure that the connector is tightened with spanner or pliers to prevent water ingress to the antenna plug as this will reduce performance. Do not over tighten.

2. Run the IDT and read your logger as in steps 1 to 3 above.

3. Now click the <<GPRS Test>> function button.



4. The GPRS Test program will now automatically execute a communications check with the data server, DataGate™ and deposit a test message that can be checked later on.

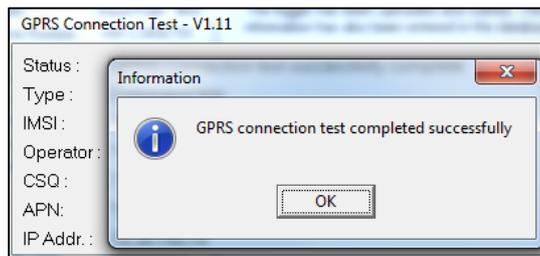

The test will take a few minutes and will confirm that the communication is successful.

Troubleshooting a GPRS test failure.

There are a number of reasons why a GPRS test may fail,



the following points should be checked before calling HWM support for assistance:-

Possible Problem	Solution
Network Busy due to excessive traffic. Commonly occurs around schools.	Retry the test after a few minutes.
GPRS signal not available at your location. Not all Cell masts carry GPRS traffic	The logger will call into the data warehouse once per day using an SMS message; relocate the logger if more frequent communications is required.
Network signal not strong enough. You need a CSQ (reported by the GPRS test) of at least 8 for reliable communications.	Relocate the antenna if possible or try alternative antenna configurations. Ensure antennas are vertically orientated where possible. See aerial placement notes section.
APN settings incorrect.	The GPRS tester knows about a large number of cellular networks and will try as many settings as possible and correct any error automatically. If there is still a failure, then you need to check with your network operator that you have the correct settings for your SIM.

If you continue to experience problems with communication, you may need to check the network coverage in your location.

To perform a signal (CSQ) check, refer to page 20.

Aerial installation considerations

The method of installation at site should be carefully selected.


Signal strength within the cellular network can vary dramatically even within the same cell; proximity to the transceiver, type of antenna, position and angular orientation of the antenna, all have a significant effect on the ability of a device to reliably communicate with the cellular network. To ensure reliable GSM/GPRS data communications it is essential that the most suitable antenna is selected and it is mounted in the most appropriate location.

Installing a device without considering the type of antenna and its installation constraints can lead to disrupted and unreliable data communications and accelerated battery consumption. The following gives practical advice on how to minimise potential problems.

General Considerations

- Always perform multiple signal strength tests moving the antenna to different positions (please see below for description of signal strength test results).
- When performing Signal Strength Tests ensure that the chamber lid/cabinet door is in as close to normally closed position as possible to ensure an accurate result.
- Deploy the antenna as close to the surface as practically possible, especially when installing in a large chamber.
- If the device is installed in an underground chamber consider, where possible, locating the antenna in a secure position outside the chamber.
- Ensure that the antenna connector is in good condition and correctly tightened (finger-tight is not sufficient for the type of connectors used). Adequate tightening of the connector reduces the risk of water ingress and thereby signal attenuation as a result of changes in impedance.
- Never attempt to modify the dielectric seal of the antenna connector, it is designed to keep moisture away from conducting parts which lead to corrosion and attenuation.
- Consider using secondary environmental protection for the antenna connector such as self-amalgamating tape.
- If a logger is installed in a chamber that is likely to flood (e.g. an Atlantic Plastics chamber), position the logger upside-down in the chamber to avoid unnecessarily submerging the antenna connector.
- Use the shortest possible antenna lead.
- Where long transmission leads are required, consider using a low-loss alternative to corrugated copper cables, e.g. Times Microwave white braided coaxial cable.
- The signal emitted from any antenna submerged under water will be significantly attenuated; place the antenna in a location where it will not become submerged.
- Always ensure that the latest firmware is installed in the device.

Installation Process Decision Tree

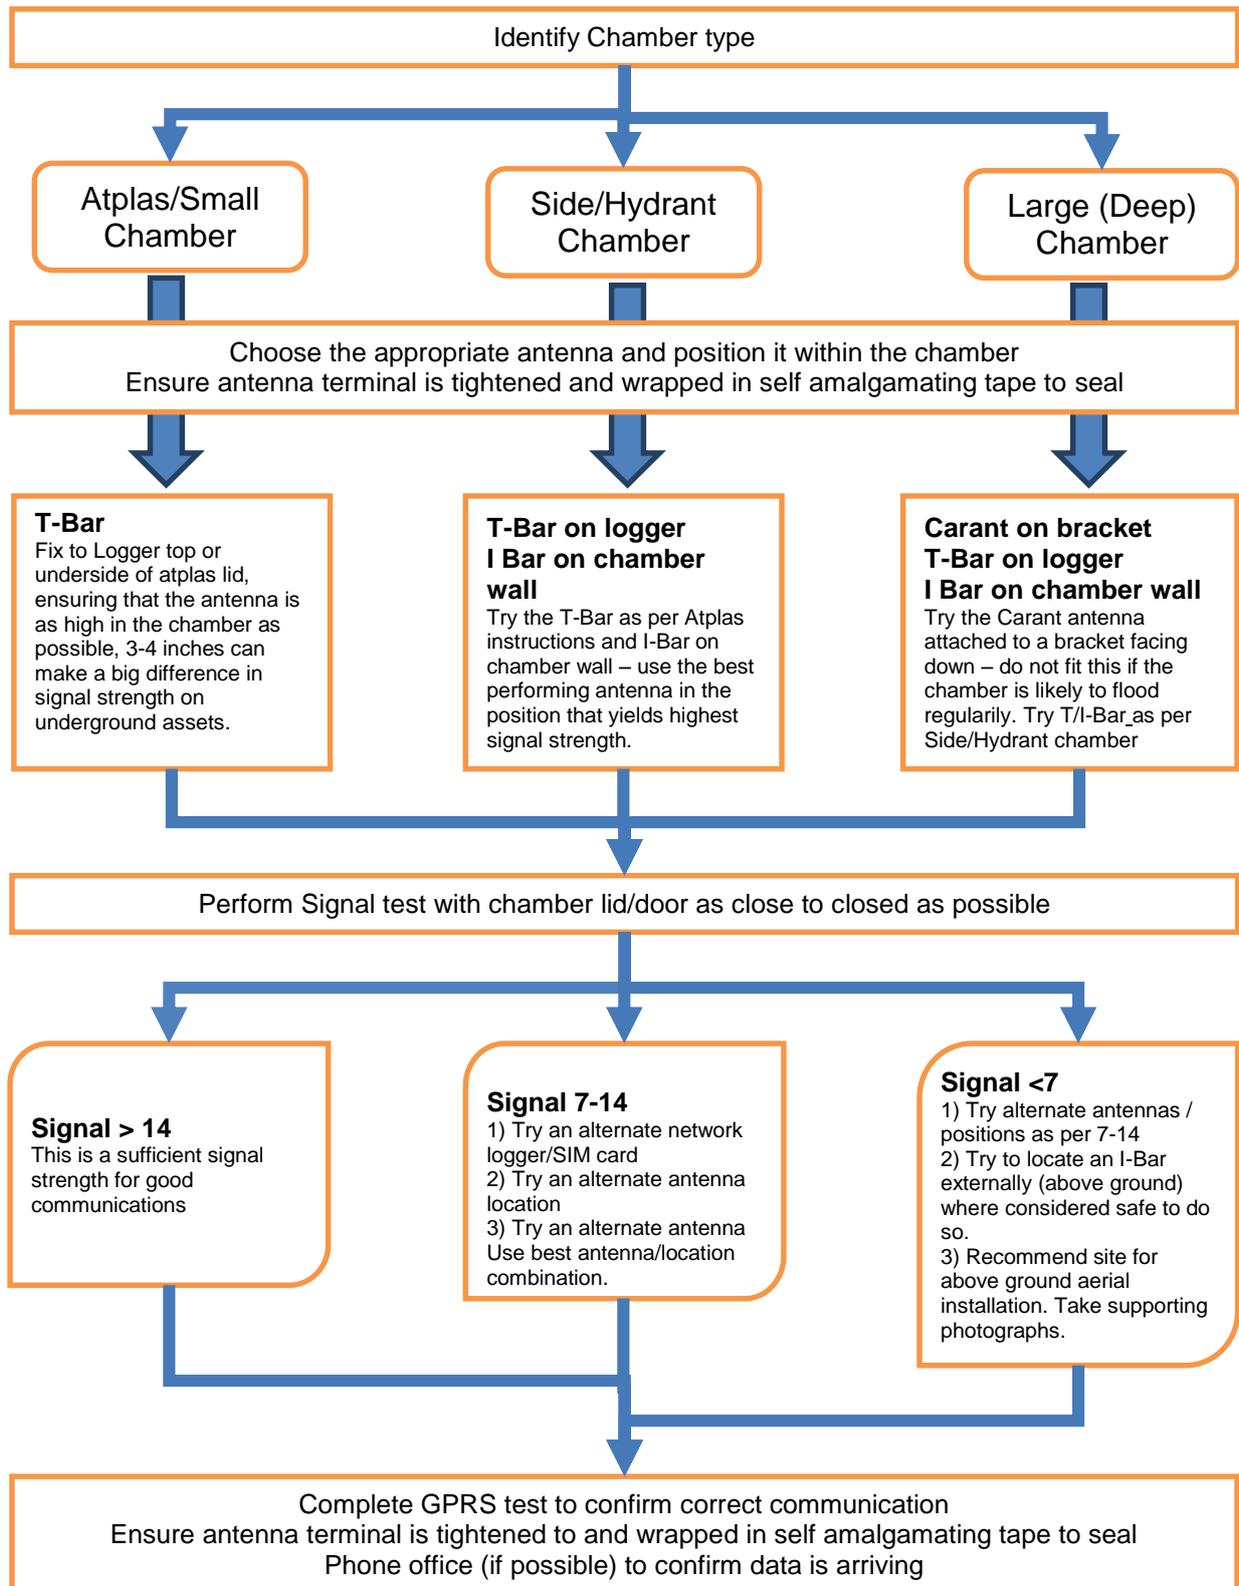


Cellular Network Signal Strength (as measured by CSQ Test)

- 0-7 Insufficient, the device may be able to register with network but will not be able to send or receive data reliably.
- 7-14 Marginal, depending upon the ambient conditions data transmission may be possible, important to select the correct antenna and install it in the most suitable location.
- 14-21 Adequate, Data transmission should be reliable.
- 21+ Ideal, Strong signal strength data transmission will be reliable.

Antenna Options

Carant – For most installations the Carant antenna will give the best performance.

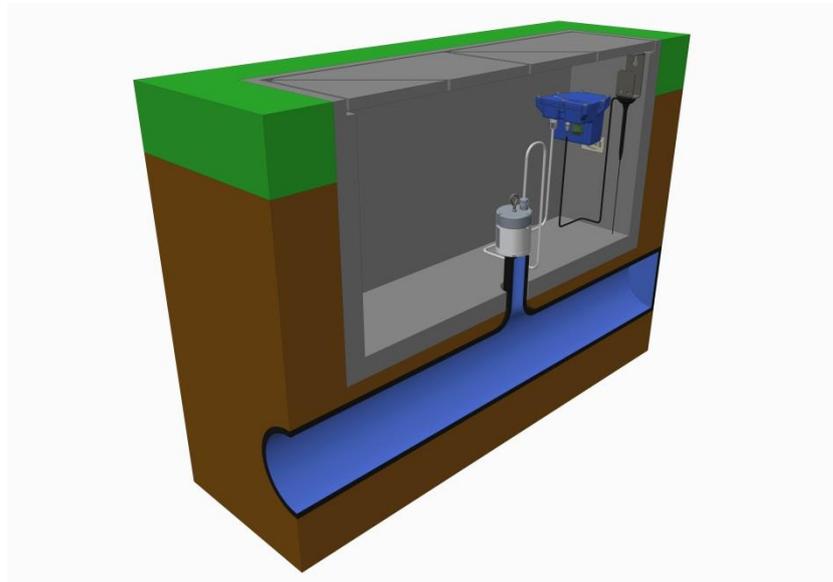


Carant Installations Considerations

For optimum performance the antenna requires a metal grounding plane, consider installing a metal bracket made of a ferrous material to attach the magnetic base of the antenna.

- Install the antenna near to as close to the surface in large underground chambers, ensuring that the lid will not interfere with the antenna when being opened/closed.
- This antenna is vertically polarised, it should always be installed in the vertical orientation.
- Never bend the radiating element of the antenna
- The Carant can also be attached to an installation bracket mounted to an existing marker post


T-Bar – This antenna is ideal for installing on top of the device especially in locations with restricted space.

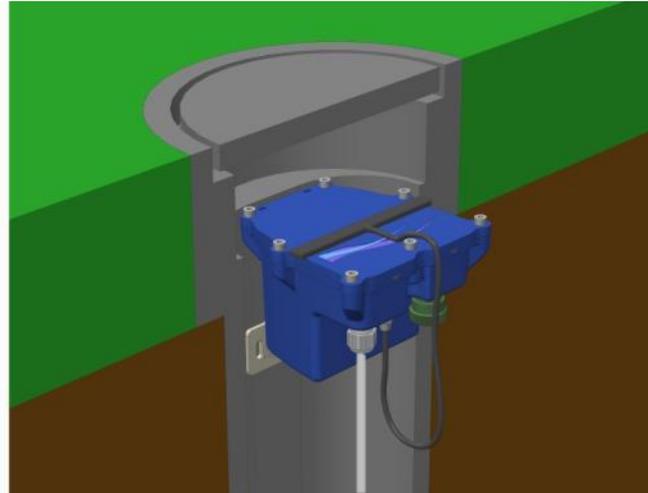

T-Bar Installations Considerations

- Adhere the antenna to external structures using marine quality adhesive (such as the brand 'Goop').
- Keep the antenna cable as short as possible, 0.5m.
- Avoid attaching the T-Bar to a metallic surface as this can adversely affect signal strength and performance, however it may be better than underground

I-Bar – The physical construction of this antenna makes it ideal for attaching to structures external to subsurface chambers.

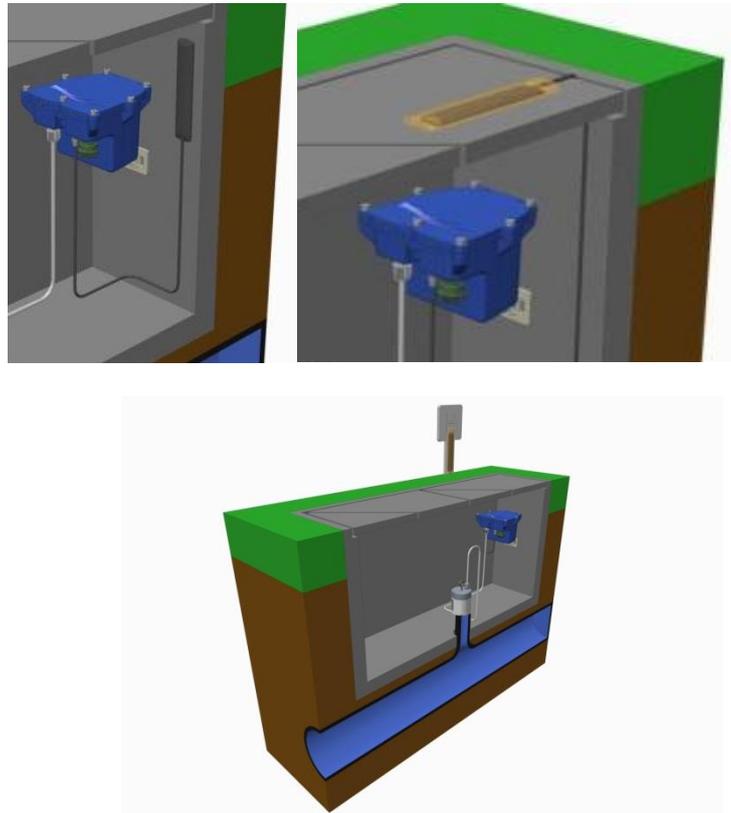

I-Bar Installations Considerations

- Antenna can be attached to the side wall of a small chamber or to the top side of the chamber lid.
- With the use of a longer cable version (or an extension cable where absolutely necessary) and a sealing compound, this antenna can also be fitted in the ground, on marker posts, in cracks or brickwork near to the chamber.
- If the antenna is to be placed outside the chamber care must be taken to physically protect both the antenna and cable from damage. This can be done by burying the cable or installing a suitable conduit.
- Avoid attaching the I-Bar to a metallic surface as this adversely affects signal performance

Adding an External Battery Pack

If you wish to make frequent data calls, then you will need to attach an external battery pack to your logger.

There are 3 types available



The number in the battery pack refers to the call in frequency that you can have to achieve a 5 year service.

So, the EXTBATTBOX60VF will last up to 5 years if the logger calls in once per hour, the EXTBATTBOX30 will last up to 5 years with a frequency of every 30 minutes (twice an hour) and the EXTBATTBOX15 will last up to 5 years with a frequency of every 15 minutes (4 times an hour).

Choose the battery size most appropriate to your need.

Use a CABA8590 cable to connect your BATTBOXxx to the USB connection on the logger. This will provide the external power that the logger needs to dial in at the higher rates.

Important: When placing the battery in the site, ensure that it is not crushing any cables other parts of the installation as they are heavy devices.

Installing your PermaNet+ with Leak Noise Sensor at site

Having performed all the steps in the previous sections, you should now be confident that your logger is configured for your purposes and is communicating correctly in a controlled environment. The next step is to physically install you logger on site.



Every site installation is unique with various types of connections, positioning or environmental conditions possible, the following recommendations will assist in a reliable installation.

- Warnings
 - The Leak Noise Sensor unit uses a high strength magnet and should not be carried by anyone with a heart pacemaker.
 - Keep the magnet away from any magnetically sensitive devices, PC, watches, etc.
 - The Leak Noise Sensor can be seen from the bottom of the unit. Users must not attempt to unscrew this sensor as this may break internal components resulting in irreparable internal damage, sensor replacement is then the only option.
- Keep the equipment neatly arranged in chambers so that cables are not crushed.
- Do not allow logger or battery to rest on the connectors as crush damage to cables can result.
- Use wall mounting brackets were possible to keep the logger in clear space.
- Position loggers away from sources of electrical interference such and motors or pumps.
- Carefully Locate the Leak Noise Sensor onto the pipe or tap to avoid shocking the sensor. Always grasp the main body of the sensor when placing or retrieving it from the pipe fitting. Do not pull the sensor by its cable as this can cause damage.
- Always ensure that the contact point is free from dirt so that the magnet makes a good contact.
- Average operating temperature of the Leak Noise Sensor should be below 50°C, therefore if fitting to a hot water pipe, ensure a suitable insulation is used.

Taking a reading from the logger and hardware tests

You are now ready to confirm that the logger is measuring real data from the sensors by taking an Instantaneous Value.

1. From the IDT menu bar, click the <<Hardware Test>> tab.
2. Click the <<Go>> button to start to check the operation of your installed system.
3. The IDT will now display its measurements for a period of 10 minutes to allow you to diagnose any issues with cabling.

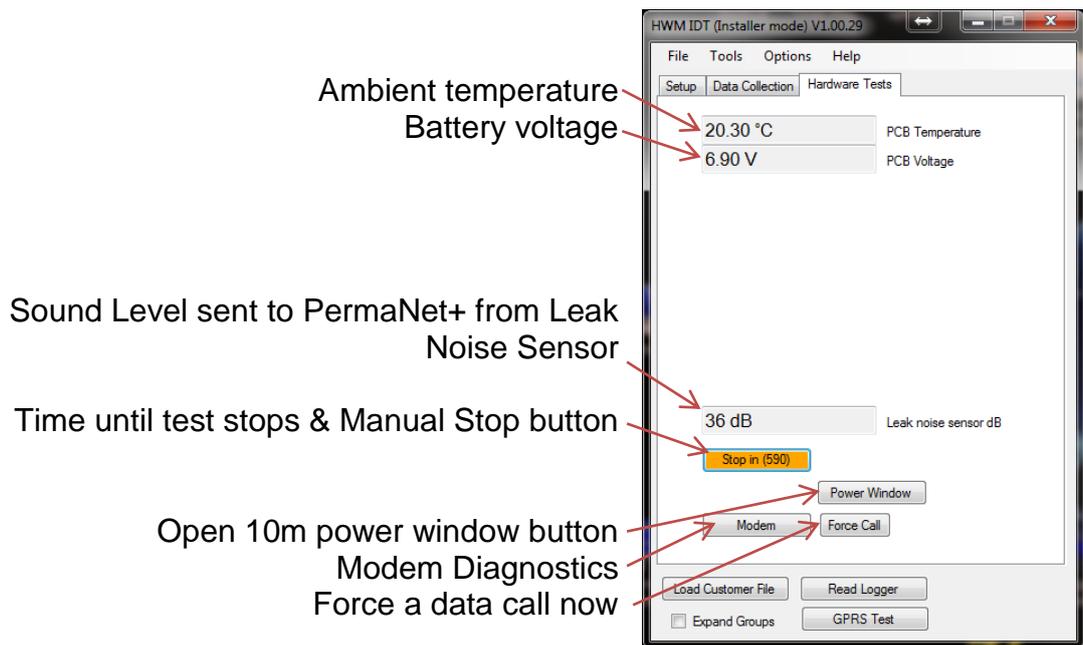

When you are ready to stop the test just click the <<Stop>> button.

Note: If you see '-----', for Leak Noise sensor dB, beyond the first few seconds, then check your connection to the Leak Noise Sensor.


4. A "Power Window" allows you to keep the logger's modem turned on for a period of 10 minutes. This allows you to close the chamber lid and send a text message to it to confirm that communications is still OK. See final site checks on page 22.
5. Pressing <<Force Call>> forces the logger to send its data in immediately. Useful for when you wish to shift a logger to a new site.
6. The <<Modem>> button allows some more advanced diagnostics to be performed on the modem.

Indicates total number of calls made


Provides the current signal strength

Provides the IMSI & IMEI numbers for the modem

Enter a mobile phone number here & click <<Send SMS>> to instruct the logger to send you an SMS test message.

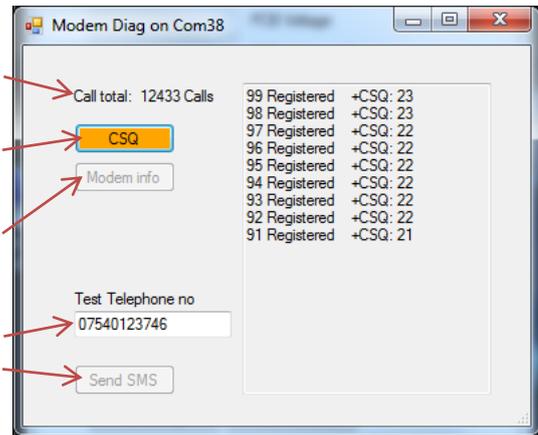


7. If you click the <<Data Collection>> tab you will now see a set of tools for downloading data from your logger for later uploading to the data server. It can also be of assistance for diagnosing problems.

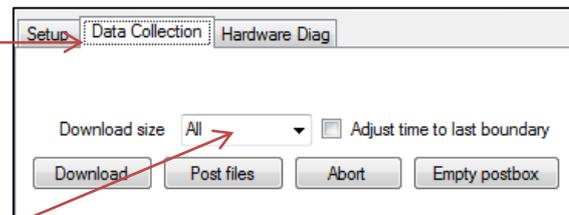

a. From the Download size selection, choose how much data you wish to retrieve, from everything the logger has stored to any un-sent data since the last time the logger called in.

b. Click <<Download>> and choose "Archive" when prompted and the data will commence downloading. If you wish to stop the process, click <<Abort>> and the download will cease.

c. A small chart will now be displayed showing the data downloaded. By using your mouse to draw boxes in the graph area you can zoom into areas of interest. Click the small circles at the end of the drag bars to zoom out. By hovering your mouse over the points on the graph, you will see the exact value recorded.

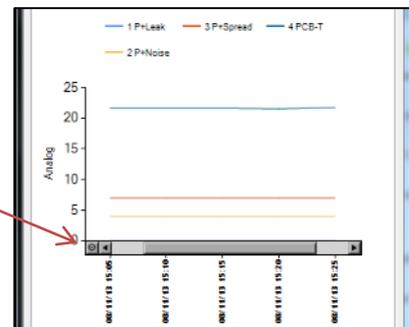

d. If your logger is in a location where GPRS communication is not possible, you can now upload the data when you are next connected to the internet. Simply click <<Post files>> and all the data you have downloaded to your PC will be uploaded in one go. If you are downloading more than one logger in a route, all data is stored and transmitted together. If you decide that you do not wish to post the data you have downloaded, click the <<Empty postbox>> button to remove the downloaded data from your PC.

Note: Choose the other data types depending on what recordings you wish to retrieve / view.

Final site commissioning checks

Having made all the configuration checks, checked all the wiring is good, verified the instantaneous values are what you need and confirmed communications with a GPRS test, there is one last check that you can make with your mobile phone to confirm everything is working as it should.

1. In the Hardware tests tab, click the <<Power Window>> button to power up the logger for 10 minutes.
2. Close the chamber or cabinet such that everything is in its final positions.
3. Now using a standard mobile phone, send a text message to the SMS number of the logger (see page 7 for the number) including the international dialling code if needed.
The text message should read **TTTT#**
4. After a few seconds/minutes (depending on the network operator) the logger will send a message back to you with details of its current status.
Example response from a logger:
TTTT138-002 V01.70CSQ:1010.9VyouridRT hh:mm ss dd-mm-yy ...
5. To decipher the message returned, please refer to the table below:

Message	Description
TTTT	Original command text without #
138-002	Logger type number
V01.00	Firmware version in Logger.
CSQ: nn	Signal strength nn (nn = 6 to 30)
10.9V	Operating voltage
yourid	Your Logger ID
RT hh:mm ss dd-mm-yy	Real Time Clock setting
ST hh:mm ss dd-mm-yy	First Time the logger was started
LR hh:mm ss dd-mm-yy	Last Time the logger was re-started
Ch1 (A) 0000.0	Channel 1 – Leak status
Ch2 (A) 0002.2	Channel 2 – Noise value
Ch3 (A) 0002.2	Channel 3 – Spread value
Ch4 (A) 0014.2	Channel 4 – Temperature (optional)

6. If the CSQ: value in the message is OK then the installation is complete. The logger will automatically go back to sleep after 10 minutes.
7. There can be delays in the SMS network, so the response to your message may not be immediate. If you have had no response in 10 minutes, re-open the chamber and using the modem diagnostic send yourself a test SMS. If this gets through then improve the location of the antenna and try again.



Note: Some Roaming SIM cards do not accept incoming text messages. Check with your service provider if you are unsure.

Installation checklist

Before you leave site, review the following items to be sure that the installation is going to be a good one.

- Have you placed the Leak Noise Sensor unit correctly?
- Have you run an instantaneous value to confirm data quality?
- Have you run a GPRS test to confirm communications quality?
- Have you confirmed the GPRS message was received by DataGate™?
- Have you confirmed an SMS message with the chamber lid closed?
- Have you recorded all your site information, serial nos, photos, etc?
- Have you closed all open chambers and recorded any damage?
- Have you left all wiring tidy and safe – not tied to ladders?
- Have you removed all your installation tools?
- Have you recorded the GPS location of the logger?

You have now completed your site installation and confirmed that the logger is operating and transmitting its data to DataGate™ (or your local data server). The next sections deal with how to use DataGate™, Almos™ and the PermaNet+ PC software.


Using HWM DataGate™

DataGate™ is the HWM secure data warehouse and is the data storage system behind the Almos™ viewing platform (see later in this guide). DataGate™ stores the data messages from the logger and the information required for displaying all the logger details on Almos™.

When you ordered your logger(s) with your HWM account manager, you will have been supplied with a Username and Password to the HWM systems. You can use DataGate™ to view your logger information and add additional information such as a meaningful site name, GPS location details, useful notes about the site, etc.

The following section explains how to log in to the system, enter basic logger details and explain what the information provided means. DataGate™ and Almos™ are supported by most internet browsers, but for the purposes of this guide, Internet Explorer is assumed.

1. Locate your Username and Password and using your internet browser navigate to <http://datagate.mobifi.com>
2. Enter your username and password and click <<Login>>

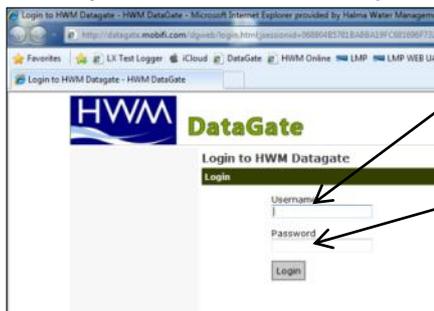


Your Username

Your Password

Note that passwords are case sensitive.

3. Once logged in, you will be presented with the main Summary screen. Here you can see a quick view of your logger fleet, showing the number of loggers in your fleet, the number of loggers that are not calling into DataGate™ (quiet), the number of loggers that are low or out of GPRS credits and the number of loggers whose contract is about to expire.

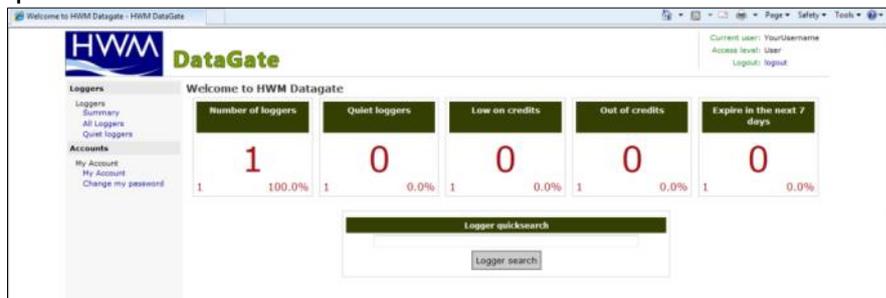

4. To see the full list of your loggers, click <<All Loggers>> from the left hand pane or if you know some detail about your logger, e.g. phone number or site info, enter it into the Logger quicksearch box and click <<Logger search>>.

5. You will now see a list of all the loggers you have requested.

Serial	Number	Site	SMS credits	GPRS credits	Outgoing credits	SMS received	GPRS received	Messages waiting	Last message received	Expiry date
AB123CD	44123456789	SOA12345 MyNetwork 1 of 1	1	982	1	0	18	0	03-Jan-2013 12:10:16	03-Jan-2018 23:59:59

In this view from Left to Right the list shows:-

- i. The logger serial number
- ii. The logger's GSM telephone number
- iii. The site ID for the logger
- iv. The number of SMS message credits remaining
- v. The number of GPRS credits remaining
- vi. The number of outgoing message credits remaining
- vii. The number of SMS messages received from the logger
- viii. The number of GPRS messages received from the logger
- ix. The number of messages waiting for additional credits to be loaded
- x. The date and time that the last message was received from the logger
- xi. The expiry date for the contract

6. Click either the logger serial number or the site ID for the logger you wish to examine/configure.

Serial number	Datagate number	Mobile number	GSM data number	Site name	Date created	Network	Type	Owned by	Latitude	Longitude	Height ADD	Start date	End date	Battery condition	Signal strength	Version	Type
AB123CD	1581	44123456789	44123456789	SOA12345 MyNetwork 1 of 1	22-Oct-2010 08:50:21	Other	LX GPRS	Your Account				03-Jan-2013 00:00	03-Jan-2018 23:59	0.0v	6	1.11	FW-102-005U

Incoming GPRS messages			Incoming SMS messages			Outgoing messages		
Deduct credits	true		Deduct credits	true		Deduct credits	true	
Credits	1000		Credits	20		Credits	20	
Credits used	18		Credits used	0		Credits used	0	
Number received	18		Number received	0		Number sent	0	
Waiting for credits	0		Waiting for credits	0		Waiting for credits	0	
Last message	03-Jan-2013 12:10		Last message			Last message sent		
Alert after x days	3		Alert after x days	3				

This screen displays the full details about the logger you have chosen, the example above corresponds to the logger that you configured in previous sections so you can now see all the data concerning your logger.

Most information regarding the logger will have been entered for you already by HWM, but the following steps will show you how to confirm reception of the GPRS test conducted earlier and how to adjust the Site details, such as Site ID and GPS position.

7. To verify the reception of messages, Click the <<Incoming text>> tab



this will display a list of the last 100 messages received by the logger:-

Number	Received	Unlocked	Network	Number	Source	Type	State	Deducted	Battery	Signal	Message
272105081	03-Jan-2013 12:10:16	03-Jan-2013 12:10:16		44123456789	HTTP	GPRS	PROCESSED	true	0	6	GPRS Test (V1.11)
272095893	03-Jan-2013 12:00:14	03-Jan-2013 12:00:14		44123456789	HTTP	GPRS	PROCESSED	true	0	7	GPRS Test (V1.11)

In this view the GPRS test message that the logger sent in step 4 on page 11 can be seen (highlighted) confirming that the logger can successfully communicate with the data centre.

8. To edit the site information about the logger, click the <<Edit logger>> button. 

9. You can now enter/edit the information about your logger:-

Fields that you can safely adjust are as follows:-



- i. Mobile number – Where HWM fit the SIM card, this number is entered by the factory. If you have installed your own SIM card, enter the number here. This number must **exactly** match the one entered in step 2.i on page 8, but **without** the leading ‘+’.
- ii. Site Name – This is a long character string (up to 70 chars) for details of the logger location, e.g. 13 MyStreet, YourTown.
- iii. Site ID – This is a shorter id, usually but not limited to the Zone/Location code of the logger, e.g. AB123CD.
- iv. Site notes – This is a free entry field where you can put any relevant information you like, such as “Outside no 17” or “regularly overgrown”, etc.
- v. Consider quiet after x days – This allows you to define how long to wait before being alerted that the logger has stopped sending in data. When a logger is quiet for longer than the entered value, the entry in the “All Loggers” list will show in pink. The logger will also appear in the “Quiet Loggers” list.
- vi. Latitude and Longitude – This is the precise location for the logger and is required for Almos™ and PermaNet+ PC software to display the logger’s location on a map. A GPS receiver such as a Sat Nav will provide these figures.
- vii. Height (Above Ordnance Datum) can be useful for computer network modelling.

10. Once you are satisfied you have all the information entered how you wish it, click <<Update Logger>> to store the data.

11. Some information in the “View Logger” screen is only available once the logger has begun to call in. The Battery condition displays the voltage of the logger battery (or that of the external battery pack if connected) and the Signal Strength (also called CSQ) is the current GSM network signal strength. These two values are updated each time the logger makes a successful data call:-

View logger

Serial number AB123CD	Latitude 51.634238	
Datagate number 1581	Longitude -3.016764	<input type="button" value="Edit logger"/>
Mobile number 44123456789	Height AOD 12.34	
GSM data number 44123456789	Start date 03-Jan-2013 00:00	<input type="button" value="Edit logger channels"/>
Site name 13 MyStreet, YourTown	End date 03-Jan-2018 23:59	
Site id AB123CD	Battery condition 6.4v	
Date created 22-Oct-2010 08:50:21	Signal strength 6	
Network Other	Version 3.30	
Type LX GPRS	Type FW-102-001U	
Owned by Your Account		

Latest incoming data messages


Number	Received	Unlocked	Network	Number	Source	Type	State	Deducted	Battery	Signal	Message
272299333	03-Jan-2013 18:06:19	03-Jan-2013 18:06:19		44123456789	HTTP	GPRS	PROCESSED	true	64	6	_NP443AW0C001E0A03010D000F0024 051203010D001E0A03010D00030000 010084030100640064006400000000 0000000000000000000008F6C1700 ED8E18000000000078000000000000 000006601C31E000043005F084300 5F06790044057900960543005F0843 005F0843005F0843005F0843005F08 43005E0843005F0843005F0843005F 0843005F0843005F0843005F084300 5F0843005F0843005F0843005F0843 005F0844005F0844005F0843005E08 44005F0843005F0844005F0844005F 0844005F0844005F08

So you now should have a complete set of information regarding your logger and by watching the “Incoming data” you can see its data transfer history.


Setting up DataGate™ Alarm Recipients

You can configure DataGate™ to relay alarm signals from your logger to e-mail addresses and/or send SMS messages to mobile phones. To add a new recipient for alarm messages, follow the steps below:

1. Click <<My Account>>

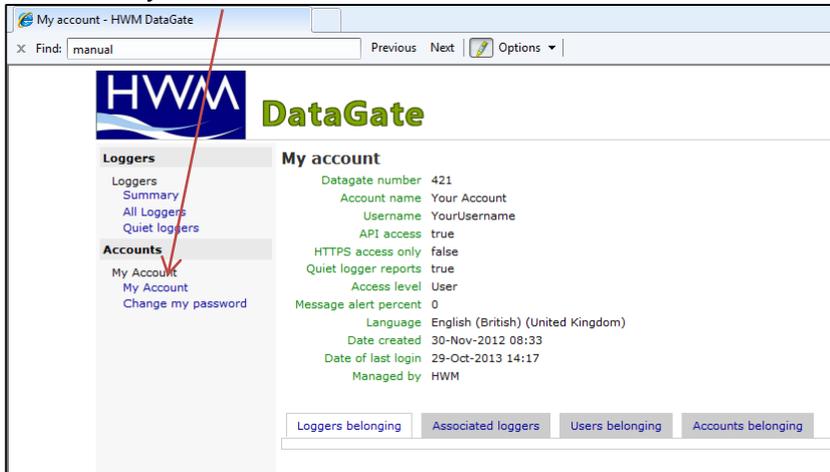


2. Next select the <<Users belonging>> tab

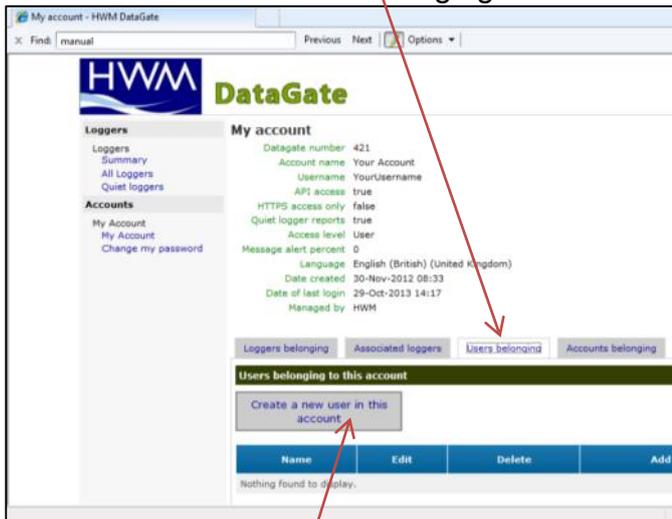


and click <<Create a new user in this account>>

3. Enter the new user name in the appropriate boxes

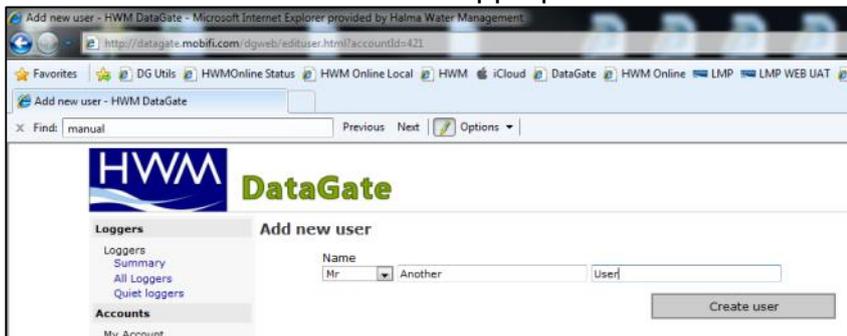


and click <<Create user>>

- Now click <<add>> in the “Add alarm” column

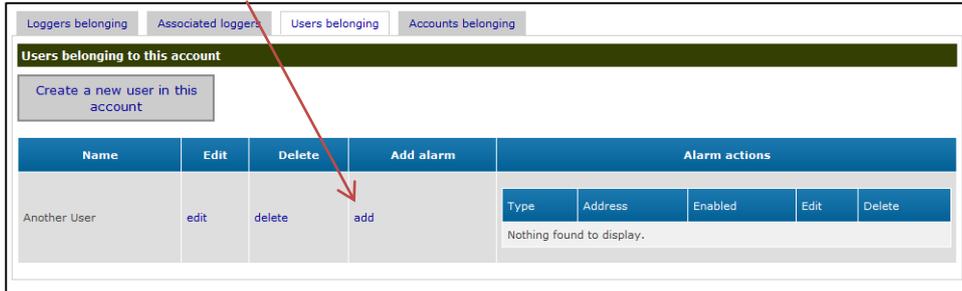


- Choose the “Type” of alarm from the dropdown – SMS or EMAIL

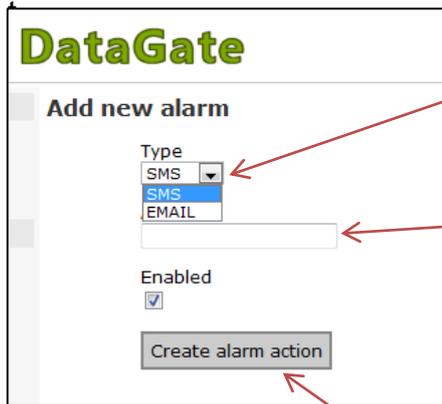

then enter the SMS phone number or the e-mail address in the “Address” box.

and click the <<Create alarm action>> button.

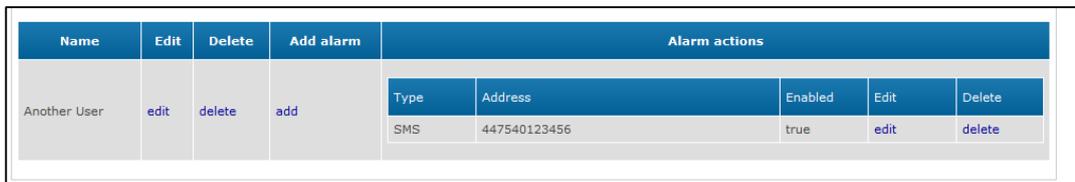

- You can add additional alarms for each user by repeating step 4 & 5 and additional users by repeating steps 2 - 5.

Setting up channel settings

The PermaNet+ requires its channel information to be routed to Almos, which requires matching channels to be configured on DataGate™. This step is usually handled for you by HWM, however should you wish to create a new DataGate™ entry the details are as below:-

1. Select your logger (see page 25) and click the <<Channels>> tab

2. Click <<Add new channel>> once for each channel you wish to add (you will need 3 for Almos™), then click <<Edit logger channels>>

3. Enter the details for the channel you wish to configure

From the drop down, choose your channel type.

Set the Calibration Multiplier to 1.0 for the Leak, Noise & Spread Channels.

Click <<Update logger channels>> to store the new names.

Note the above step will usually have been done for you.

Any further information regarding DataGate™ can be obtained from HWM support or your account manager.

Using HWMonline™

HWMonline™ is a web viewing and management package for viewing the data for your fleet of loggers.

HWMonline™ uses the data stored in the DataGate™ data warehouse to display charts for the data recorded by the loggers and other useful information like the location of the loggers.

If you have HWMonline™ as part of your package, you will use the same username and password that was provided to you by your HWM account manager.

Viewing your data

1. Open a new web browser window and navigate to www.hwmonline.com



You will be asked to enter your Username and Password details.

2. Once logged in successfully, you will see the main window below

Logger selection dropdown

Time period to view

Search for a logger
(Click the spyglass to execute the search)

3. Chose the logger you wish to view and the appropriate period & units and click <<SUBMIT>>
HWMonline will then retrieve your data from DataGate™ and display it on the page.



Note: If your logger has not been able to communicate with DataGate™ then the message “No Data Has Been Received For This Location.” will appear. Investigate the cause of the communication issue or contact HWM support for assistance.

4. The page below shows a typical result of a site query: -

Logged in as AndyEarp. [Log out.](#)

Logger: PermaNet (VFNL) [Fleet Summary...](#) [Alarms...](#)

Period: Custom
 start: 08/11/2013 07:00
 end: 08/11/2013 16:45

Press. Units: Auto
 Flow Units: Auto
 Interval: Auto

[Show Graph](#)

PermaNet (VFNL) Phone: 204043726254345 Site ID: VFNL00259 From: 08Nov2013 07:00 To: 08Nov2013 16:15

Details of the logger including last call in time in GMT

09:30 08Nov2013 09:30
 C4 Temperature (°C): 17.8

Floating the mouse over points on the graph gives precise detail in GMT

Graph of the readings recorded by the logger, one trace per channel.

Data Statistics

Key statistics derived from the graph for each channel

Logger Channel	Max.	Min.	Volume (Average)	Meter Read
C1 Leak	0	0	(0)	-
C2 Noise	4	4	(4)	-
C3 Spread	7	7	(7)	-
C4 Temperature (°C)	21.8	16.1	(18.724)	-

Logger current health information in LOCAL time

Battery 6.9V,CSQ: 9,Type Unilog 1.72,Last Restart 08Nov2013 15:00,SampleRate 5m,Last Call In 08Nov2013 16:13(UDP) (181 today).98 Call Ins Total.

[Save as TXT...](#) [Save as CSV...](#) [Export Summary...](#) [Save as SBS...](#) [Edit Logger...](#) [Printable...](#)

Options to export data in various formats of offline analysis

Exact location (From Datagate).

Map showing location of logger (if recorded on DataGate™) and position of Cell Tower providing coverage.

Latitude & Longitude GPS location of the logger (if available) for entry into Satellite Navigation devices.

Website details including last update in LOCAL time.

(51.543256,-2.5678)(D=0.444Mi)

Web Server 2.13 HWM Nov 6 2013 14:05:22. Data updated at 08Nov2013 16:39.



Note: The resolution of the graph reduces the more data you display. If you wish to zoom into an area of interest, use the "Custom" time Period and enter the precise range you wish to view.

Viewing information about your logger fleet

HWMonline can also be used as a fleet management tool.

1. From the Home screen click the “[Fleet Summary...](#)” link.
2. The summary screen below appears:-

Details regarding your loggers

#	Type	Serial	Address	Battery SSO	Start Time	Channels	Last Call In
1	Multilog LX 1.30	****	HWM_SITE_DEMO	7.1V 13	-	1Pr0(0.1) 2Pr20.2(0.1) 4Pr22.6(0.1) 5Pr0(0.1) 6Pr0(0.1)	-(0)
2	Multilog SMS 2.29	****	Demo_2	0.0V 0	-	1F0.048(1) 1F0.319(1)	17Oct2012 07:06 (0/SMS)
3	RDL32LF/1100 2.29	****	Demo_3	6.6V 14	25Mar2011 15:30	1F0.048(1) 2Pr0(0.1) 3F0.332(1)	04Jan2013 15:02 (2/FTP)
4	Multilog LX 3.14	****	Demo_4	11.6V 22	12Nov2012 00:30	1F1.854(1) 2Pr0(0.1)	04Jan2013 16:08 (65/15m/UDP)

Options for creating a custom report

3. From this screen you can either choose a logger to view or you can create a bespoke report containing details of your whole fleet of loggers.

Tick the appropriate boxes in the “Generate Fleet Report” area and then click the <<SUBMIT>> button. Depending on how big your fleet is, this may take a few minutes to create. You can then choose to save the report file or open it immediately in MS Excel.

Experiment with the settings until you find a format that you like, then tick the <<Save Defaults>> box so HWMonline™ will remember the style for the next time.

A note about security settings

HWMonline is hosted as an https:// site. If you do not see the maps on your browser, check your internet security options and add HWMonline as a trusted site:-

Select “Tools”, “Internet options” and “Security”. Click “Trusted sites”, then the <<Sites>> button. Click <<Add>> to add HWMonline as a trusted site, then <<Close>> & <<OK>>. You may need to restart your browser.

Using Almos

The Almos website is used to view the logged noise data from installed HWM PermaNet+ product.

The website contains features for viewing the logger fleet either in map or list form, producing reports and also setting baseline noise levels. A prior basic knowledge of the operating principles of the PermaNet+ product is assumed.

Logging in

- a. At the Almos web site (<http://almos.hwmonline.com/index.asp>) Enter your Almos Login: xxxxxxxx and click Log In.




- b. Enter Username and Password



Map View

The user can view logger position and status in map mode with zoom function. This is based on Google Maps with the same zoom and navigation controls. Click <<Help>> for an explanation of the symbols

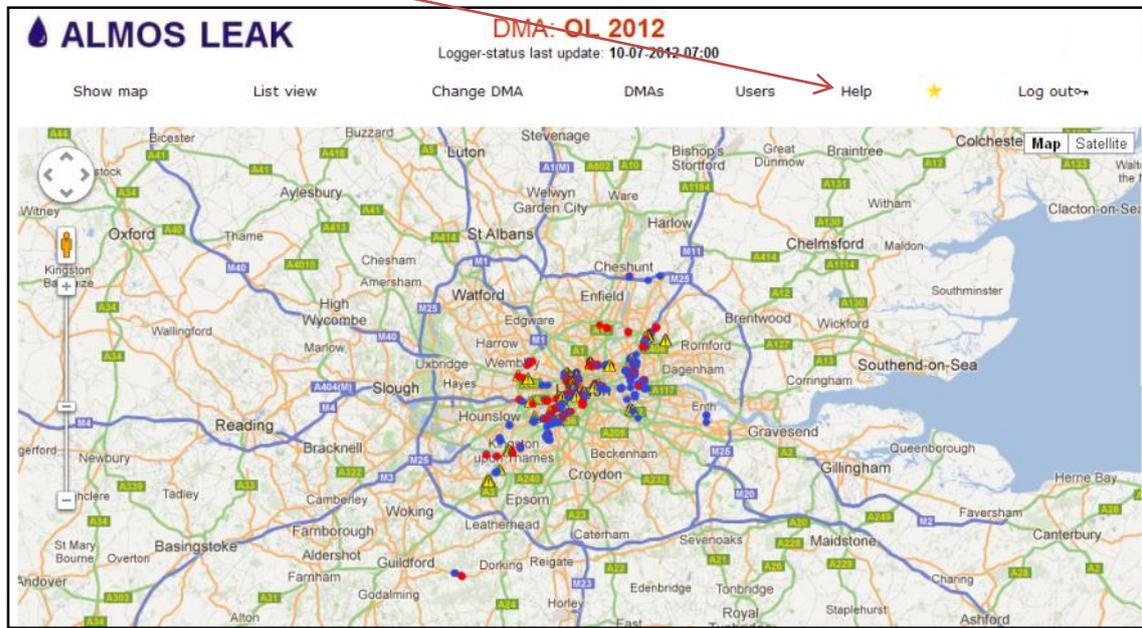

Indications: ● No leak (Blue) ● No leak (Red) ⚠ No data (Yellow)
 Note: You may need to switch on IE compatibility mode to see the indicators

- a. Information about a particular logger can be viewed by clicking on a logger location. The logger status can be set, the history viewed and details about the location changed.



- b. To view further data about the logger and set the baseline noise level, click on <<Edit>>. The following screen will be shown.

ALMOS LEAK
DMA: OL 2012
Logger-status last update: 15-07-2012 19:00

Show map List view Change DMA DMAs Users Help ★ Log out->

Add/edit logger [www.almosleak.com](#) -> [DMAs](#) -> [Zoom](#) -> [Zoom](#)

Logger no: 2012031318
Logger type: Permalog
Logger mode: Normal
Address: BRAMLEY ROAD
Valve No:
Repeater location:
Repeater serialno:
DMA: OL 2012
Last note: LX GPRS
Internal status:
Longitude: -0.217602998 Zero Level summer: 0
Latitude: 51.516178131 Zero Level winter: 0
Image Url:

- c. The baseline levels for summer and winter can be entered here.

-0.217602998 Zero Level summer: 10
51.516178131 Zero Level winter: 10

System 14-06-2012 15:52
Save Cancel

NB. The status of the device is set thus.

The spread value is subtracted from the leak value.

The summer or winter baseline value is subtracted from this value.

If the resulting value is greater than zero but less than 15, the status is 'possible leak'.

If the resulting value is greater than 15, the status is 'leak'.

Therefore if the normal level is 20 and the normal spread is 5, the summer value should be set to 15. The logger can be made sensitive by using higher values of summer and winter offset, for instance if occasional higher values are seen.

List View

- d. The user can view data in a table (list) view. The table can be set to display all, only those in leak, only those with missing data or only leak or missing data. The search function can be used to find a single logger of interest.

ALMOS LEAK DMA: **OL 2012**
 Logger-status last update: 20-07-2012 06:44

Show map List view Change DMA DMAs Users Help ★ Log out→

List view [Print](#) [CSV](#) www.almosleak.com -> List view

Search text: Filter: All

Logger no	Address	Status	Battery	Level	Spread	Signal	Last received	Last note
2012030997	PARK LANE	-	-	5	5	21	20-07-2012 06:30	MultilogLXS 3.19
2012030998	PORTMAN SQ	-	-	8	23	14	20-07-2012 06:30	MultilogLXS 3.19
2012030999	DUNRAVEN ST	-	-	24	8	14	20-07-2012 06:30	Leak invest 09/0 ...
2012031000	PARK LANE	-	-	21	15	8	20-07-2012 06:30	MultilogLXS 3.19
2012031002	Redcliffe Rd	Leak	-	25	6	11	20-07-2012 06:30	Leak invest Ongo ...
2012031003	Seymour Walk	-	-	16	5	8	20-07-2012 06:30	Leak Repaired 09 ...
2012031004	Seymour Walk	-	-	23	4	5	20-07-2012 06:30	Location Issued ...
2012031005	Fulham Rd	-	-	25	10	20	27-06-2012 06:30	LX GPRS
2012031006	Fulham Rd	-	-	4	15	5	20-07-2012 06:30	LX GPRS
2012031007	55945 6 of 20 Vodafone	-	-	8	11	5	06-07-2012 06:30	LX GPRS
2012031008	Fulham Rd	-	-	19	25	21	20-07-2012 06:30	LX GPRS
2012031009	Fulham Rd	-	-	4	13	4	20-07-2012 06:30	LX GPRS
2012031010	Holloway Road 1	-	-	24	20	4	20-07-2012 06:30	LX GPRS
2012031011	Holloway Road 3	Leak	-	39	6	17	20-07-2012 06:30	Burst Main locat ...

- e. History tab enables the user to view the level and spread of each logger over the period it has been communicating.

ALMOS LEAK DMA: **OL 2012**
 Logger-status last update: 10-07-2012 07:00

Show map List view Change DMA DMAs Users Help ★ Log out→

List view [Print](#) [CSV](#) www.almosleak.com -> List view

Search text: Filter: All

Logger no	Address	Status	Battery	Level	Spread	Signal	Last received	Last note
2012030997	PARK LANE	-	-	5	5	0	10-07-2012 06:30	MultilogLXS 3.19
2012030998	PORTMAN SQ	-	-	7	22	0	10-07-2012 06:30	MultilogLXS 3.19
2012030999	DUNRAVEN ST	-	-	26	11	0	10-07-2012 06:30	MultilogLXS 3.19
2012031000	PARK LANE	-	-	19	16	0	10-07-2012 06:30	MultilogLXS 3.19
2012031002	Redcliffe Rd	-	-	29	12	0	10-07-2012 06:30	LX GPRS
2012031003	Seymour Walk	-	-	15	4	0	10-07-2012 06:30	LX GPRS
2012031004	Seymour Walk	-	-	24	4	0	07-07-2012 06:30	LX GPRS
2012031005	Fulham Rd	-	-	25	10	0	27-06-2012 06:30	LX GPRS
2012031006	Fulham Rd	-	-	4	13	0	10-07-2012 06:30	LX GPRS
2012031007	Fulham Rd	-	-	8	11	0	06-07-2012 06:30	LX GPRS
2012031008	Fulham Rd	-	-	15	23	0	10-07-2012 06:30	LX GPRS
2012031009	Fulham Rd	-	-	4	9	0	10-07-2012 06:30	LX GPRS
2012031010	Holloway Road 1	-	-	21	19	0	10-07-2012 06:30	LX GPRS
2012031011	Holloway Road 3	-	-	41	20	0	10-07-2012 06:30	LX GPRS

Loggerno: 2012030997

Date	Level	Spread	Leak
10-07-2012	5	5	-
09-07-2012	5	4	-
08-07-2012	6	5	-
07-07-2012	6	5	-
06-07-2012	5	5	-
05-07-2012	6	7	-
04-07-2012	20	9	-
03-07-2012	17	14	-
02-07-2012	18	12	-
01-07-2012	23	12	-
30-06-2012	25	10	-
29-06-2012	19	15	-

f. Edit tab enables the user to edit logger details from the list view.

ALMOS LEAK DMA: OL 2012
 Logger-status last update: 20-07-2012 06:44

Show map List view Change DMA DMAs Users Help ★ Log out→

List view [Print](#) [CSV](#) www.almosleak.com -> List view

Search text: Filter: All

Logger no	Address	Status	Battery	Level	Spread	Signal	Last received	Last note	
2012030997	PARK LANE	-	-	5	5	21	20-07-2012 06:30	MultilogLXS 3.19	  
2012030998	PORTMAN SQ	-	-	8	23	14	20-07-2012 06:30	MultilogLXS 3.19	  
2012030999	DUNRAVEN ST	-	-	24	8	14	20-07-2012 06:30	Leak invest 09/0 ...	  
2012031000	PARK LANE	-	-	21	15	8	20-07-2012 06:30	MultilogLXS 3.19	  
2012031002	Redcliffe Rd	Leak	-	25	6	11	20-07-2012 06:30	Leak invest Ongo ...	  
2012031003	Seymour Walk	-	-	16	5	8	20-07-2012 06:30	Leak Repaired 09 ...	  
2012031004	Seymour Walk	-	-	23	4	5	20-07-2012 06:30	Location Issued ...	  
2012031005	Fulham Rd	-	-	25	10	20	27-06-2012 06:30	LX GPRS	  
2012031006	Fulham Rd	-	-	4	15	5	20-07-2012 06:30	LX GPRS	  
2012031007	55945 6 of 20 Vodafone	-	-	8	11	5	06-07-2012 06:30	LX GPRS	  
2012031008	Fulham Rd	-	-	19	25	21	20-07-2012 06:30	LX GPRS	  
2012031009	Fulham Rd	-	-	4	13	4	20-07-2012 06:30	LX GPRS	  
2012031010	Holloway Road 1	-	-	24	20	4	20-07-2012 06:30	LX GPRS	  
2012031011	Holloway Road 3	Leak	-	39	6	17	20-07-2012 06:30	Burst Main locat ...	  

Missing Data: Level & Spread

Select Level, this will organise the data in numerical order.
Zero data equals fault with Leak Noise Sensor not communicating with datalogger. Report to HWM to investigate.

ALMOS LEAK DMA: OL 2012
Logger-status last update: 20-07-2012 06:44

Show map List view Change DMA DMAs Users Help ★ Log out→

List view [Print](#) [CSV](#) [www.almosleak.com](#) -> List view

Search text: Filter: All

Logger no	Address	Status	Battery	Level	Spread	Signal	Last received	Last note
2012031017	Canonbury Road	-	-	0	6	17	20-07-2012 06:30	Location Issued ...
2012031059	55945 20 of 70 Vodafone	-	-	0	21	9	20-07-2012 06:30	MultilogLXS V3.19F
2012031084	FREEMASONS RD 2	-	-	0	20	21	20-07-2012 06:30	LX GPRS
2012031101	MERE CLOSE	-	-	0	6	16	20-07-2012 06:30	LX GPRS
2012031119	NEW KINGS RD	-	-	0	0	7	20-07-2012 06:30	MultilogLXS V3.19F
2012031128	WAVERLY RD	-	-	0	14	7	20-07-2012 06:30	MultilogLXS V3.19F
2012031133	PRIORY LANE	-	-	0	0	6	10-05-2012 06:30	LX GPRS
2012031135	55945 26 of 100 Vodafone	-	-	0	0	13	24-05-2012 06:30	LX GPRS
2012031136	55945 27 of 100 Vodafone	-	-	0	0	14	23-05-2012 06:30	LX GPRS
2012031138	55945 29 of 100 Vodafone	-	-	0	0	12	24-05-2012 06:30	LX GPRS
2012031139	55945 30 of 100 Vodafone	-	-	0	0	13	24-05-2012 06:30	LX GPRS
2012031143	CHIGWELL RD	-	-	0	0	5	20-07-2012 06:30	LX GPRS
2012031156	CROMWELL RD	-	-	0	0	13	20-07-2012 06:30	LX GPRS
2012031157	PADDINGTON STREET	Leak	-	0	0	30	20-07-2012 06:30	Leak invest Ongo ...

Missing Data: Last Received

Selecting last received will organise the date of last call in date and time of the logger.

ALMOS LEAK DMA: OL 2012
Logger-status last update: 20-07-2012 06:44

Show map List view Change DMA DMAs Users Help ★ Log out→

List view [Print](#) [CSV](#) [www.almosleak.com](#) -> List view

Search text: Filter: All

Logger no	Address	Status	Battery	Level	Spread	Signal	Last received	Last note
2012033114	UPPER THAMES ST	-	-	0	0	13	-	MultilogLXS 3.19
2012031133	PRIORY LANE	-	-	0	0	6	10-05-2012 06:30	LX GPRS
2012031136	55945 27 of 100 Vodafone	-	-	0	0	14	23-05-2012 06:30	LX GPRS
2012031135	55945 26 of 100 Vodafone	-	-	0	0	13	24-05-2012 06:30	LX GPRS
2012031138	55945 29 of 100 Vodafone	-	-	0	0	12	24-05-2012 06:30	LX GPRS
2012031139	55945 30 of 100 Vodafone	-	-	0	0	13	24-05-2012 06:30	LX GPRS
2012031711	55945 7 of 100 Vodafone	-	-	0	0	3	25-05-2012 06:30	MultilogLXS V3.19F
2012031259	BRYANSTON ST	-	-	0	0	5	30-05-2012 18:45	LX GPRS
2012031736	55945 32 of 100 Vodafone	-	-	0	0	5	31-05-2012 06:30	MultilogLXS V3.19F
2012031710	55945 6 of 100 Vodafone	-	-	8	16	4	02-06-2012 06:30	MultilogLXS V3.19F
2012031186	MASONS AVENUE	-	-	0	0	11	07-06-2012 06:30	LX GPRS
2012031130	WELLINGTON PLACE	-	-	6	11	0	20-06-2012 06:30	MultilogLXS V3.19F
2012031161	ROBERT ADAM ST	Leak	-	42	4	6	26-06-2012 06:30	Leak invest Ongo ...
2012031005	Fulham Rd	-	-	25	10	20	27-06-2012 06:30	LX GPRS

Signal level

ALMOS LEAK DMA: OL 2012
Logger-status last update: 20.07.2012 06:44

Show map List view Change DMA DMAs Users Help ★ Log out→

List view [Print](#) [CSV](#) www.almosleak.com -> List view

Search text: Filter: All

Logger no	Address	Status	Battery	Level	Spread	Signal	Last received	Last note
2012033114	UPPER THAMES ST	-	-	0	0	13	-	MultilogLXS 3.19
2012031133	PRIORY LANE	-	-	0	0	6	10-05-2012 06:30	LX GPRS
2012031136	55945 27 of 100 Vodafone	-	-	0	0	14	23-05-2012 06:30	LX GPRS
2012031135	55945 26 of 100 Vodafone	-	-	0	0	13	24-05-2012 06:30	LX GPRS
2012031138	55945 29 of 100 Vodafone	-	-	0	0	12	24-05-2012 06:30	LX GPRS
2012031139	55945 30 of 100 Vodafone	-	-	0	0	13	24-05-2012 06:30	LX GPRS
2012031711	55945 7 of 100 Vodafone	-	-	0	0	3	25-05-2012 06:30	MultilogLXS V3.19F
2012031259	BRYANSTON ST	-	-	0	0	5	30-05-2012 18:45	LX GPRS
2012031736	55945 32 of 100 Vodafone	-	-	0	0	5	31-05-2012 06:30	MultilogLXS V3.19F
2012031710	55945 6 of 100 Vodafone	-	-	8	16	4	02-06-2012 06:30	MultilogLXS V3.19F
2012031186	MASONS AVENUE	-	-	0	0	11	07-06-2012 06:30	LX GPRS
2012031130	WELLINGTON PLACE	-	-	6	11	0	20-06-2012 06:30	MultilogLXS V3.19F
2012031161	ROBERT ADAM ST	Leak	-	42	4	6	26-06-2012 06:30	Leak invest Ongo ...
2012031005	Fulham Rd	-	-	25	10	20	27-06-2012 06:30	LX GPRS

0-7 Insufficient, the device may be able to register with network but will not be able to send or receive data.

7-14 Marginal, depending upon the ambient conditions data transmission may be possible

Investigation is required if not called in for one day, see page 13 for details on possible causes.

Note: This is only a guide many loggers can still call in between 0-7 signal level. Check last call in time and history to determine course of action.

Data can be printed or exported as a CSV file which can be read by a spreadsheet program such as Excel.

ALMOS LEAK DMA: OL 2012
 Logger-status last update: 10-07-2012 07:00

Show map List view Change DMA DMAs Users Help ★ Log out

List view [Print](#) [CSV](#) www.almosleak.com -> List view

Search text: Filter: All


Logger no	Address	Status	Battery	Level	Spread	Signal	Last received	Last note
2012030997	PARK LANE	-	-	5	5	0	10-07-2012 06:30	MultilogLXS 3.19
2012030998	PORTMAN SQ	-	-	7	22	0	10-07-2012 06:30	MultilogLXS 3.19
2012030999	DUNRAVEN ST	-	-	26	11	0	10-07-2012 06:30	MultilogLXS 3.19
2012031000	PARK LANE	-	-	19	16	0	10-07-2012 06:30	MultilogLXS 3.19
2012031002	Redcliffe Rd	Leak	-	29	12	0	10-07-2012 06:30	LX GPRS
2012031003	Seymour Walk	-	-	15	4	0	10-07-2012 06:30	LX GPRS
2012031004	Seymour Walk	Leak	-	24	4	0	07-07-2012 06:30	LX GPRS
2012031005	Fulham Rd	-	-	25	10	0	27-06-2012 06:30	LX GPRS
2012031006	Fulham Rd	-	-	4	13	0	10-07-2012 06:30	LX GPRS
2012031007	Fulham Rd	-	-	8	11	0	06-07-2012 06:30	LX GPRS
2012031008	Fulham Rd	-	-	15	23	0	10-07-2012 06:30	LX GPRS
2012031009	Fulham Rd	-	-	4	9	0	10-07-2012 06:30	LX GPRS
2012031010	Holloway Road 1	-	-	21	19	0	10-07-2012 06:30	LX GPRS
2012031011	Holloway Road 3	Leak	-	41	20	0	10-07-2012 06:30	LX GPRS

Using PermaNet+ for PC



Configuration for DataGate

When you run PermaNet+ for the first time you will be prompted to configure your connections:-

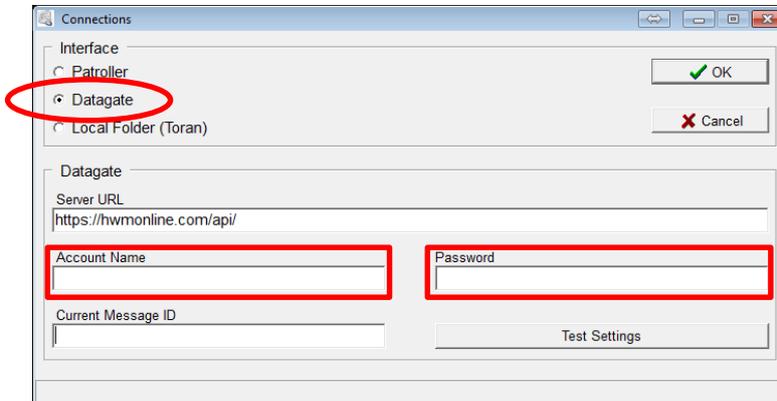

If it does not appear automatically, click the connections icon.




1. Choose DataGate as indicated above, then enter your Account Name and Password into the two boxes highlighted above.
2. Click <<Test Settings>> to confirm your connection to DataGate. At this point you may see a warning from your system regarding internet access. Authorise the connection request to allow data to be downloaded. If the connection is successful you will see notification:



Note the Current Message ID is populated automatically. If you wish to retrieve messages from earlier, reduce the size of the Message ID. Each day is roughly 1 million therefore reduce the count by the number of days you wish to go back. Do not press Test Settings again.

3. Once the data link is set up, you need to download the data from DataGate.
4. From the main menu, click the  Patrol button to start downloading data.
5. PermaNet+ will then download data from the loggers into the PC database.

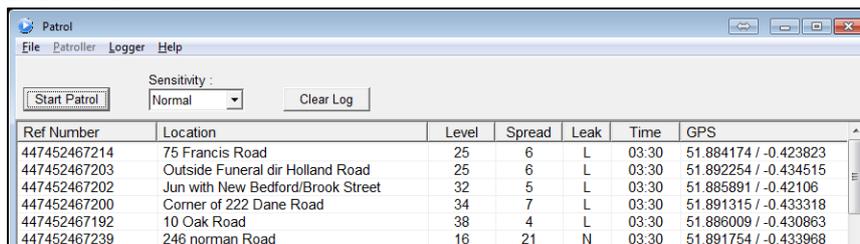


6. The patrol will stop automatically once all available data has been downloaded. Close the window when complete.

Creating your first DMA




DMA

1. From the main menu click Management
2. Next when prompted to create a new database

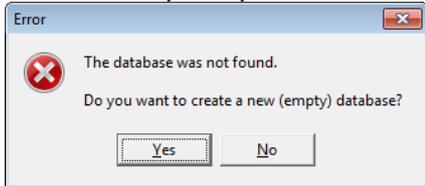


click <<Yes>> and then again when prompted to create a new DMA list, click <<Yes>>.

3. Click <<Import DMA>>

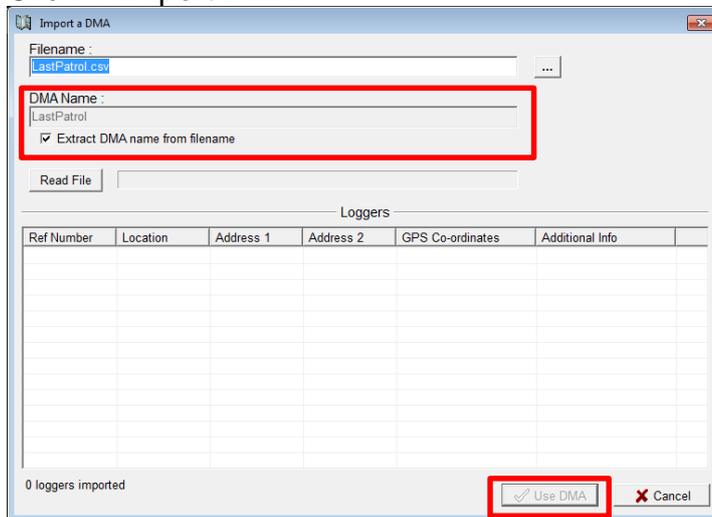

Clear the checkbox and enter a name for the DMA you wish to create.

4. Click the <<Read File>> button to import the list of loggers and click <<Use DMA>> to store the list.
5. You can now click <<Show Map>> to view the loggers in your DMA.

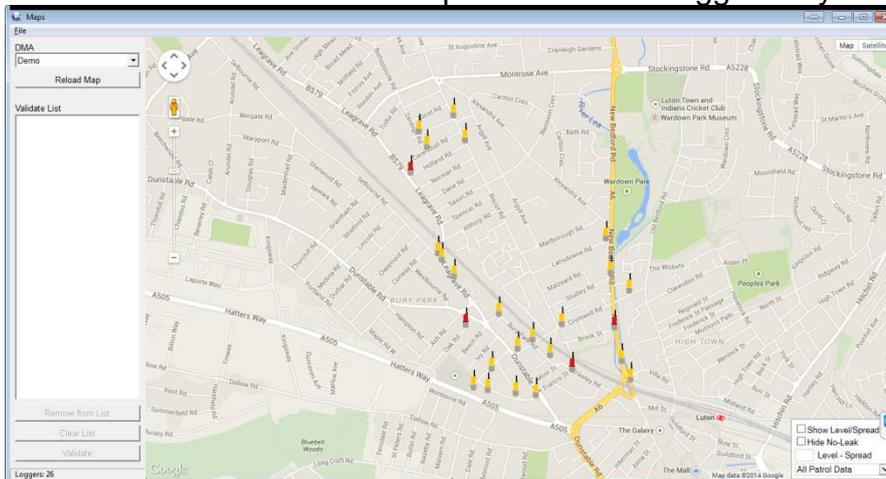


Additional settings

If you have upgraded from a previous edition of Palmer PC Patroller II, there are a few additional options that you may need to check/set.

1. From the **Setup** menu choose **Options...**
2. When prompted, enter the password. This is **admin**, if you haven't changed it from the default.
3. In the Functions Tab, ensure the following options are ticked:


Patrol	Aqualog
DMA Management	Connections
Deploy	Backup/Restore
Data Analysis	Maps
4. Under Other Options ensure Ref number format is set to 10041234

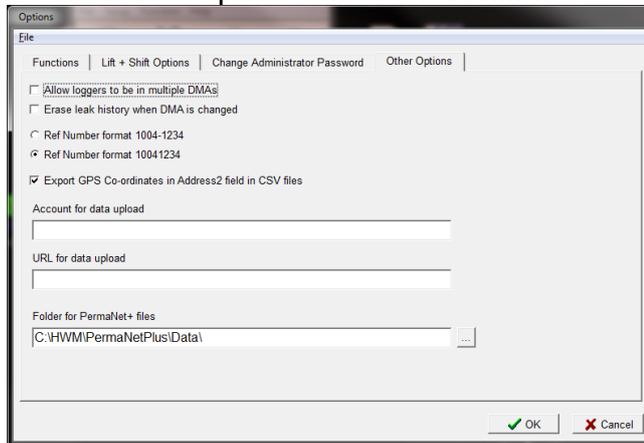

5. Click <<OK>> to store these settings

Map view

To view details about each site where a PermaNet+ logger is installed simply click on the site:

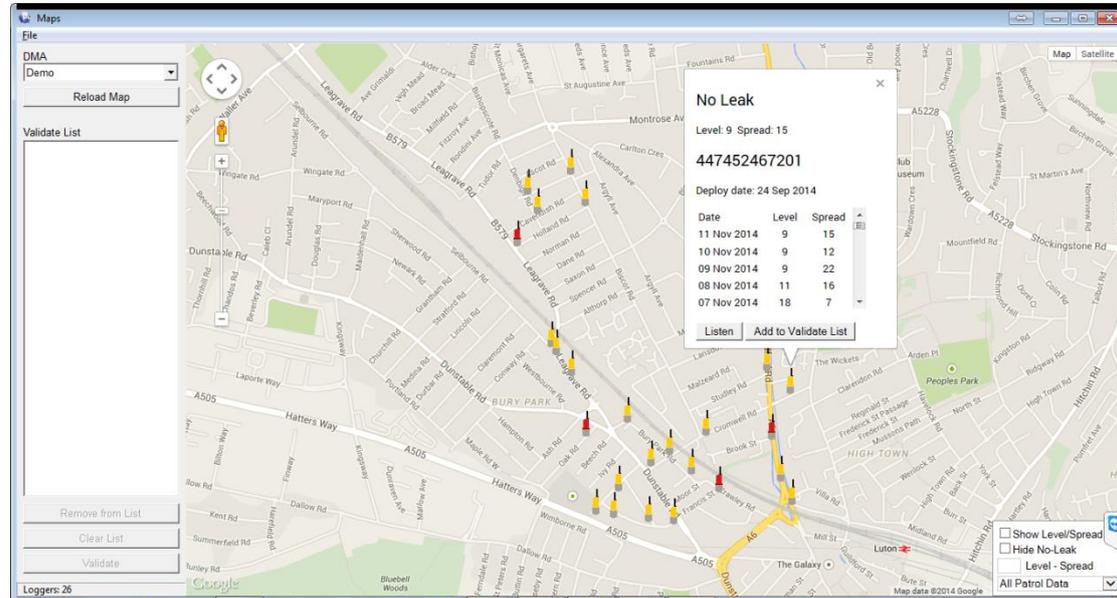

Sites coloured Yellow are not detecting a leak, Red sites are where a leak is suspected.

The PermaNet+ logger can automatically send a sound recording file to Datagate which is downloaded during the Patrol. When sound files are available, the two buttons appear.

To listen to the sound recording, click <<Listen>>.

Should you wish to schedule your own recordings, refer to the section on Aqualog / sound Recordings.


To perform secondary confirmation validation click <<Add to Validate List>> and then click the <<Validate>> button to launch the Leak Localisation & Correlation tool.

Sound recordings and Aqualogging



Aqualog /
Sound Rec

1. From the main menu click
2. The Aqualog / Sound Recording menu below appears

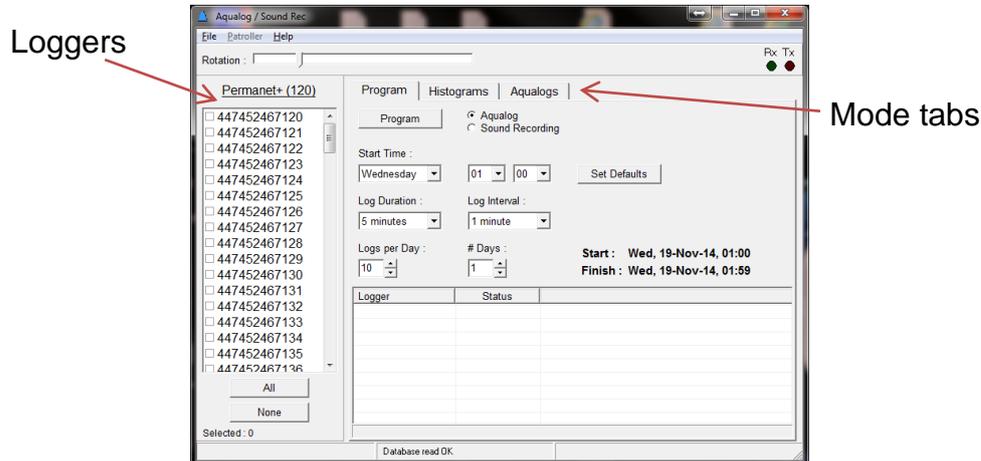


Scheduling Recordings

3. The first mode (Program) allows you to set loggers to make either an **Aqualog** recording or a **Sound Recording**. Note that care should be taken to decide if a recording is really necessary as each data transfer will use up some logger battery.
4. Choose the loggers you wish to command by ticking the check boxes on the left of the reference number.
5. Setup the recording parameters as required.
6. Click the <<Program>> button to send the commands to the loggers you chose. The loggers will pick up the commands the next time they call in, so be sure you allow sufficient time for the call in before setting the recording. i.e. If in the next 24 hours the logger is due to call in at Midnight and 5am, then if you choose 10pm today, the logger will not make a recording.

Viewing Daily Histograms

7. Click the **Histograms** tab

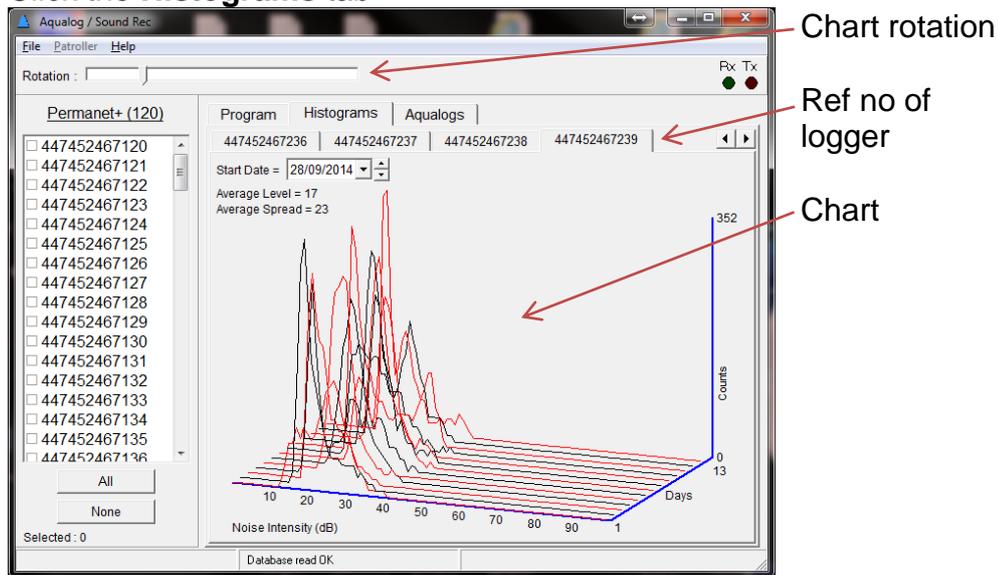


8. Choose the logger you wish to examine by clicking the appropriate tab. You can now quickly shift between loggers using the left & right cursor keys.

9. Use the **Rotation** tool to rotate the 3D chart to make it easier to view.

Viewing Aqualogs

10. Click the **Aqualog** tab

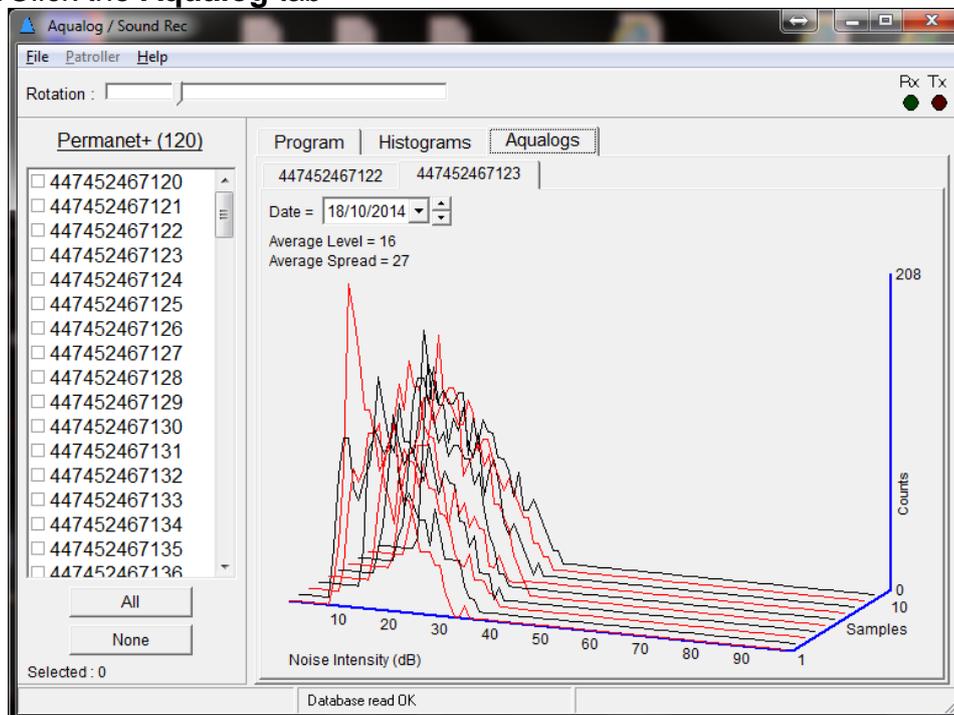


11. The more detailed, programmed Aqualogs can now be viewed in the same way as the histograms.


Leak Localisation and Correlation Tool

In addition to listening to the sounds recorded, you can use this tool to perform some rudimentary correlations to gain confidence that a leak is present.

1. Choose 2 loggers to test between. In the example below we will check between the 2 sites ringed to identify if the Leak suspected can be confirmed.

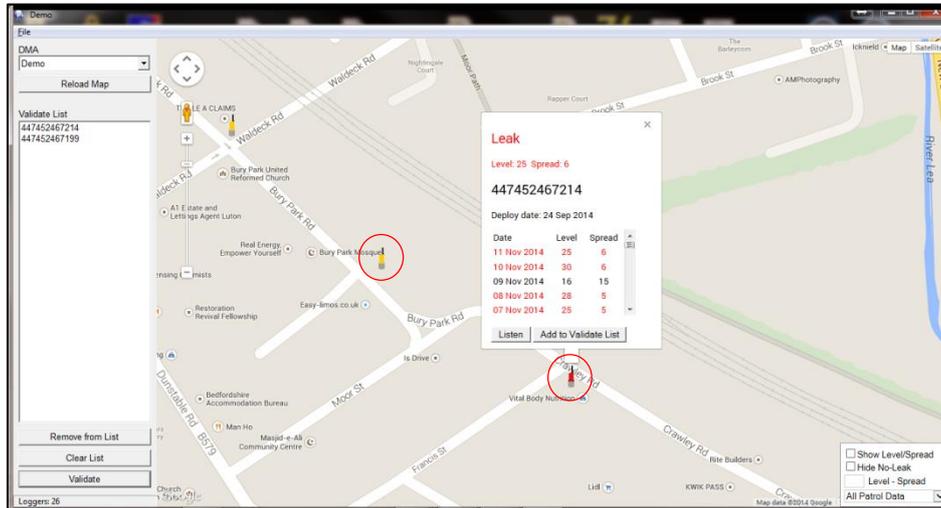

2. For both loggers, click <<Add to Validate List>>
3. Next click the <<Validate>> button
4. The PermaNet+LLC (Leak, Localisation & Correlation) tool will launch and perform a correlation on the sound files available.

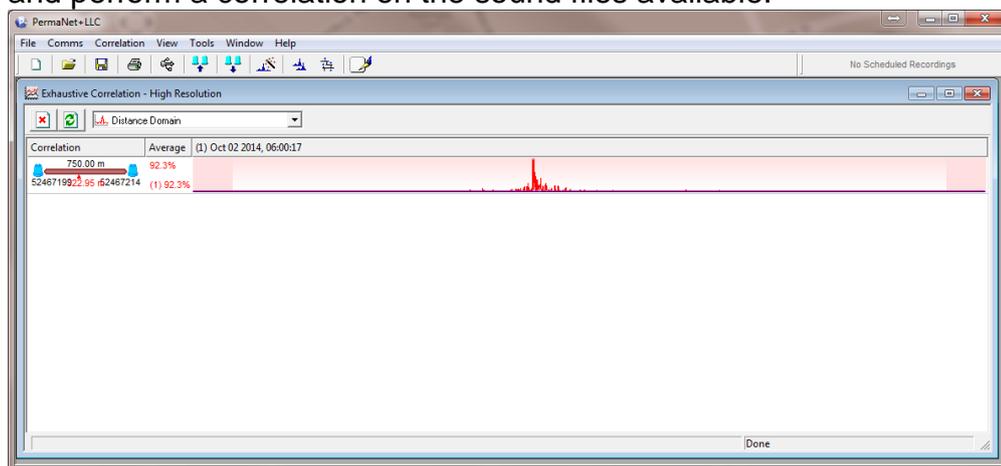

5. The Average indicates a confidence level for the correlation and clear the peak indicated on the graph confirms that a leak is detected with high confidence between the two loggers selected.



IMPORTANT: Whilst the PermaNet+ system is designed to assist the user with remote leak detection, local listening should always be performed before commencing site works.

Technical Specifications

Sensor Input Options	Serial	Leak Noise Sensor
Logger Features	Memory	Primary recording 2 million readings
	Alarms	Leak / No leak Signal received / Not received
	Logger ID	Up to 7 alphanumeric characters. Also readable factory set serial number in firmware.
	Clock	On board 24 hour real time clock with date facility
	Internal Cellular modem	GPRS to HWM DataGate or customer specific FTP server, multiple messages per day
		Quad band modem supplying 850/900/1800/1900MHz bands
	Dimensions	Logger without antenna = H 85mm x W 115mm x D 114mm Leak Noise Sensor = H 80mm x H 50mm
	Weight	Logger = 570g Leak Noise Sensor = 740g
	Operating Temp	-20 to +60°C (-5 to +140°F)
	Ingress protection	IP68 submersible
Power	Lithium Thionyl-Chloride cell operational for up to 5 years under standard operating conditions*, complete with low battery alarm	
<p><i>* Typical battery life expectancy is based upon operational setup and achieving network registration regularly and with ease. If GPRS-enabled network registration is unachievable, the logger will convert to SMS-only operation after 24 hours and will attempt to re-establish GPRS communication when possible. A signal strength test should be performed during installation.</i></p>		

Order Codes

PNT961/L0	PermaNet+ GPRS Data Logger with Leak Noise Sensor
-----------	---


Order Codes – Optional extras

CABA8585	USB programming cable
CABA8590	External battery pack connection cable
HOU9105	Wall mounting bracket
CABA4255	3m Tether Line for Leak Noise Sensor
AER8015	T-Bar antenna 0.5m
AER8020	I-Bar antenna 1.0m
AER8025	I-Bar antenna 3.0m
AER6000	High Gain antenna 2.5m
AER6001	High Gain antenna 5.0m
AER6003	High Gain antenna 8.0m
AER6002	High Gain antenna 10.0m
CABA8510	FME Aerial Extension 10.0m
CABA8510-1	FME Aerial Extension 8.0m
CABA8510-2	FME Aerial Extension 5.0m
CABA8510-3	FME Aerial Extension 2.0m

Appendix – Additional Information

Fitting your own SIM card

1. Remove the lid of the logger taking care not to damage the seal.

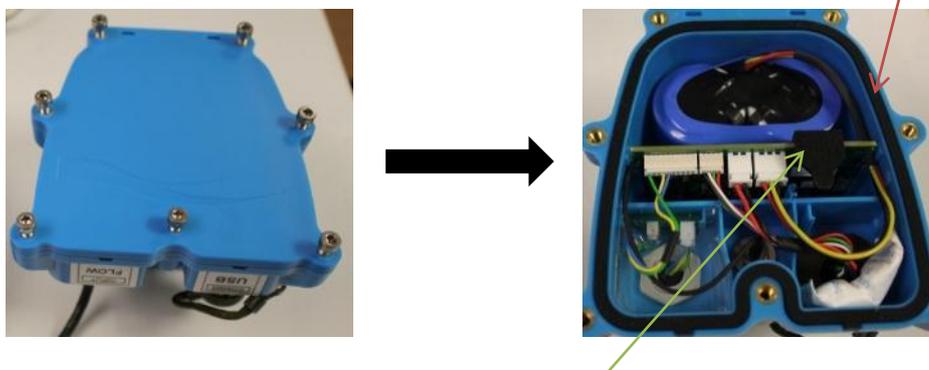

2. Remove the rubber SIM card protector



3. Insert your new SIM into the empty slot as shown above. Ensure the gold contacts face the board and the notch is to the left.
4. Replace the SIM protector and lid ensuring the screws are retightened to 1.2nm to ensure the logger remains water tight.
5. Proceed with programming the logger and ensure you enter the new SIM phone number into the software (step 2.i on page 8) including the '+' symbol and the international dialling code with no spaces. e.g. +4477xxxx.
This is an important step as the logger sends an SMS message to itself once a month to synchronise its clock. If the wrong phone number is entered, this can result in an international SMS message being sent.

HWM-Water Ltd
Ty Coch House
Llantarnam Park Way
Cwmbran
NP44 3AW
United Kingdom
+44 (0)1633 489479
www.HWM-water.com



MAN-138-0007-B Permanet+ Installation User Guide.Docx